


vehicle : 301		VIN: VF3DDNFPTGJ721797 / OPR : 14466	
domain	lighting - signalling	function	direction indicators / side repeaters / hazard warning lamps
component			

principle

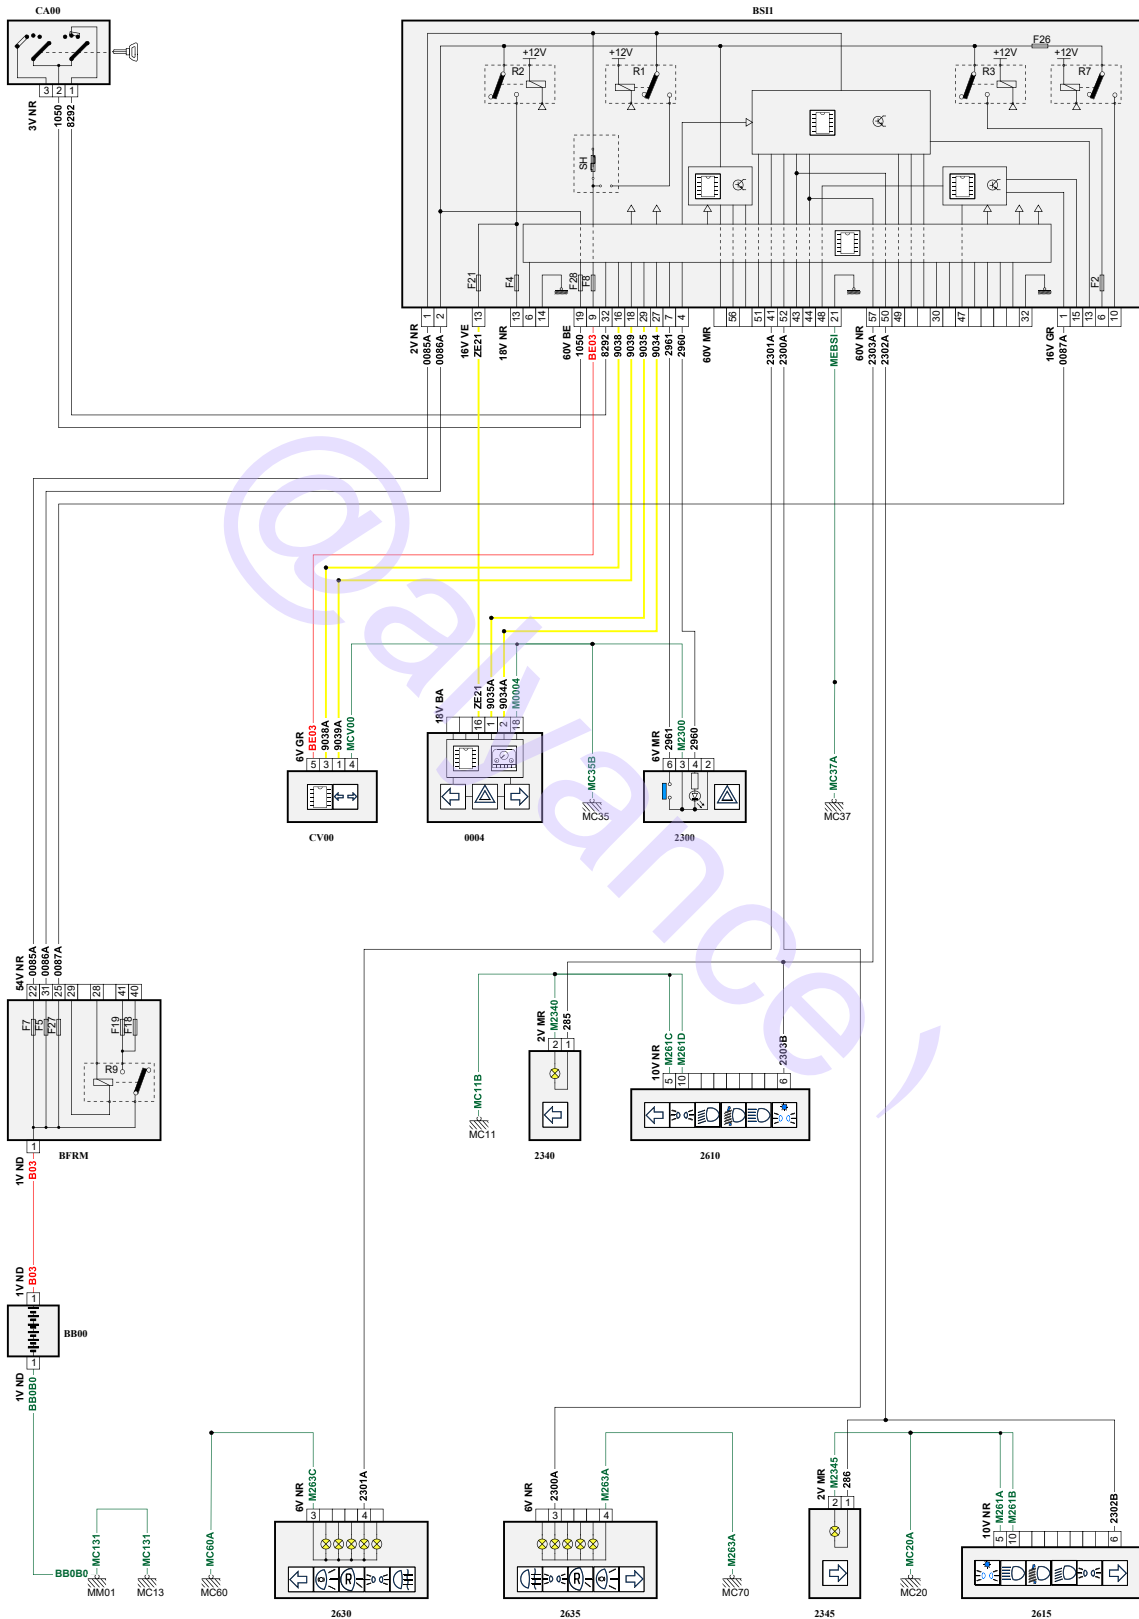

D3CZHHWR

item code	description	information
0004	null	/ instrument panel
2300	null	hazard warning switch
2340	null	left-hand side repeater flasher
2345	null	right-hand side repeater flasher
2610	null	left-hand headlamp
2615	null	right-hand headlamp
2630	null	rear left lamp on body
2635	null	rear right lamp on body
BB00	null	ancillaries battery
BFRM	null	engine fuse and relay box
BSI1	null	built-in systems interface
CA00	null	ignition switch
CV00	null	control under the steering wheel
E230A	null	crimp one information (or equipotential 230) wire
E230B	null	crimp one information (or equipotential 230) wire
E934	null	crimp one information (or equipotential 934) wire
E935	null	crimp one information (or equipotential 935) wire
E938	null	crimp one information (or equipotential 938) wire
E939	null	crimp one information (or equipotential 939) wire
EM11A	null	crimp earth (earth point number 11A)
EM20A	null	crimp earth (earth point number 20A)
EM35B	null	crimp earth (earth point number 35B)
EM37A	null	crimp earth (earth point number 37A)
EM60A	null	crimp earth (earth point number 60A)
MC11B	null	body earth point number 11B
MC13	null	body earth point number 13
MC20A	null	body earth point number 20A
MC35	null	body earth point number 35
MC37A	null	body earth point number 37A
MC60A	null	body earth point number 60
MC70A	null	body earth point number 70A
MM01	null	engine earth point number 01

[illegible]

ALYANCE:HAMID REZAI:TEL:۰۹۳۷۵۵۷۲۱۲۱

item code	description	information
0004	null	/ instrument panel
2300	null	hazard warning switch
2340	null	left-hand side repeater flasher
2345	null	right-hand side repeater flasher
2610	null	left-hand headlamp
2615	null	right-hand headlamp
2630	null	rear left lamp on body
2635	null	rear right lamp on body
BB00	null	ancillaries battery
BFRM	null	engine fuse and relay box
BSI1	null	built-in systems interface
CA00	null	ignition switch
CV00	null	control under the steering wheel
E230A	null	crimp one information (or equipotential 230) wire
E230B	null	crimp one information (or equipotential 230) wire
E934	null	crimp one information (or equipotential 934) wire
E935	null	crimp one information (or equipotential 935) wire
E938	null	crimp one information (or equipotential 938) wire
E939	null	crimp one information (or equipotential 939) wire
EM11A	null	crimp earth (earth point number 11A)
EM20A	null	crimp earth (earth point number 20A)
EM35B	null	crimp earth (earth point number 35B)
EM37A	null	crimp earth (earth point number 37A)
EM60A	null	crimp earth (earth point number 60A)
MC11B	null	body earth point number 11B
MC13	null	body earth point number 13
MC20A	null	body earth point number 20A
MC35	null	body earth point number 35
MC37A	null	body earth point number 37A
MC60A	null	body earth point number 60
MC70A	null	body earth point number 70A
MM01	null	engine earth point number 01