


|               |                                      |          |                  |
|---------------|--------------------------------------|----------|------------------|
| vehicle : 301 | VIN: VF3DDNFPTGJ721797 / OPR : 14466 |          |                  |
| domain        | driver information                   | function | door information |
| component     |                                      |          |                  |

principle

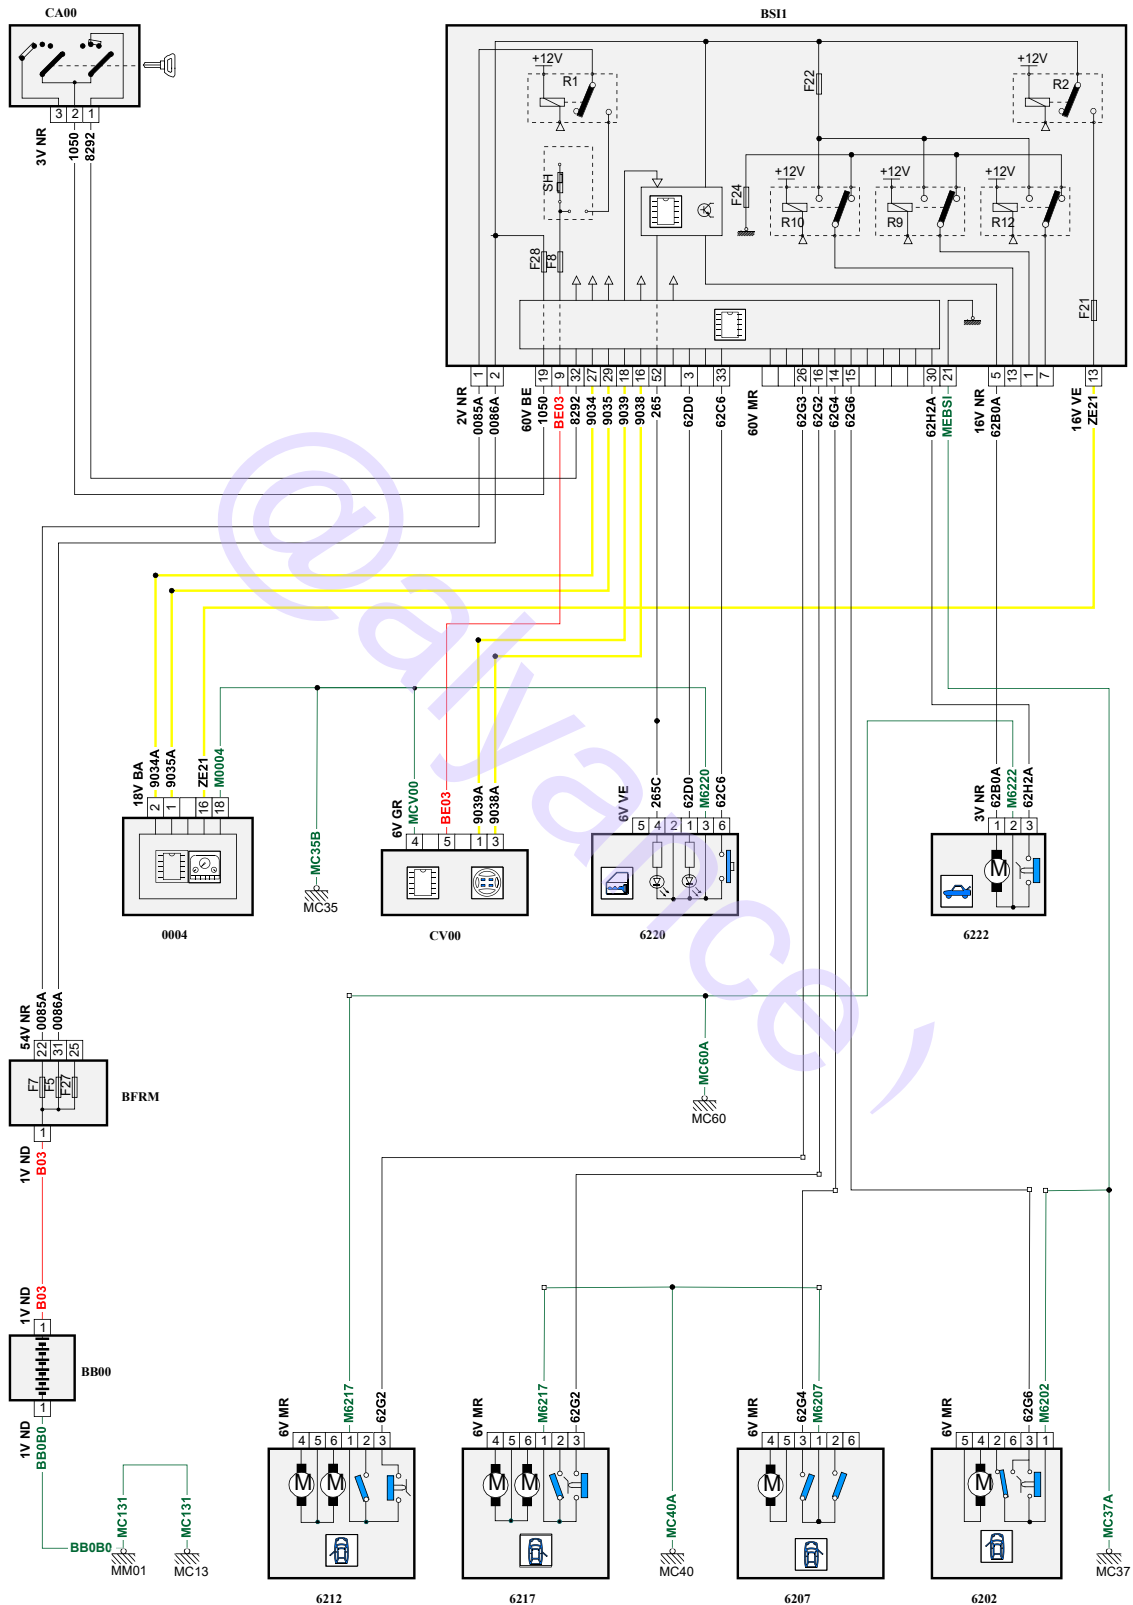

D3CZHJFR

| item code | description | information                                        |
|-----------|-------------|----------------------------------------------------|
| 0004      | null        | / instrument panel                                 |
| 6202      | null        | driver's side front door lock assembly             |
| 6207      | null        | front passenger side door lock assembly            |
| 6212      | null        | rear left door lock assembly                       |
| 6217      | null        | rear right door lock assembly                      |
| 6220      | null        | door locking switch                                |
| 6222      | null        | boot or tailgate lock assembly                     |
| BB00      | null        | ancillaries battery                                |
| BFRM      | null        | engine fuse and relay box                          |
| BSI1      | null        | built-in systems interface                         |
| CA00      | null        | ignition switch                                    |
| CV00      | null        | control under the steering wheel                   |
| E265A     | null        | crimp one information (or equipotential 265A) wire |
| E934      | null        | crimp one information (or equipotential 934) wire  |
| E935      | null        | crimp one information (or equipotential 935) wire  |
| E938      | null        | crimp one information (or equipotential 938) wire  |
| E939      | null        | crimp one information (or equipotential 939) wire  |
| EM35B     | null        | crimp earth (earth point number 35B)               |
| EM37A     | null        | crimp earth (earth point number 37A)               |
| EM40A     | null        | crimp earth (earth point number 40A)               |
| EM60A     | null        | crimp earth (earth point number 60A)               |
| MC13      | null        | body earth point number 13                         |
| MC35      | null        | body earth point number 35                         |
| MC37A     | null        | body earth point number 37A                        |
| MC40A     | null        | body earth point number 40                         |
| MC60A     | null        | body earth point number 60                         |
| MM01      | null        | engine earth point number 01                       |



| item code | description | information                                        |
|-----------|-------------|----------------------------------------------------|
| 0004      | null        | / instrument panel                                 |
| 6202      | null        | driver's side front door lock assembly             |
| 6207      | null        | front passenger side door lock assembly            |
| 6212      | null        | rear left door lock assembly                       |
| 6217      | null        | rear right door lock assembly                      |
| 6220      | null        | door locking switch                                |
| 6222      | null        | boot or tailgate lock assembly                     |
| BB00      | null        | ancillaries battery                                |
| BFRM      | null        | engine fuse and relay box                          |
| BSI1      | null        | built-in systems interface                         |
| CA00      | null        | ignition switch                                    |
| CV00      | null        | control under the steering wheel                   |
| E265A     | null        | crimp one information (or equipotential 265A) wire |
| E934      | null        | crimp one information (or equipotential 934) wire  |
| E935      | null        | crimp one information (or equipotential 935) wire  |
| E938      | null        | crimp one information (or equipotential 938) wire  |
| E939      | null        | crimp one information (or equipotential 939) wire  |
| EM35B     | null        | crimp earth (earth point number 35B)               |
| EM37A     | null        | crimp earth (earth point number 37A)               |
| EM40A     | null        | crimp earth (earth point number 40A)               |
| EM60A     | null        | crimp earth (earth point number 60A)               |
| MC13      | null        | body earth point number 13                         |
| MC35      | null        | body earth point number 35                         |
| MC37A     | null        | body earth point number 37A                        |
| MC40A     | null        | body earth point number 40                         |
| MC60A     | null        | body earth point number 60                         |
| MM01      | null        | engine earth point number 01                       |