



A/C System Power Supply, Grounding, Signal (Auto)

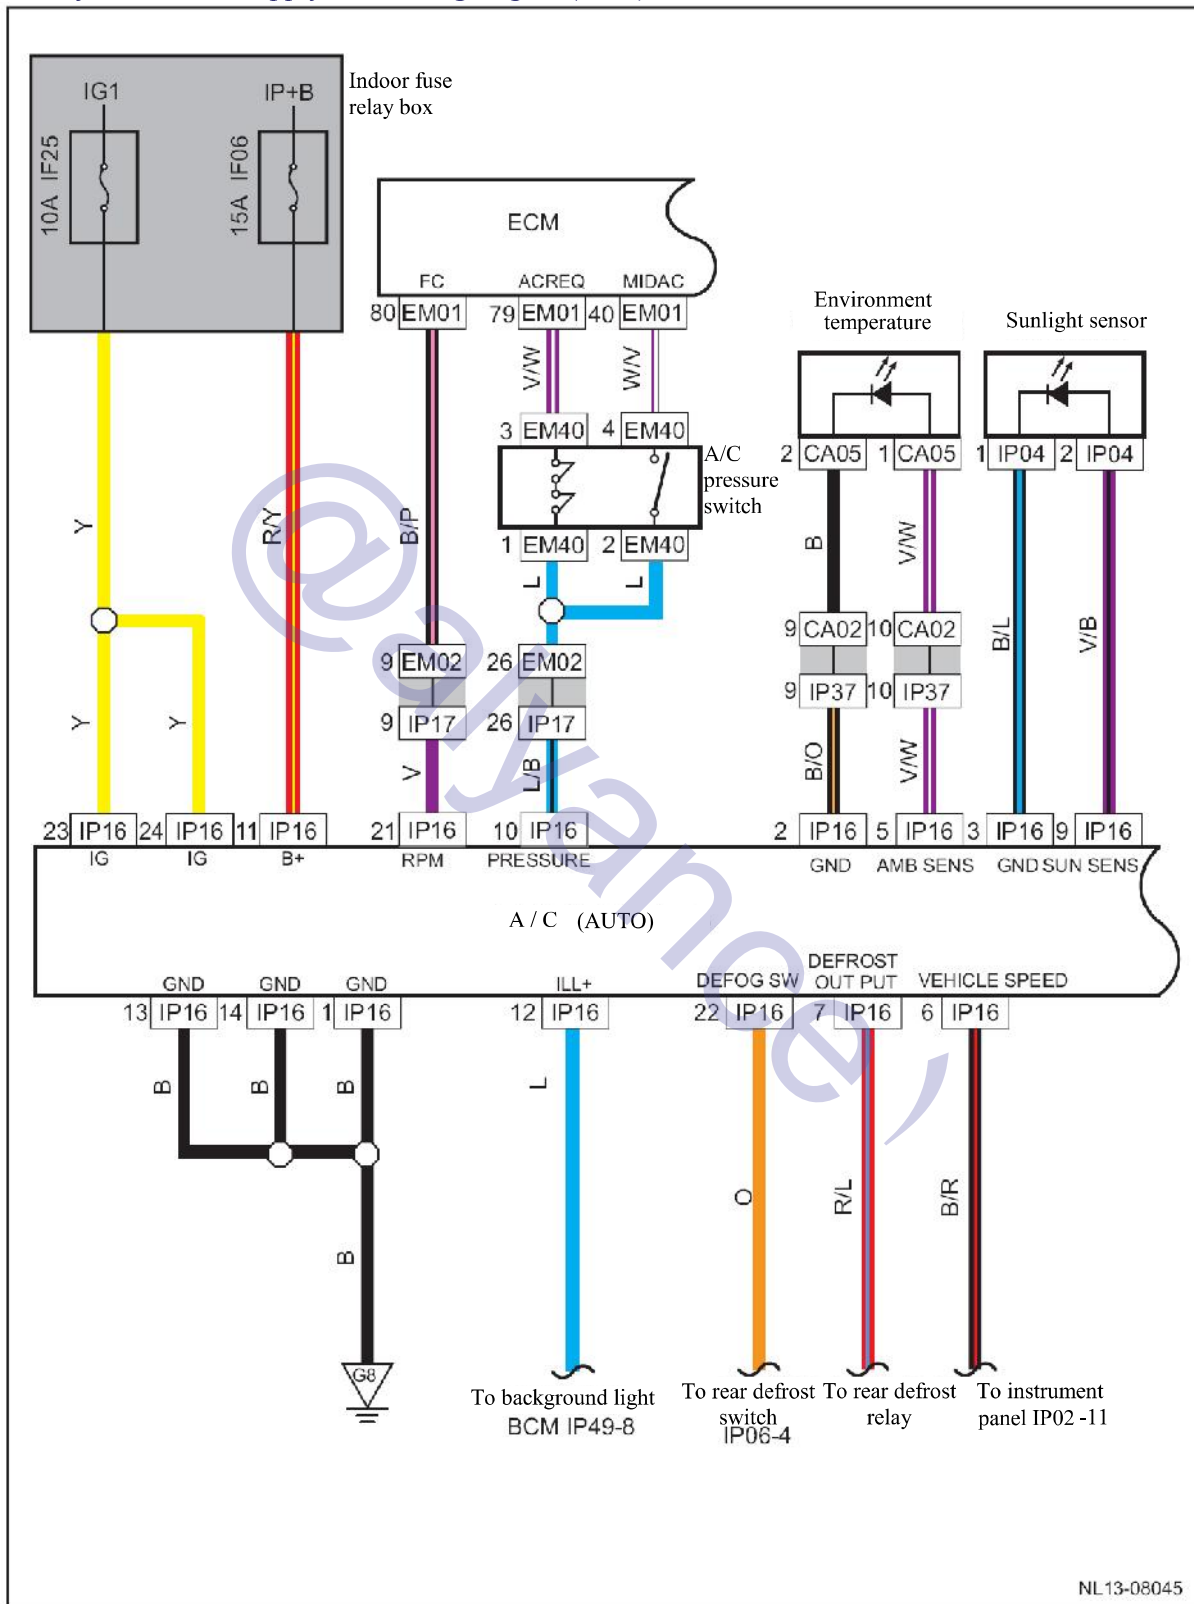

Harness connector	Name	Page
IP04		
IP16		
IP17		
IP37		
EM02		
EM40		
CA02		
CA05		
G6	Instrument panel grounding	72

Connection point	Description	Page
IP16-12	To background light BCM IP49-8	
IP16-22	To rear defrost switch IP06-4	
IP16-7	To rear defrost relay	
IP16-6	To instrument panel IP02-11	


Air-conditioner compressor clutch control (AUTO)

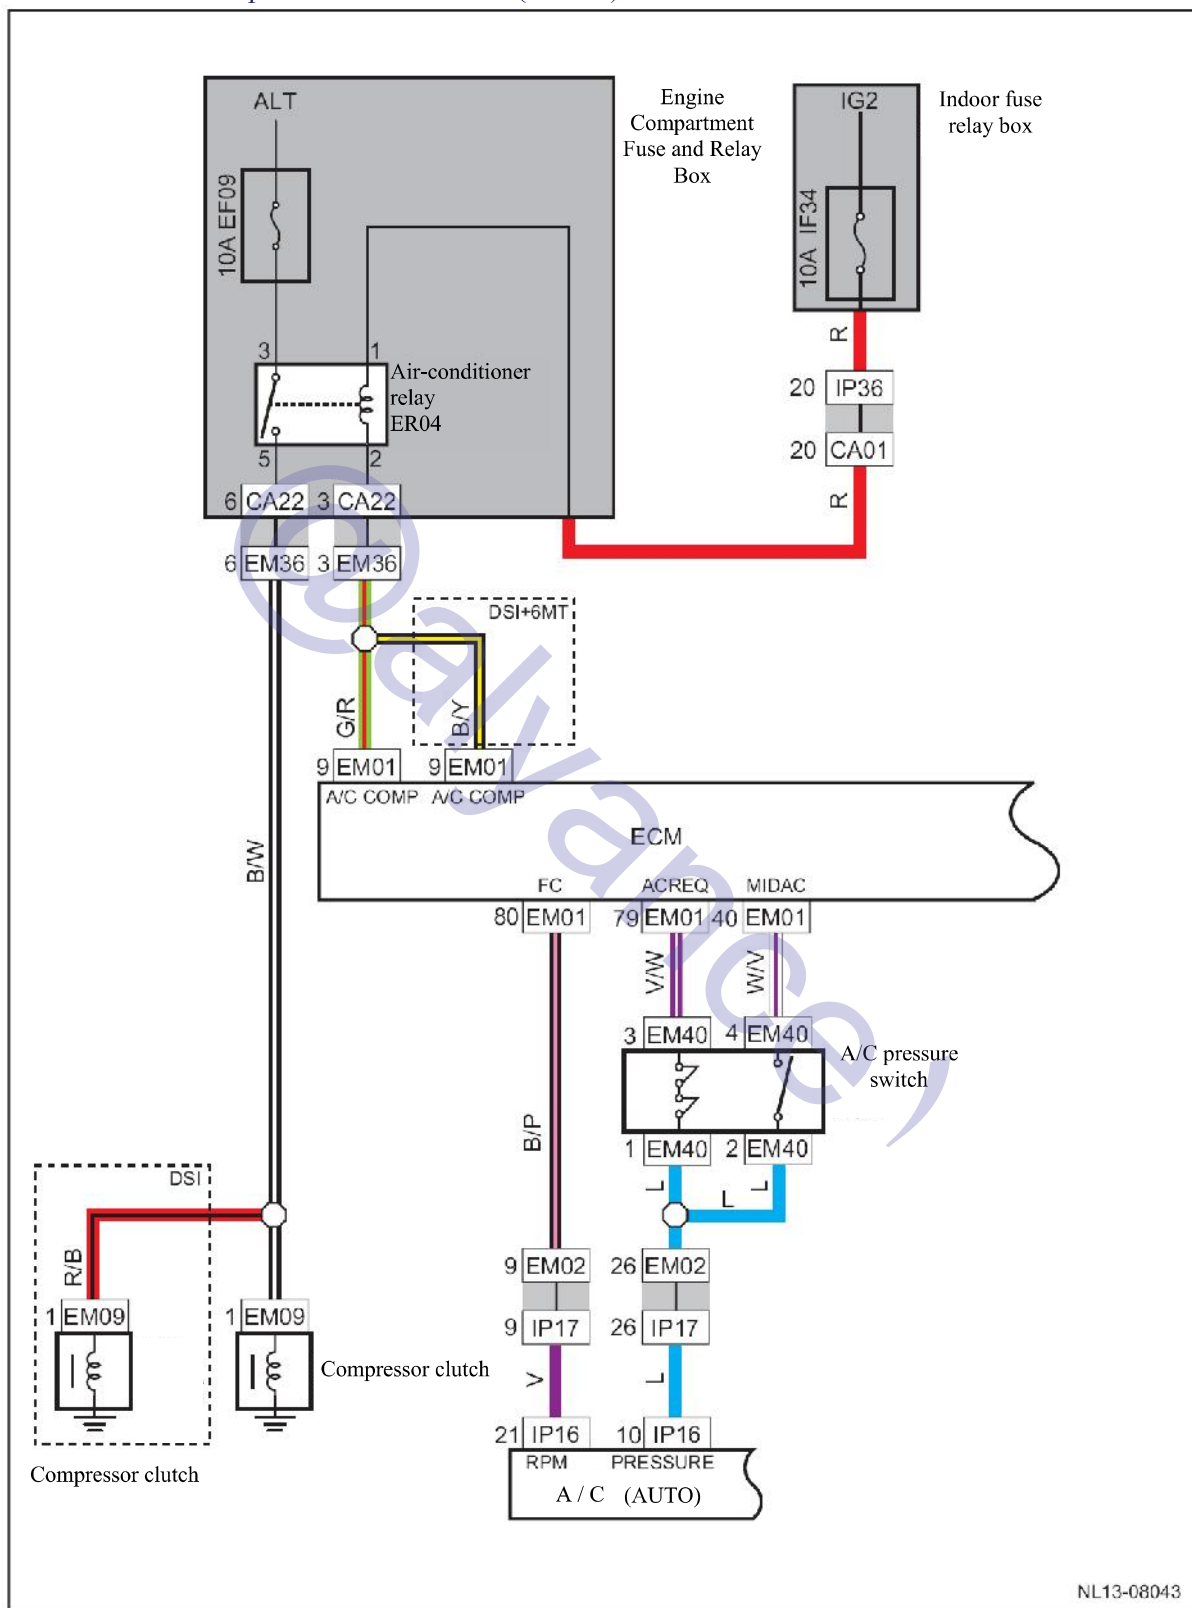

Harness connector

Harness connector	Name	Page
CA22		
EM01		
EM40		
EM36		
EM02		
EM09		
IP16		
IP17		
G6	Instrument panel grounding	72


Blower (Auto)

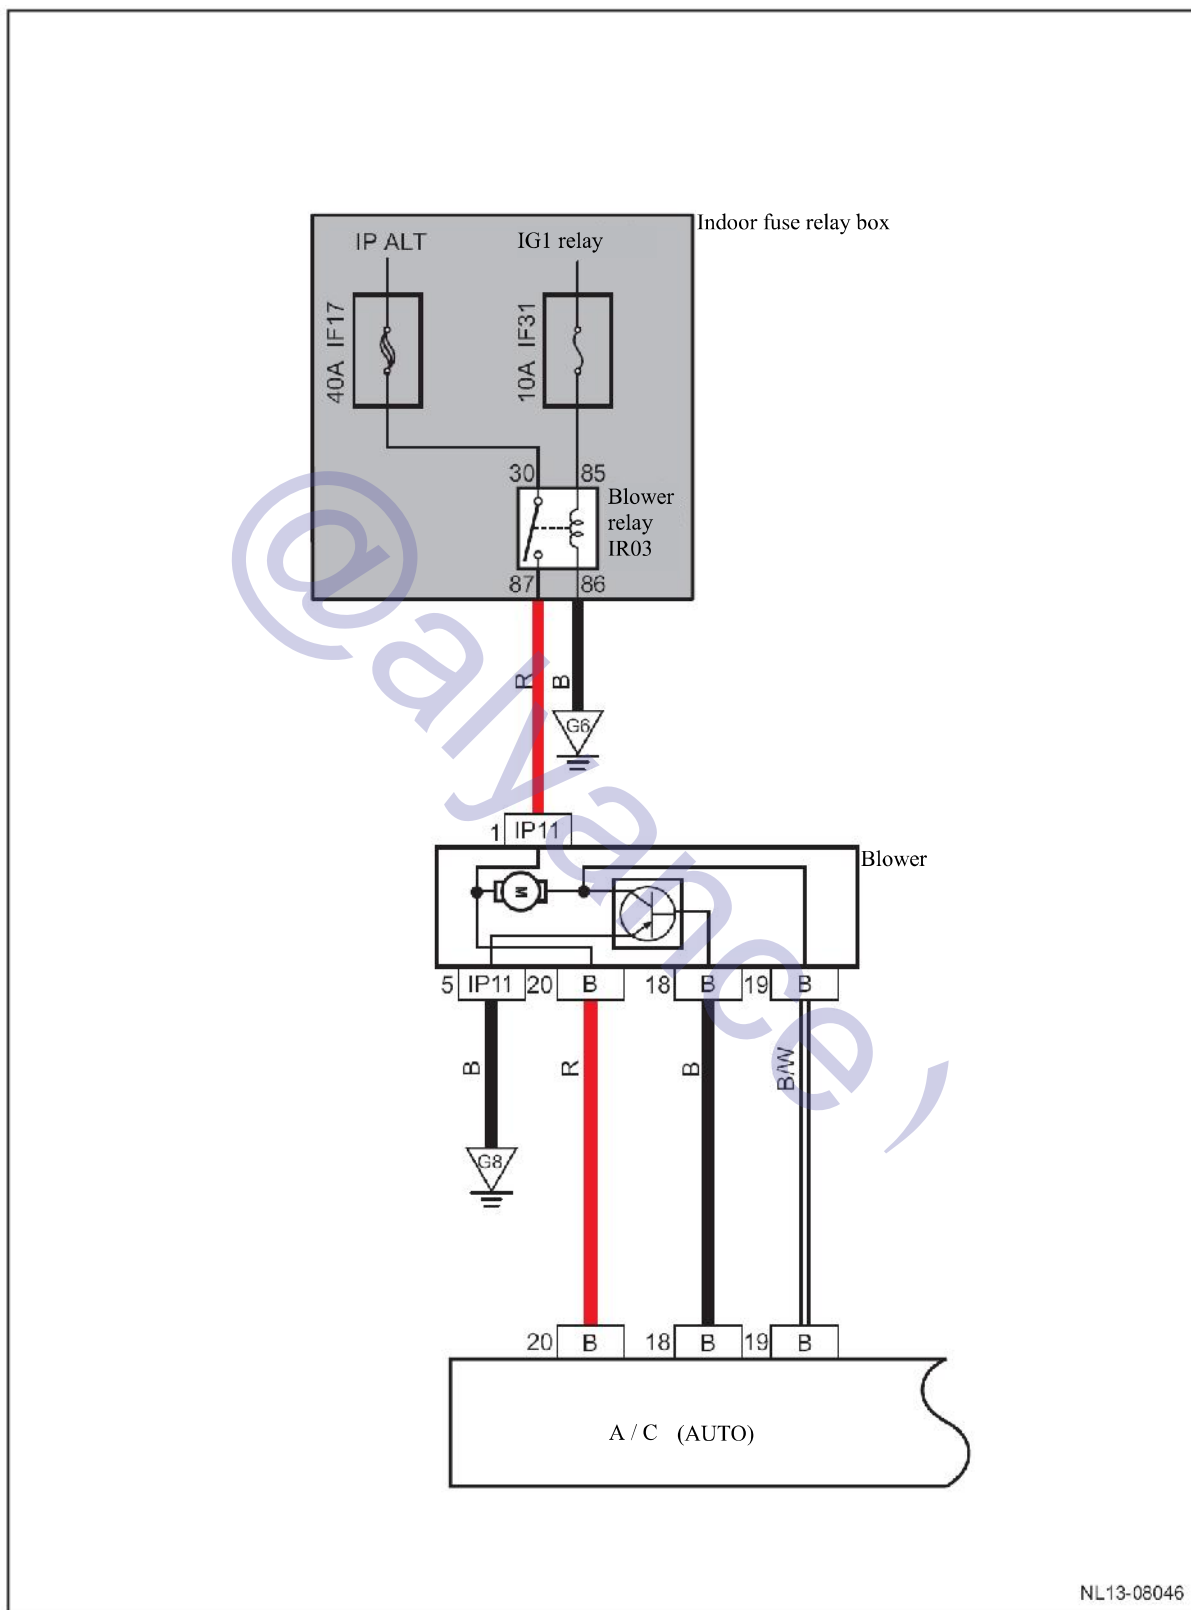


Harness connector	Name	Page
IP11		
G6	Instrument panel grounding	72

@alyance,

Wind direction regulating motor (Auto)

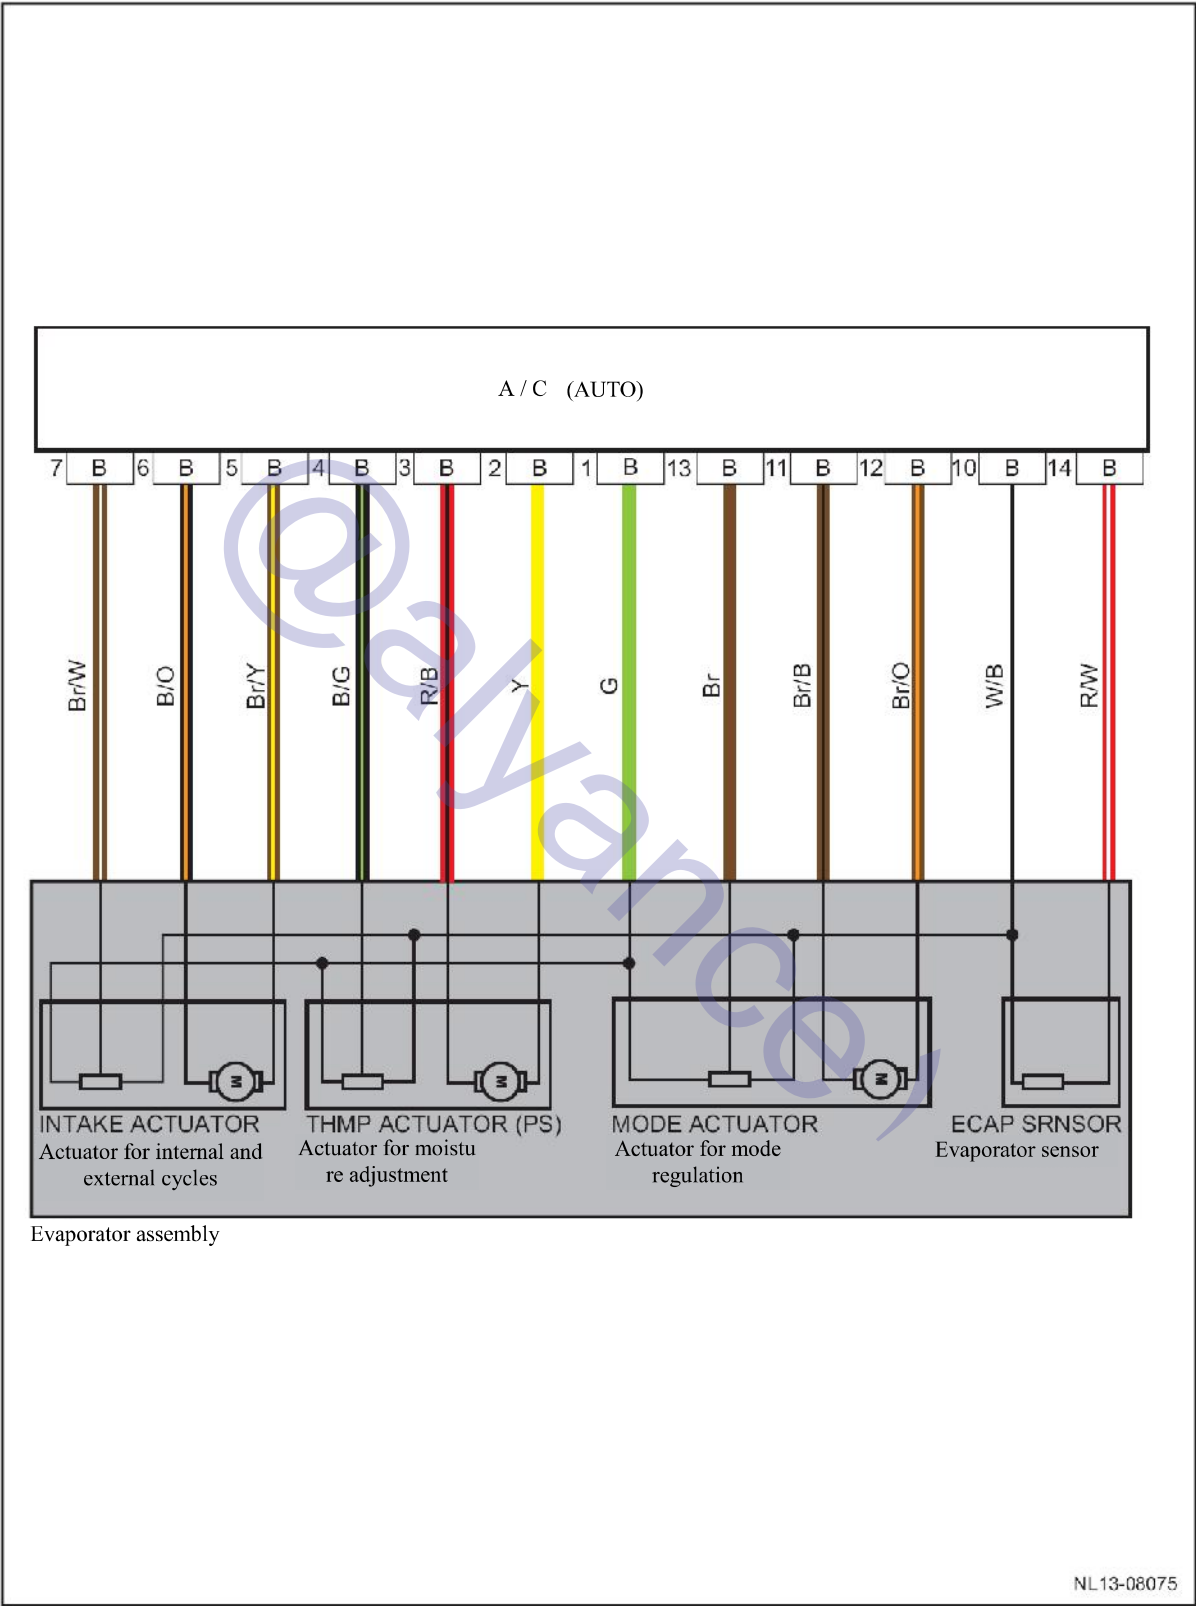


Air-conditioner system, GD (Electric)

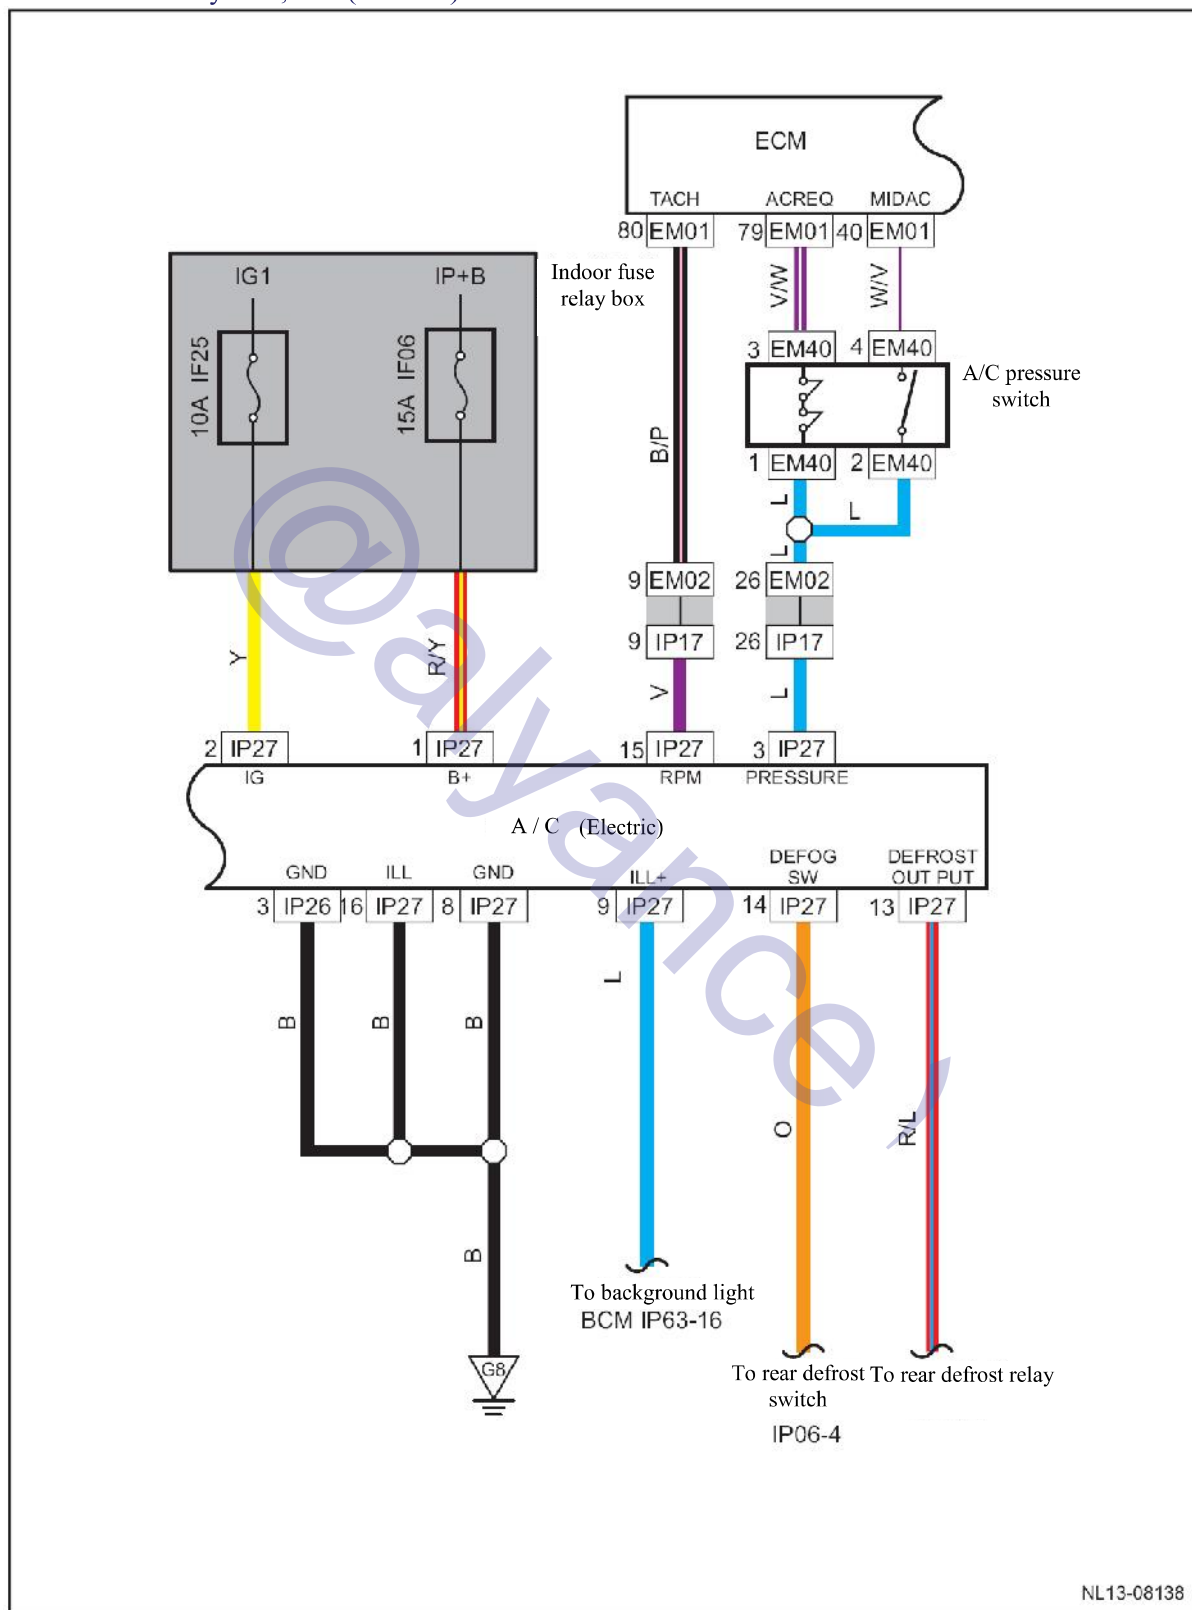

Harness connector	Name	Page
EM01	ECM harness connector	35
EM02	To instrument harness connector	35
EM40	Air-conditioner pressure switch harness connector	36
IP17	To engine harness connector	41
IP26	Air-conditioner control panel harness connector C (MANUAL)	41
IP27	Air-conditioner control panel harness connector A (MANUAL)	42
G8	Instrument panel grounding	72

Connection point	Description	Page
IP27-9	To background light BCM IP63-16	153
IP27-14	To rear defrost switch IP06-4	168
IP27-13	To rear defrost relay	168


A/C Power Supply, Grounding, Signal (manual)

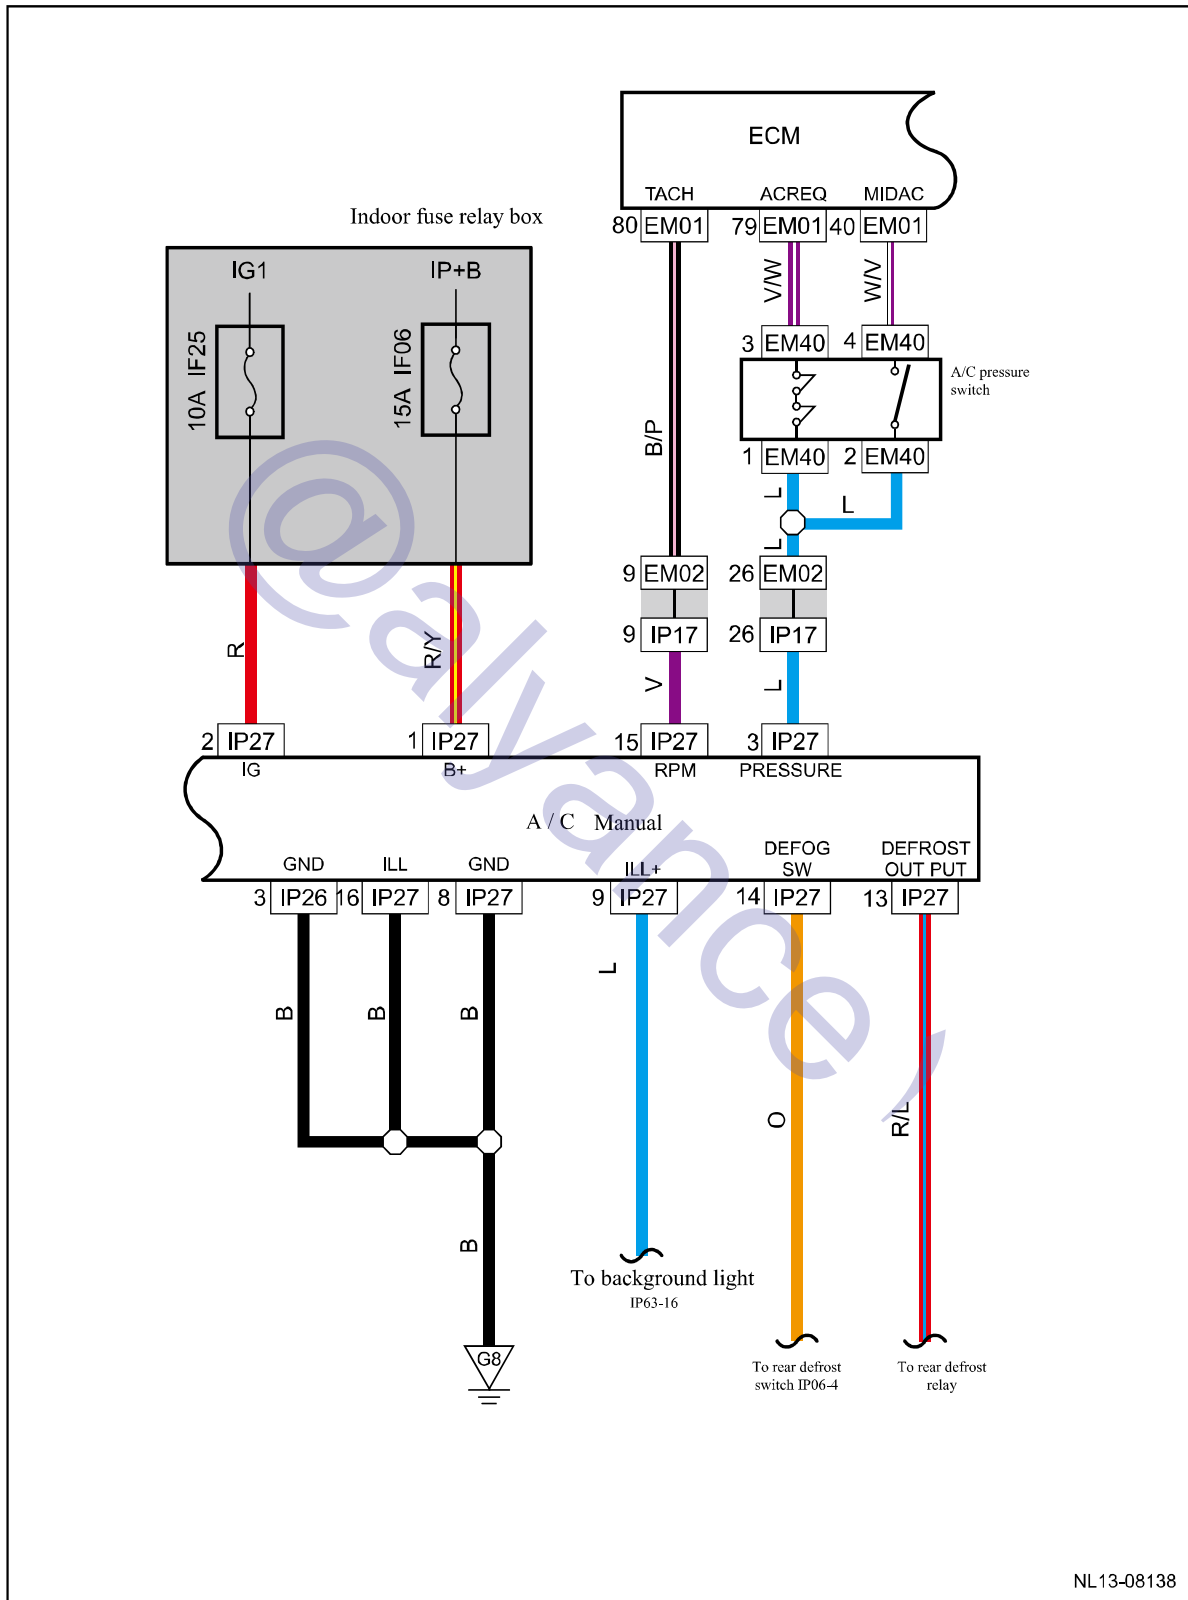

Harness connector	Description	Pages
EM01	Harness connector of engine control module	35
EM02	To instrument harness connector	35
EM40	Harness connector of A/C pressure switch	36
IP17	To engine harness connector	40
IP26	A/C control panel harness connector C(Manual)	40
IP27	A/C control panel harness connector A (Manual)	41
G8	Instrument panel grounding	70

Connection point	Descriptions	Pages
IP27-9	To background light BCM IP63-16	151
IP27-14	To rear defrost switch IP06-4	166
IP27-13	To rear defrost relay	166

A/C Compressor Clutch Control (Manual)

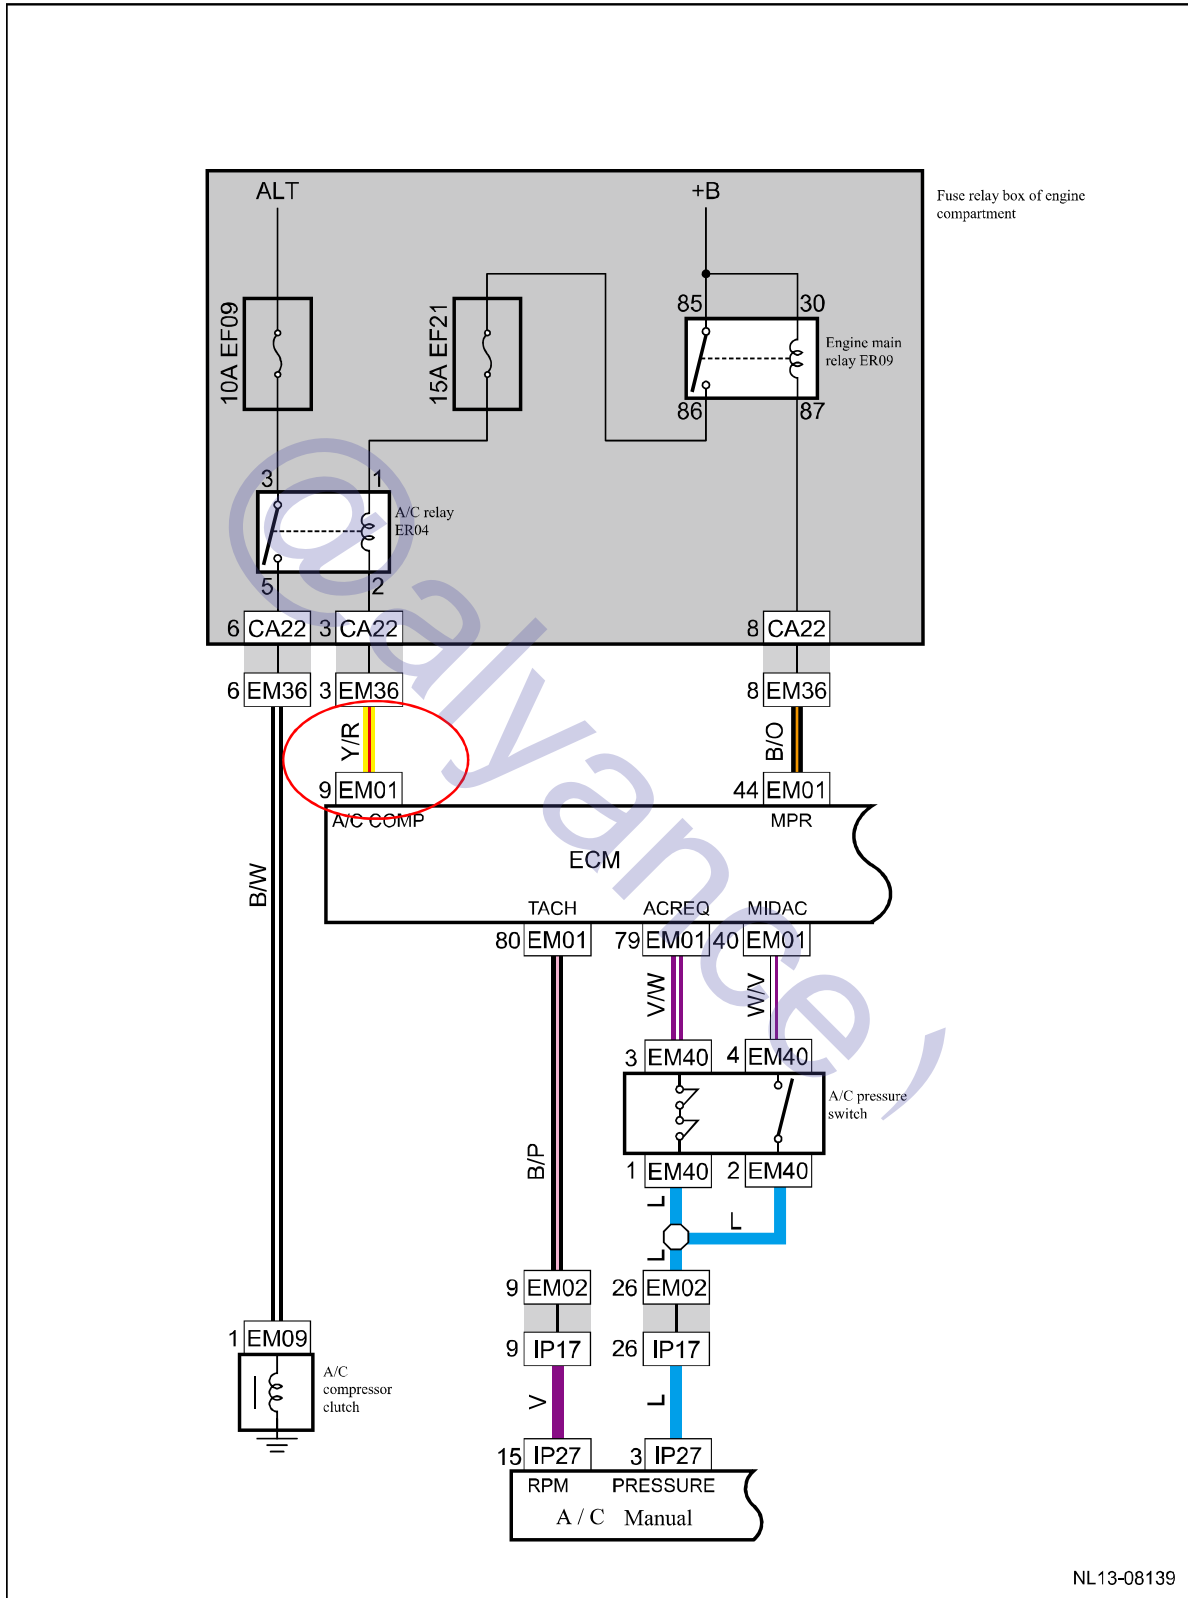

Harness connector	Description	Pages
CA22	To engine harness connector	28
EM01	Harness connector of engine control module	35
EM02	To instrument harness connector	35
EM36	To harness connector of engine compartment distribution box	34
EM09	Harness connector of A/C compressor relay	34
EM40	Harness connector of A/C pressure switch	34
IP17	To engine harness connector	40
IP27	A/C control panel harness connector A (Manual)	41

@alyance,