


vehicle : 301		VIN: VF3DDNFPTGJ721797 / OPR : 14466	
domain	power unit	function	engine starting
component			

principle

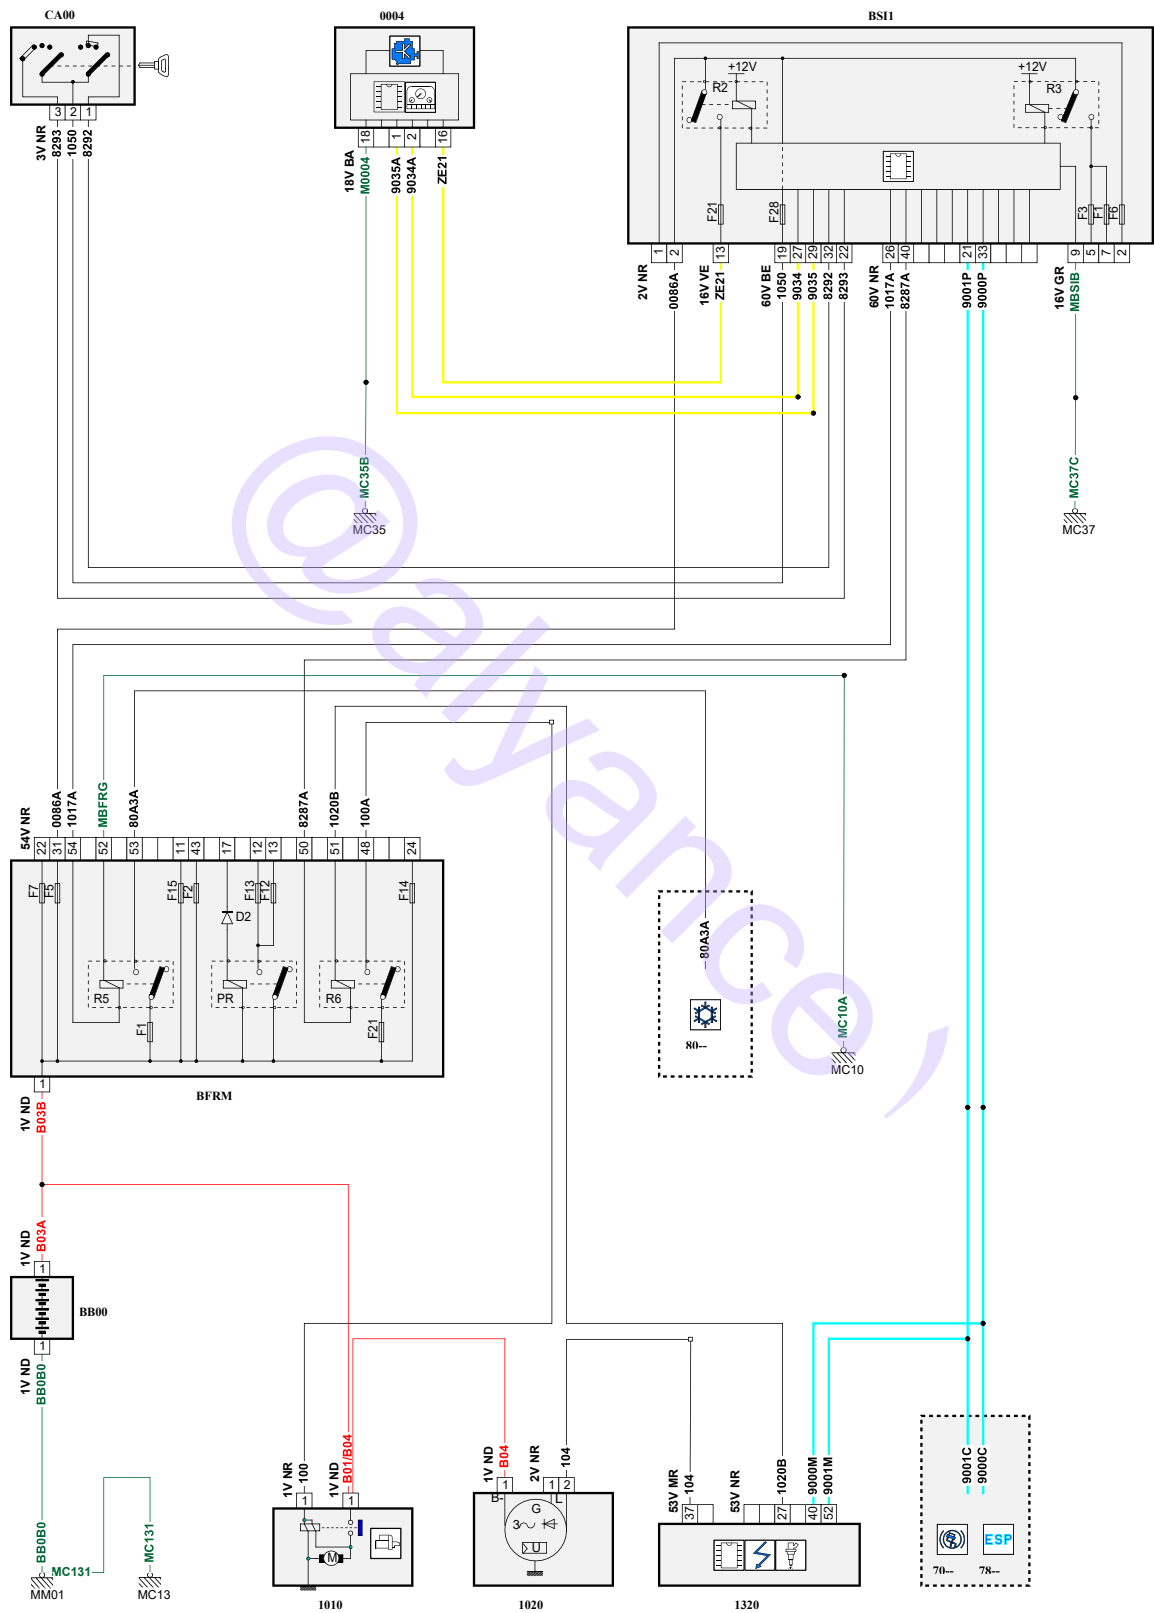


D3CZ7YFR

item code	description	information
0004	null	/ instrument panel
1010	null	starter motor
1020	null	alternator
1320	null	engine ECU /
7800	null	calculateur controle de stabilite
8060	null	heater unit
BB00	null	ancillaries battery
BFRM	null	engine fuse and relay box
BSI1	null	built-in systems interface
CA00	null	ignition switch
E900A	null	crimp one information (or equipotential 276A) wire
E900B	null	crimp one information (or equipotential 900B) wire
E901A	null	crimp one information (or equipotential 901A) wire
E901B	null	crimp one information (or equipotential 901B) wire
E934	null	crimp one information (or equipotential 934) wire
E935	null	crimp one information (or equipotential 935) wire
EB01	null	splice of a "battery +" protected by fuse no. 01
EM10B	null	crimp earth (earth point number 10B)
EM35B	null	crimp earth (earth point number 35B)
EM37C	null	crimp earth (earth point number 37C)
MC10A	null	body earth point number 10A
MC13	null	body earth point number 13
MC35	null	body earth point number 35
MC37C	null	body earth point number 37
MM01	null	engine earth point number 01

vehicle : 301	VIN: VF3DDNFPTGJ721797 / OPR : 14466		
domain	power unit	function	engine starting
component			

wiring

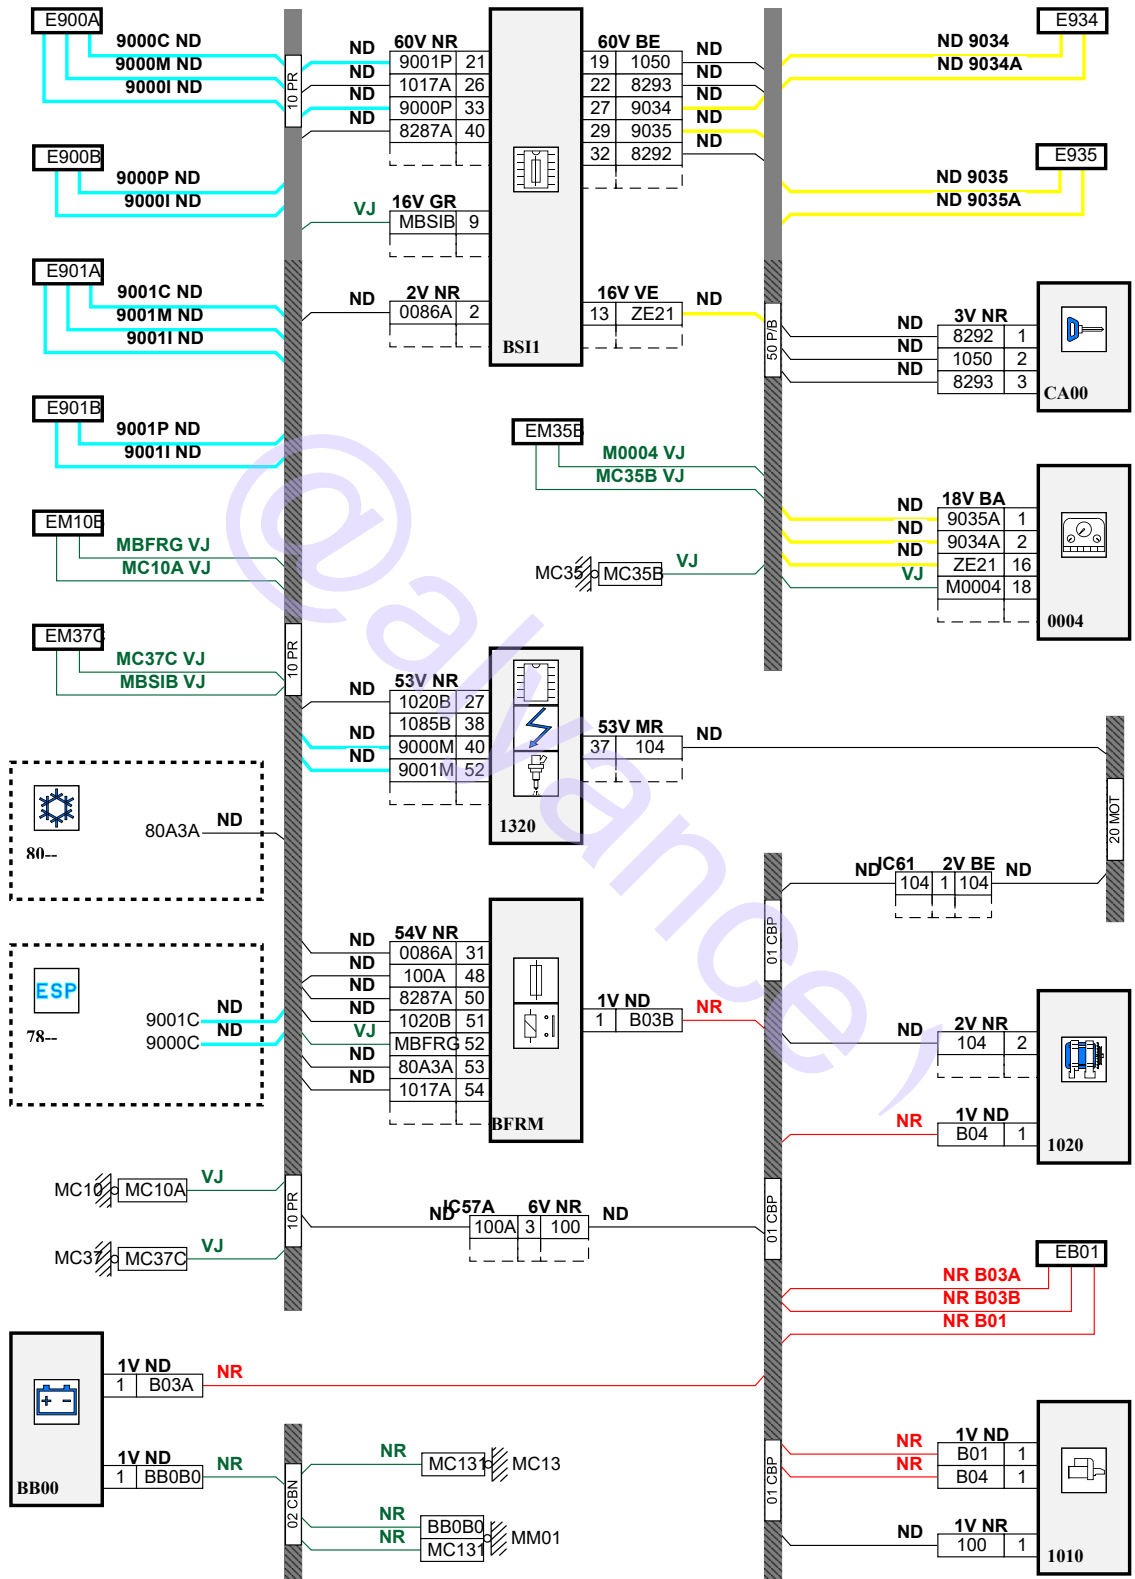

D3CZ7YFG

item code	description	information
0004	null	/ instrument panel
1010	null	starter motor
1020	null	alternator
1320	null	engine ECU /
7800	null	calculateur controle de stabilite
8060	null	heater unit
BB00	null	ancillaries battery
BFRM	null	engine fuse and relay box
BSI1	null	built-in systems interface
CA00	null	ignition switch
E900A	null	crimp one information (or equipotential 276A) wire
E900B	null	crimp one information (or equipotential 900B) wire
E901A	null	crimp one information (or equipotential 901A) wire
E901B	null	crimp one information (or equipotential 901B) wire
E934	null	crimp one information (or equipotential 934) wire
E935	null	crimp one information (or equipotential 935) wire
EB01	null	splice of a "battery +" protected by fuse no. 01
EM10B	null	crimp earth (earth point number 10B)
EM35B	null	crimp earth (earth point number 35B)
EM37C	null	crimp earth (earth point number 37C)
MC10A	null	body earth point number 10A
MC13	null	body earth point number 13
MC35	null	body earth point number 35
MC37C	null	body earth point number 37
MM01	null	engine earth point number 01