


vehicle : 301	VIN: VF3DDNFPTGJ721797 / OPR : 14466		
domain	lighting - signalling	function	foglamps
component			

principle

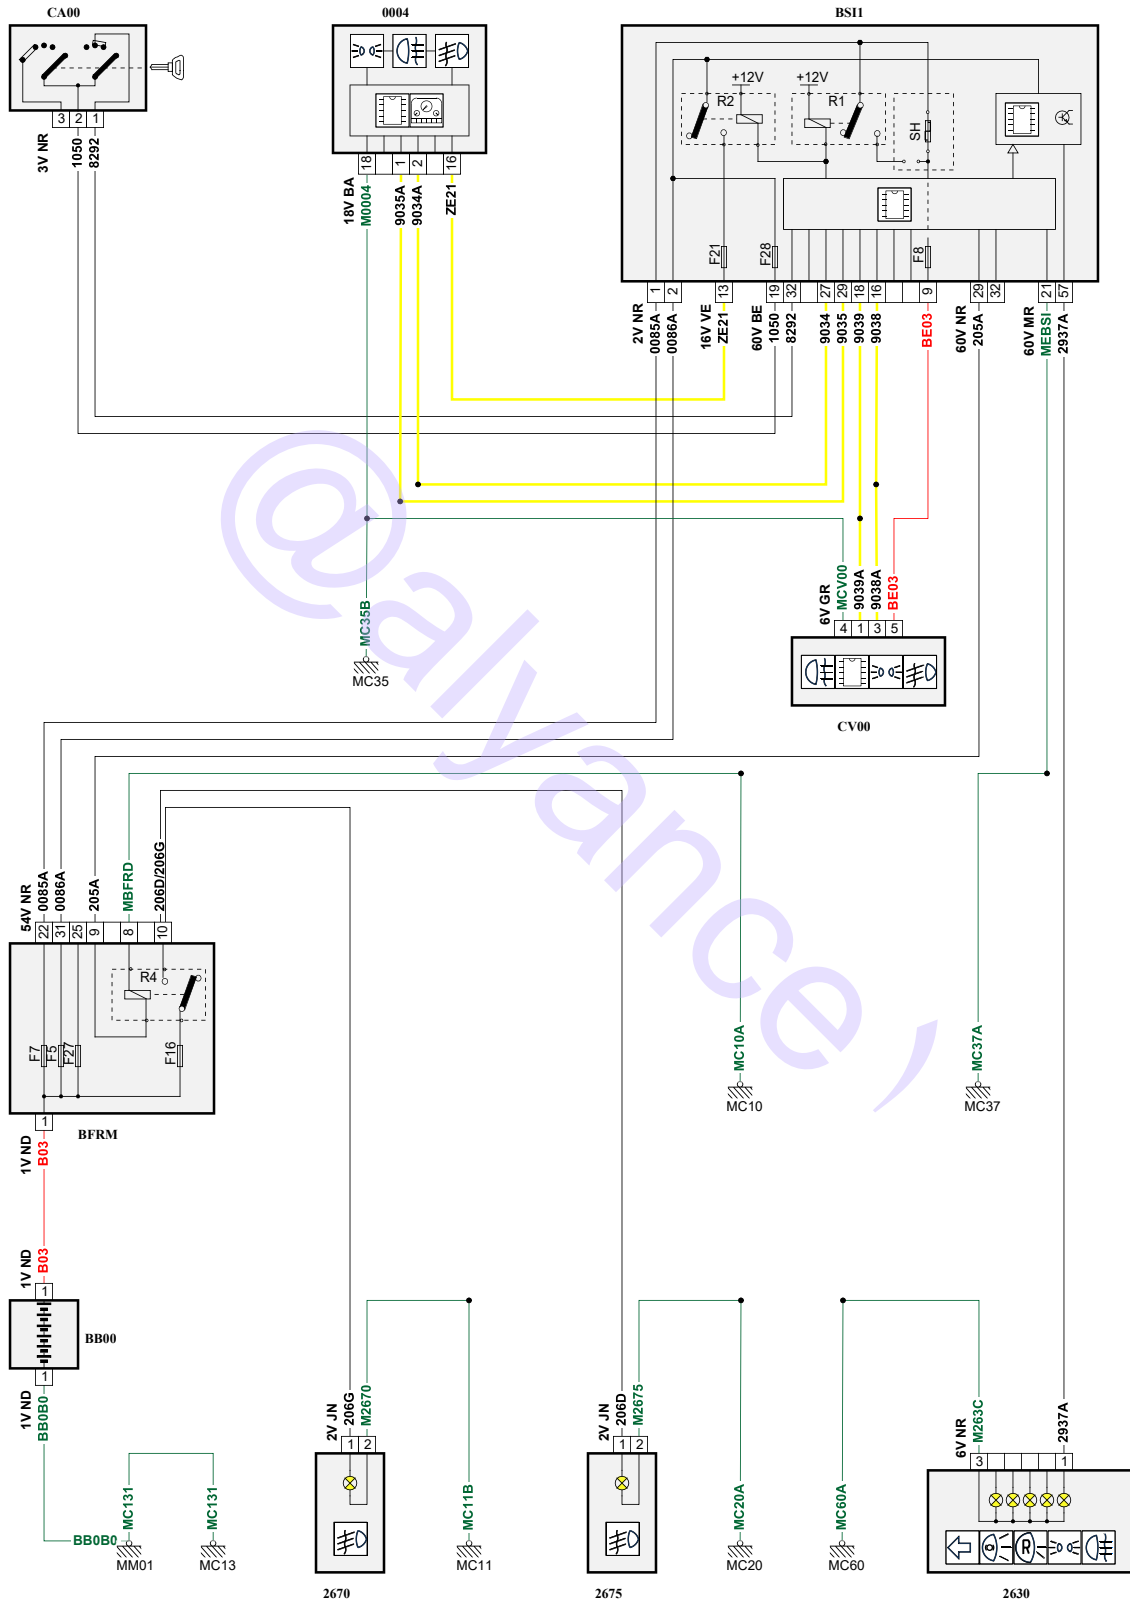


D3CZHHJR

item code	description	information
0004	null	/ instrument panel
2630	null	rear left lamp on body
2670	null	front left foglamp
2675	null	front right foglamp
BB00	null	ancillaries battery
BFRM	null	engine fuse and relay box
BS11	null	built-in systems interface
CA00	null	ignition switch
CV00	null	control under the steering wheel
E934	null	crimp one information (or equipotential 934) wire
E935	null	crimp one information (or equipotential 935) wire
E938	null	crimp one information (or equipotential 938) wire
E939	null	crimp one information (or equipotential 939) wire
EM10B	null	crimp earth (earth point number 10B)
EM11A	null	crimp earth (earth point number 11A)
EM20A	null	crimp earth (earth point number 20A)
EM35B	null	crimp earth (earth point number 35B)
EM37A	null	crimp earth (earth point number 37A)
EM60A	null	crimp earth (earth point number 60A)
MC10A	null	body earth point number 10A
MC11B	null	body earth point number 11B
MC13	null	body earth point number 13
MC20A	null	body earth point number 20A
MC35	null	body earth point number 35
MC37A	null	body earth point number 37A
MC60A	null	body earth point number 60
MM01	null	engine earth point number 01

vehicle : 301	VIN: VF3DDNFPTGJ721797 / OPR : 14466		
domain	lighting - signalling	function	foglamps
component			

wiring

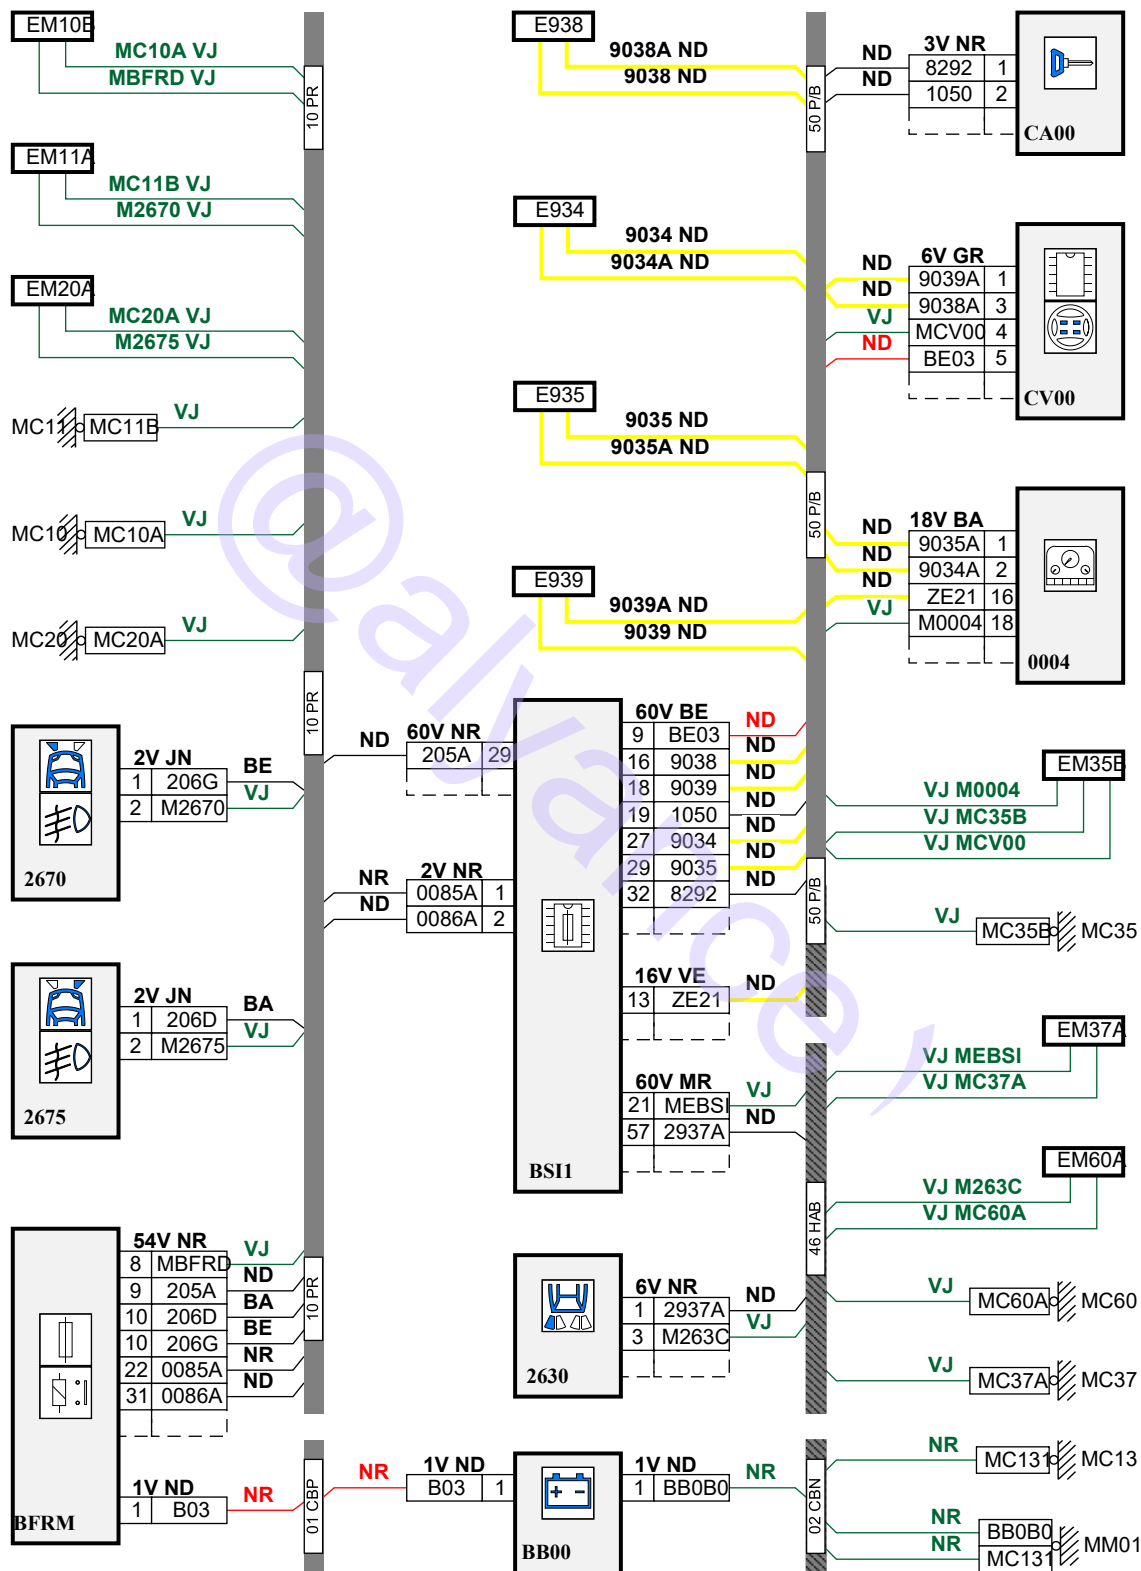

D3CZHHJG

item code	description	information
0004	null	/ instrument panel
2630	null	rear left lamp on body
2670	null	front left foglamp
2675	null	front right foglamp
BB00	null	ancillaries battery
BFRM	null	engine fuse and relay box
BS11	null	built-in systems interface
CA00	null	ignition switch
CV00	null	control under the steering wheel
E934	null	crimp one information (or equipotential 934) wire
E935	null	crimp one information (or equipotential 935) wire
E938	null	crimp one information (or equipotential 938) wire
E939	null	crimp one information (or equipotential 939) wire
EM10B	null	crimp earth (earth point number 10B)
EM11A	null	crimp earth (earth point number 11A)
EM20A	null	crimp earth (earth point number 20A)
EM35B	null	crimp earth (earth point number 35B)
EM37A	null	crimp earth (earth point number 37A)
EM60A	null	crimp earth (earth point number 60A)
MC10A	null	body earth point number 10A
MC11B	null	body earth point number 11B
MC13	null	body earth point number 13
MC20A	null	body earth point number 20A
MC35	null	body earth point number 35
MC37A	null	body earth point number 37A
MC60A	null	body earth point number 60
MM01	null	engine earth point number 01