


vehicle : 301	VIN: VF3DDNFTGJ721797 / OPR : 14466	
domain	comfort and convenience	function
component	heated rear screen	

principle

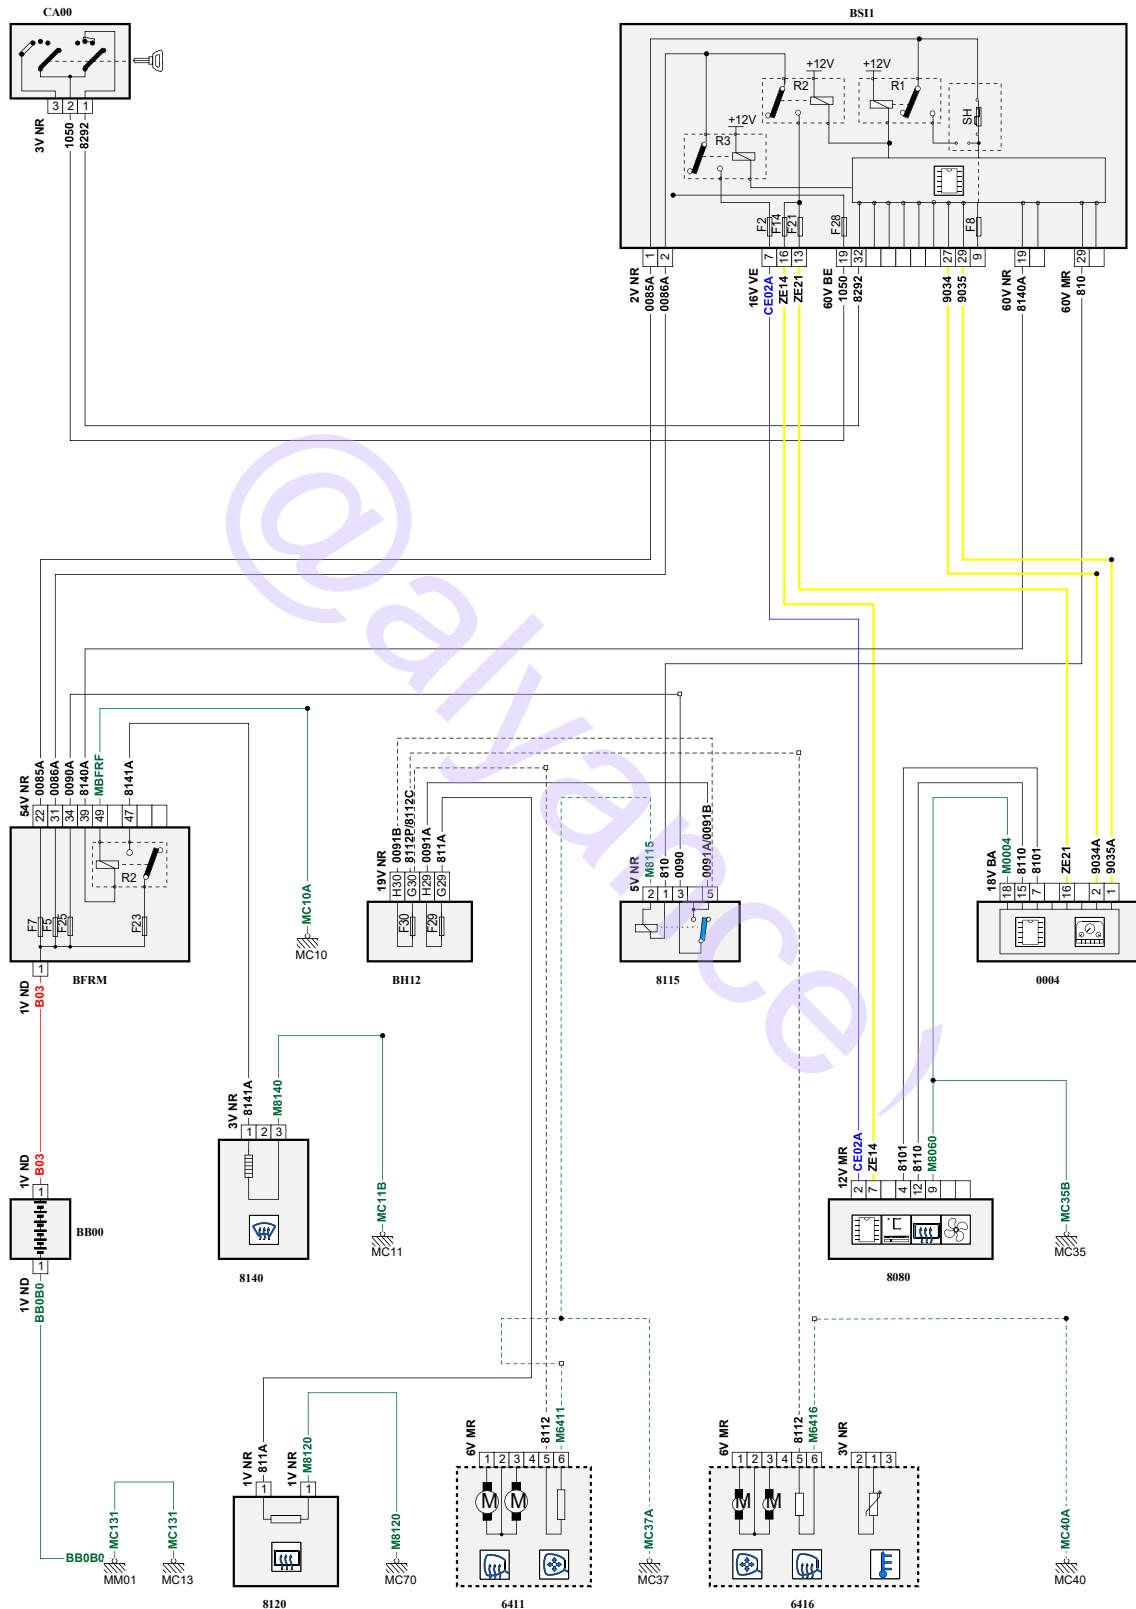


D3CZHKSR

item code	description	information
0004	null	/ instrument panel
6411	null	left-hand exterior rear view mirror
6416	null	right-hand exterior mirror
8080	null	air conditioning ECU /
8115	null	heated rear screen relay
8120	null	heated rear screen
8140	null	heated windscreen
BB00	null	ancillaries battery
BFRM	null	engine fuse and relay box
BH12	null	passenger compartment fuse box /, 12 fuses
BSI1	null	built-in systems interface
CA00	null	ignition switch
E934	null	crimp one information (or equipotential 934) wire
E935	null	crimp one information (or equipotential 935) wire
EM10B	null	crimp earth (earth point number 10B)
EM11A	null	crimp earth (earth point number 11A)
EM35B	null	crimp earth (earth point number 35B)
EM37A	null	crimp earth (earth point number 37A)
EM40A	null	crimp earth (earth point number 40A)
MC10A	null	body earth point number 10A
MC11B	null	body earth point number 11B
MC13	null	body earth point number 13
MC35	null	body earth point number 35
MC37A	null	body earth point number 37A
MC40A	null	body earth point number 40
MC70A	null	body earth point number 70A
MM01	null	engine earth point number 01

vehicle : 301	VIN: VF3DDNFPTGJ721797 / OPR : 14466		
domain	comfort and convenience	function	heated rear screen
component			

wiring

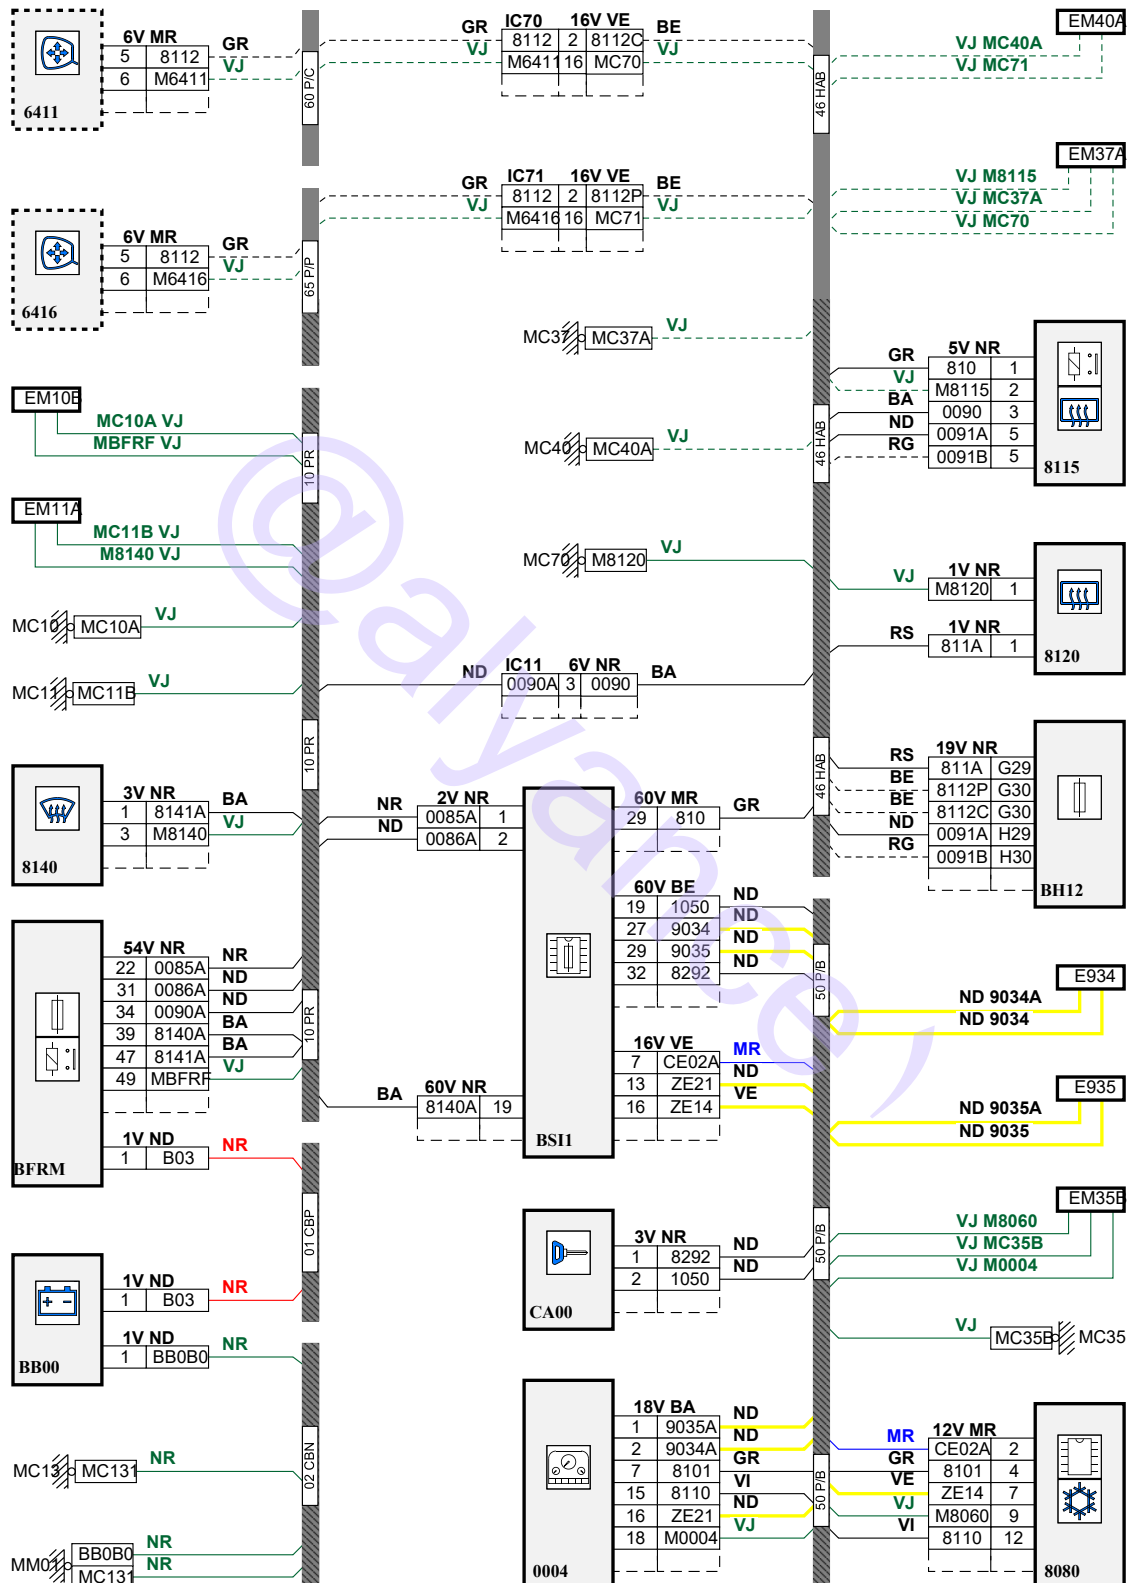

D3CZHKSG

item code	description	information
0004	null	/ instrument panel
6411	null	left-hand exterior rear view mirror
6416	null	right-hand exterior mirror
8080	null	air conditioning ECU /
8115	null	heated rear screen relay
8120	null	heated rear screen
8140	null	heated windscreen
BB00	null	ancillaries battery
BFRM	null	engine fuse and relay box
BH12	null	passenger compartment fuse box /, 12 fuses
BSI1	null	built-in systems interface
CA00	null	ignition switch
E934	null	crimp one information (or equipotential 934) wire
E935	null	crimp one information (or equipotential 935) wire
EM10B	null	crimp earth (earth point number 10B)
EM11A	null	crimp earth (earth point number 11A)
EM35B	null	crimp earth (earth point number 35B)
EM37A	null	crimp earth (earth point number 37A)
EM40A	null	crimp earth (earth point number 40A)
MC10A	null	body earth point number 10A
MC11B	null	body earth point number 11B
MC13	null	body earth point number 13
MC35	null	body earth point number 35
MC37A	null	body earth point number 37A
MC40A	null	body earth point number 40
MC70A	null	body earth point number 70A
MM01	null	engine earth point number 01