

item code	description	information
1320	null	engine ECU /
2110	null	additional brake lamp
2120	null	dual function brake switch /
2630	null	rear left lamp on body
2635	null	rear right lamp on body
7800	null	calculateur controle de stabilite
BB00	null	ancillaries battery
BFRM	null	engine fuse and relay box
BSI1	null	built-in systems interface
CA00	null	ignition switch
E703A	null	crimp one information (or equipotential 703) wire
E900A	null	crimp one information (or equipotential 276A) wire
E900B	null	crimp one information (or equipotential 900B) wire
E901A	null	crimp one information (or equipotential 901A) wire
E901B	null	crimp one information (or equipotential 901B) wire
EM37A	null	crimp earth (earth point number 37A)
EM37C	null	crimp earth (earth point number 37C)
EM60A	null	crimp earth (earth point number 60A)
MC13	null	body earth point number 13
MC37A	null	body earth point number 37A
MC37C	null	body earth point number 37
MC60A	null	body earth point number 60
MC70A	null	body earth point number 70A
MM01	null	engine earth point number 01