

The diagram illustrates the electrical system for a vehicle, showing the connection between various components. The components are organized into several sections:

- Top Section (Power and Ground):** Includes a terminal block with pins labeled 1V ND, 1V NR, 3V NR, 6V NR, 6V BE, 6V MR, 6V VE, 16V NR, and 16V VE. It also shows a fuse block with fuses F21, F22, F23, F24, and F28.
- Left Section (Relays and Switches):** Contains relays 6212, 6217, 6207, and 6202, each with a switch (6217, 6207, 6202) and a bulb (6212, 6217, 6207, 6202).
- Right Section (Relays and Switches):** Contains relays 6212, 6217, 6207, and 6202, each with a switch (6217, 6207, 6202) and a bulb (6212, 6217, 6207, 6202).
- Bottom Section (Relays and Switches):** Contains relays 6212, 6217, 6207, and 6202, each with a switch (6217, 6207, 6202) and a bulb (6212, 6217, 6207, 6202).

The diagram is labeled with 'CA00' and 'BS11'.

item code	description	information
0004	null	/ instrument panel
6202	null	driver's side front door lock assembly
6207	null	front passenger side door lock assembly
6212	null	rear left door lock assembly
6217	null	rear right door lock assembly
6220	null	door locking switch
6222	null	boot or tailgate lock assembly
63C2	null	interior boot opening button
BB00	null	ancillaries battery
BFRM	null	engine fuse and relay box
BSI1	null	built-in systems interface
CA00	null	ignition switch
E265A	null	crimp one information (or equipotential 265A) wire
E622	null	crimp one information (or equipotential 622) wire
E623	null	crimp one information (or equipotential 623) wire
E934	null	crimp one information (or equipotential 934) wire
E935	null	crimp one information (or equipotential 935) wire
EM35B	null	crimp earth (earth point number 35B)
EM37A	null	crimp earth (earth point number 37A)
EM40A	null	crimp earth (earth point number 40A)
EM60A	null	crimp earth (earth point number 60A)
MC13	null	body earth point number 13
MC35	null	body earth point number 35
MC37A	null	body earth point number 37A
MC40A	null	body earth point number 40
MC60A	null	body earth point number 60
MM01	null	engine earth point number 01