


INTERIOR

CONSOLE

COMPONENTS EFBCC3F0

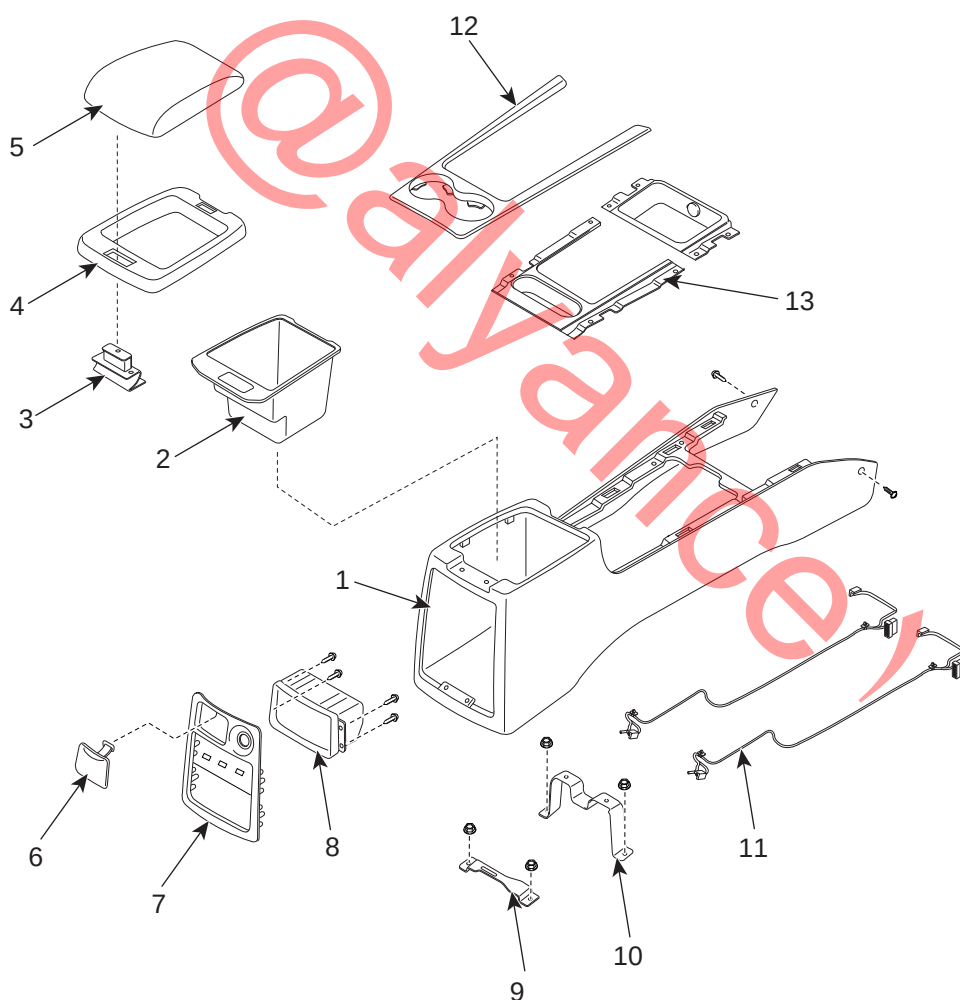

1. console
2. storage box
3. console armrest hinge
4. lower armrest

5. armrest
6. ashtray
7. console lid cover
8. console rear cup holder

9. console rear bracket
10. console center bracket
11. console wiring harness
12. deco upper panel
13. console upper cover

INTERIOR

BD -3

REPLACEMENT


E52BE8BE

FLOOR CONSOLE REPLACEMENT

NOTE

- When prying with a flat-tipped screwdriver, wrap it with protective tape, and apply protective tape around the related parts, to prevent damaged.
- Put on gloves to protect your hands.


1. Remove the console lid cover (A).
2. Disconnect the connector (B).

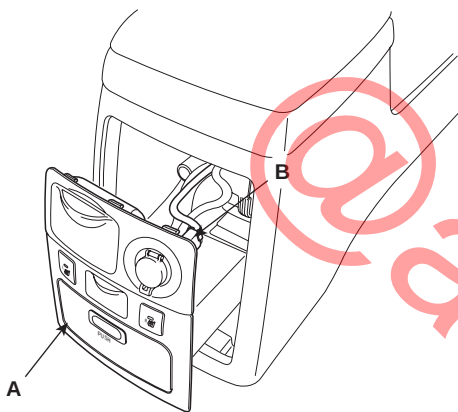

SBLBD6001D


3. Remove the deco upper panel (A).

▷ : Clip Locations, 6

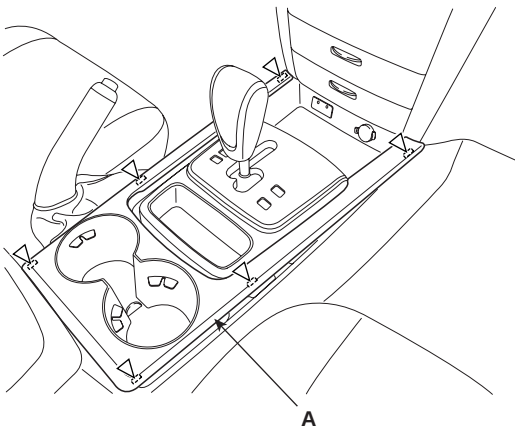

SBLBD6002L


4. Remove the console storage box (A).

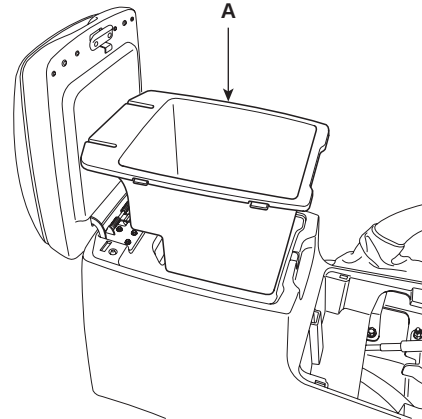

SBLBD6003D


5. Remove the console upper cover (A).

▷ : Screw Locations, 8

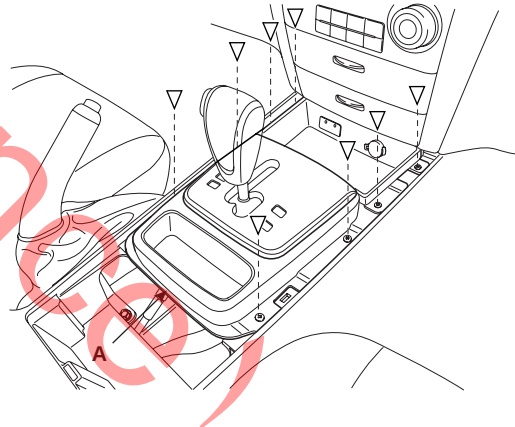

SBLBD6004L

6. Disconnect the connector (A).

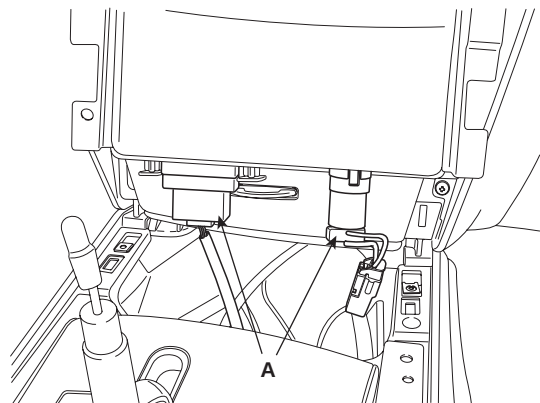


SBLBD6005D

BD -4

BODY (INTERIOR & EXTERIOR)

7. After loosening the console mounting screw, remove the floor console side cover (A).
8. Disconnect the connector (B).

▷ : Screw Locations, 6

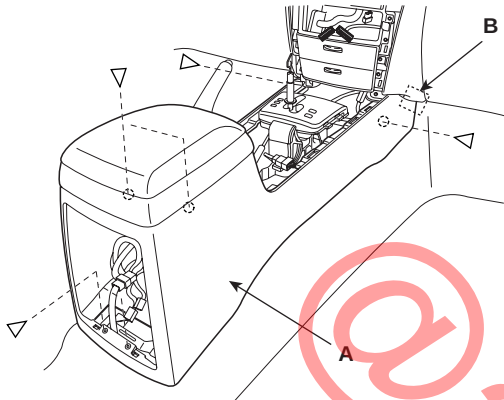


SBLBD6006L

9. Installation is the reverse of removal.

ARMREST REPLACEMENT


1. Remove the console storage box (A).

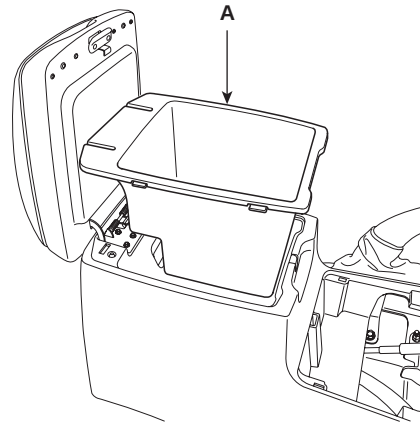

SBLBD6003D

2. After loosening the armrest mounting nuts, remove the armrest (A).

▷ : Screw Locations, 4

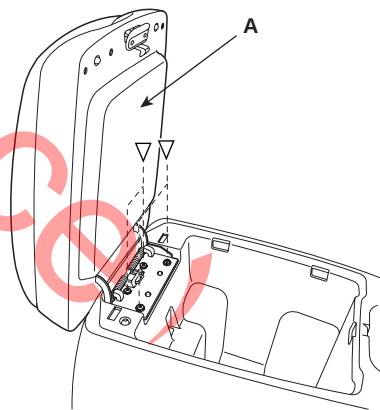

SBLBD6007L


3. Installation is the reverse of removal.

INTERIOR

BD -5

CRASH PAD

COMPONENTS E897CEBC

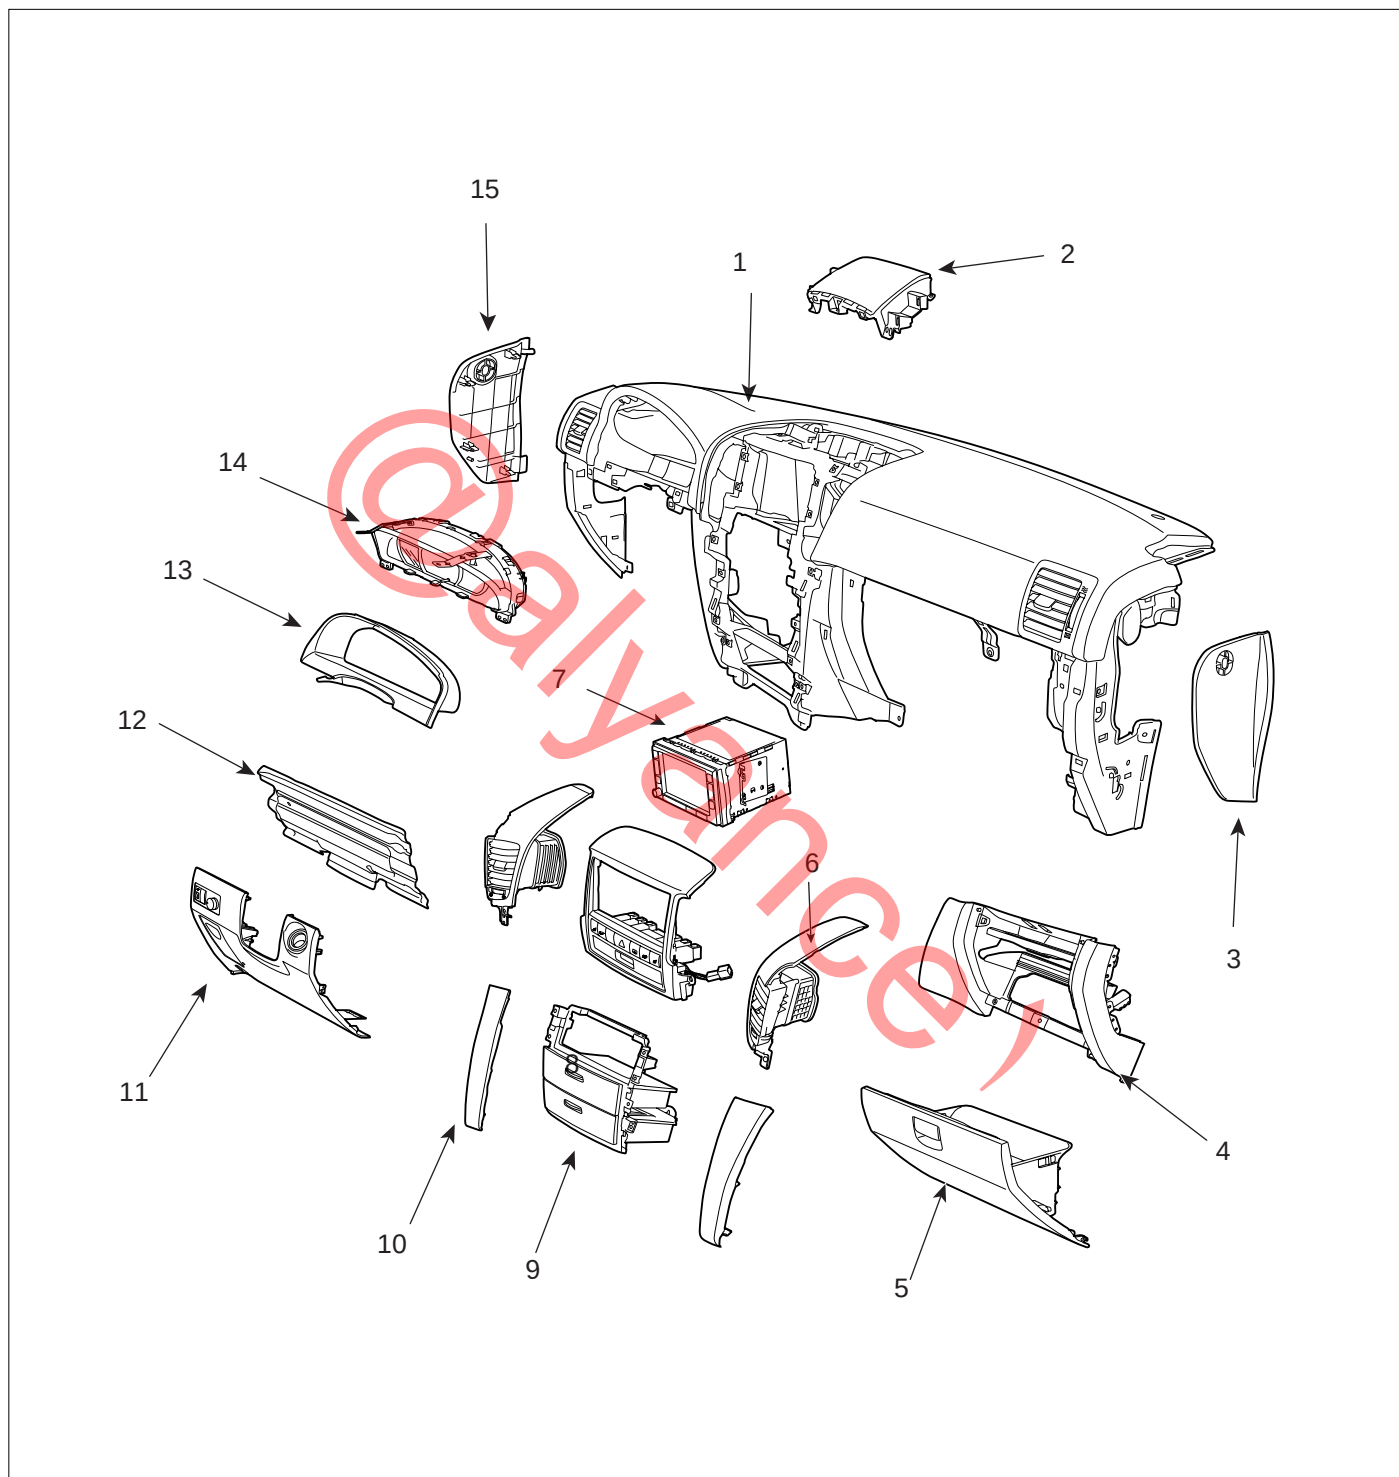

- | | | |
|------------------------------|------------------------------|---------------------------|
| 1. Crash pad | 6. Air vent | 11. Crash pad lower panel |
| 2. Center fascia upper panel | 7. Audio | 12. Reinforcing panel |
| 3. Crash pad side cover | 8. Center fascia panel | 13. Cluster fascia panel |
| 4. Glove box housing | 9. Center fascia lower panel | 14. Cluster |
| 5. glove box | 10. Side panel | 15. Crash pad side cover |

BD -6

BODY (INTERIOR & EXTERIOR)

REPLACEMENT

E5FFE3E3

CLUSTER REPLACEMENT




NOTE

- When prying with a flat-tipped screwdriver, wrap it with protective tape, and apply protective tape around the related parts, to prevent damaged.
- Put on gloves to protect your hands.

1. Tilt the steering column down.
2. Remove the cluster fascia panel (A).


Fastener Locations

▷ : Screw, 2 ▶ : Clip, 2

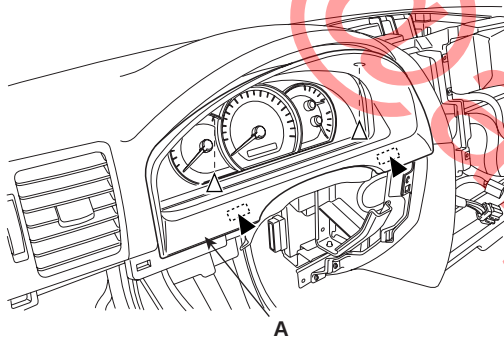


SBLBD6008L

▷ : Screw Locations, 2

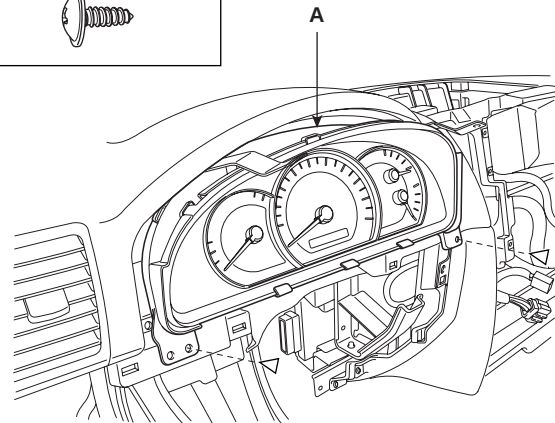

SBLBD6009L

5. Disconnect the cluster connector (A), then remove the cluster (B).

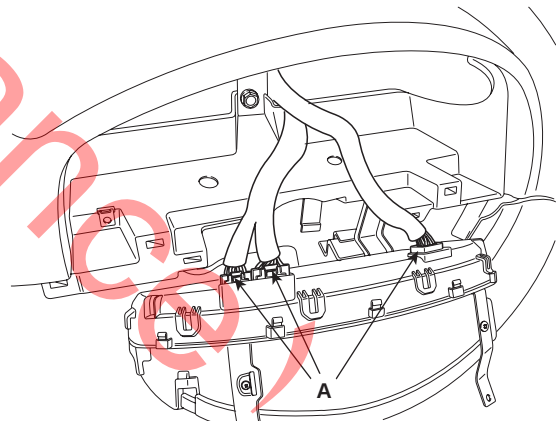

SBLBD6010D

6. Installation is the reverse of removal.



NOTE

- Make sure the connector are plugged in properly.

INTERIOR

BD -7


CENTER FASCIA PANEL REPLACEMENT

NOTE

- When prying with a flat-tipped screwdriver, wrap it with protective tape, and apply protective tape around the related parts, to prevent damaged.
- Put on gloves to protect your hands.

1. Remove the side garnish (A).

▷ : Clip Locations, 6

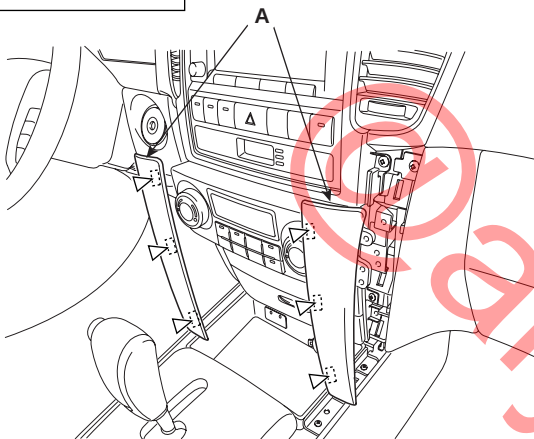


SBLBD6011L

2. After loosening the mounting screw, remove the center fascia panel (A).

Fastener Locations

▷ : Screw, 2 ▶ : Clip, 3

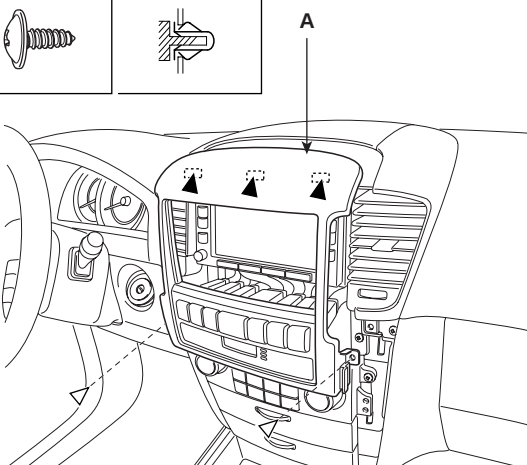

SBLBD6012L

3. Installation is the reverse of removal.


NOTE

- Make sure the connector are plugged in properly.

HEATER CONTROL UNIT REPLACEMENT


1. Remove the side garnish.(Refer to page BD-7)
2. After loosening the heater control mounting screw, remove the heater control unit (A).

▷ : Screw Locations, 4

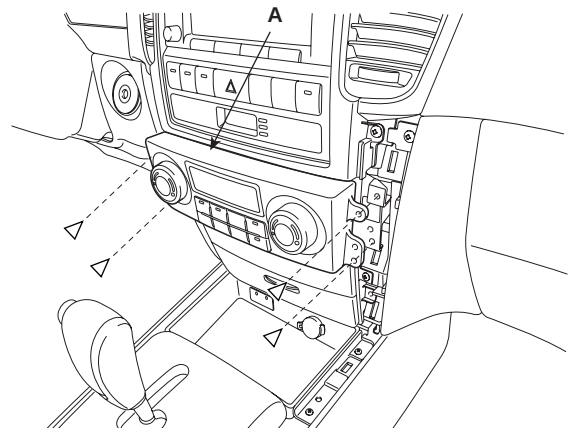

SBLBD6016L

3. Disconnect the connector (A).

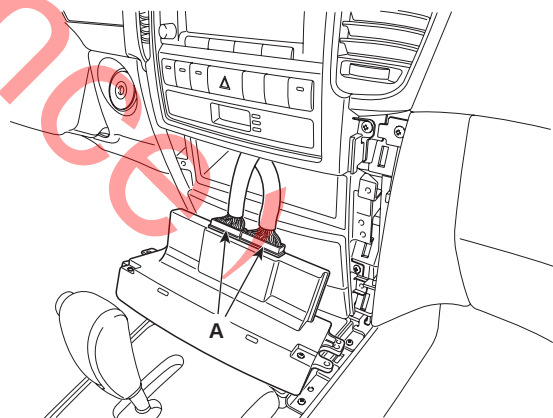

SBLBD6017D

4. Installation is the reverse of removal.

NOTE

- Make sure the connector is plugged in properly.


BD -8

BODY (INTERIOR & EXTERIOR)

LOWER PANEL REPLACEMENT

1. Remove the crash pad side cover (A).

▷ : Clip Locations, 4

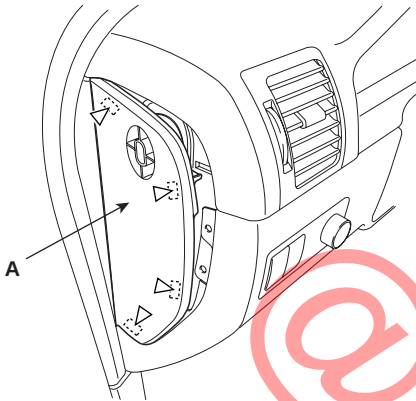


SBLBD6013L

2. Loosen the mounting screw, remove the lower panel (B).
3. Disconnect the connector (A).

Fastener Locations

▶ : Clip, 5


▷ : Screw, 4

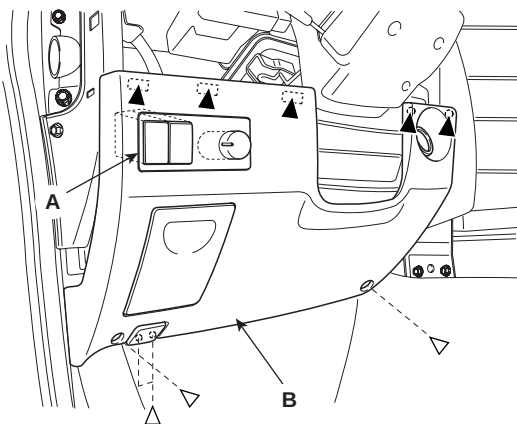

SBLBD6014L

4. Remove the reinforcing panel (A).

▷ : Bolt Locations, 3

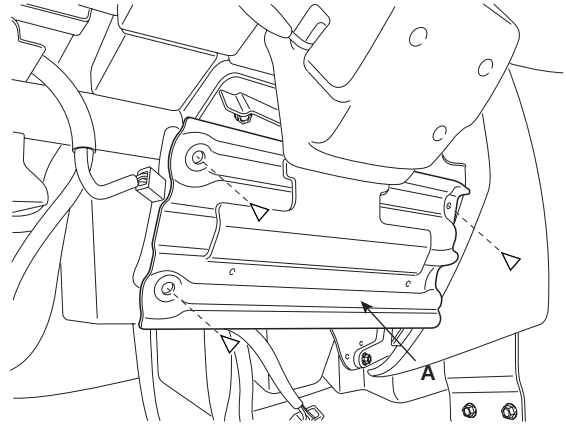

SBLBD6015L

5. Installation is the reverse of removal.

INTERIOR


 
BD -9

AUDIO ASSEMBLY REPLACEMENT

1. Remove the center fascia panel.(Refer to page BD-7)
2. Remove the center air vent(A).

Fastener Locations



► : Screw, 2 ▷ : Clip, 4

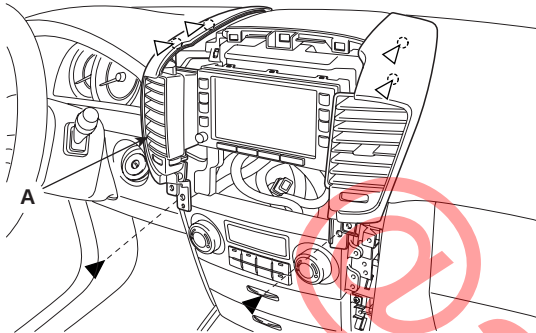

SBLBD6018L


3. Loosen the screws.
4. Remove the audio assembly (A).

 ▷ : Screw Locations, 4

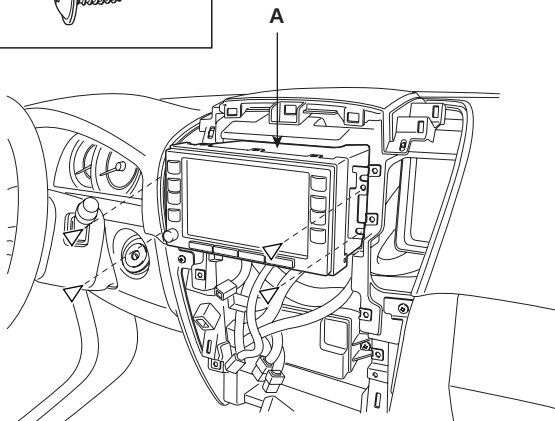

SBLBD6019L

5. Disconnect the connector (B).

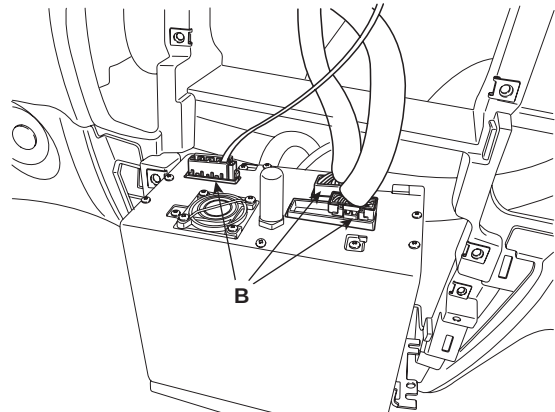

SBLBD6020D

6. Installation is the reverse of removal.



NOTE


- Make sure the connector are plugged in properly.

BD -10

BODY (INTERIOR & EXTERIOR)


GLOVE BOX REPLACEMENT

1. Disconnect the damper (B) from the glove box (A).

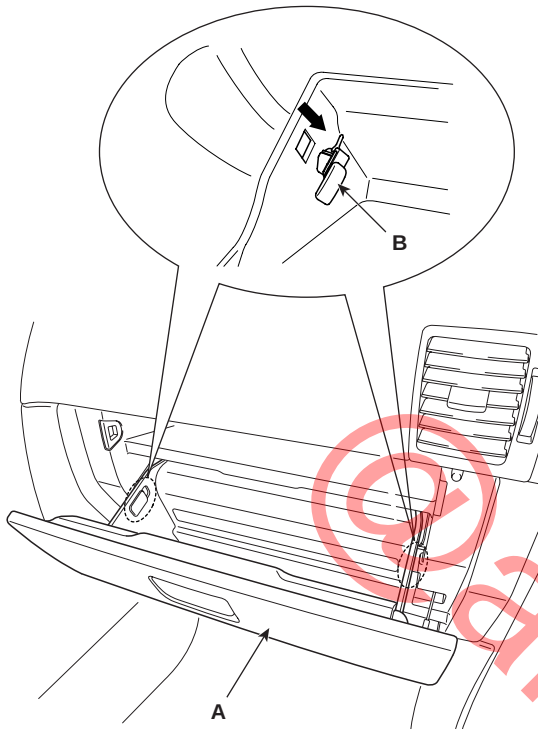


SBLBD6021D

2. Remove the glove box (A) from the lift (B).

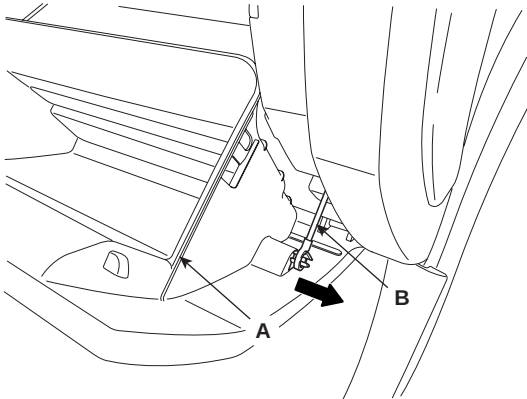

SBLBD6022D

3. Disconnect the pine (A), then remove the glove box (C).

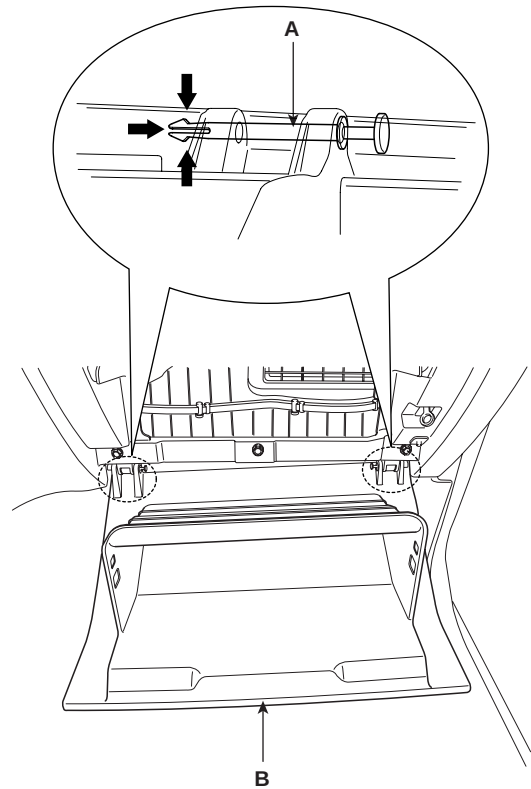

SBLBD6023D


4. Remove the glove box housing (A).

Fastener Locations

▷ : Bolt, 3

▷ : Clip, 1

▷ : Screw, 2

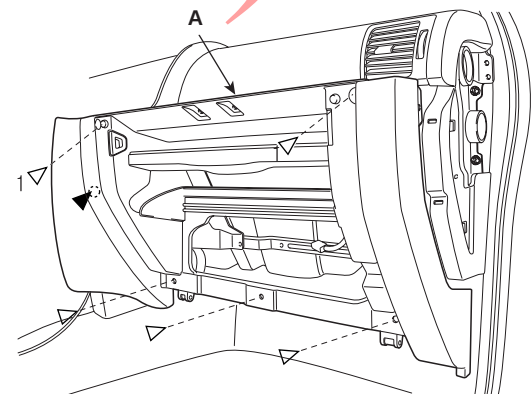

SBLBD6024L


5. Installation is the reverse of removal.

INTERIOR

BD -11

AIR VENT REPLACEMENT

1. After loosening the mounting screw, then remove the air vent (A).

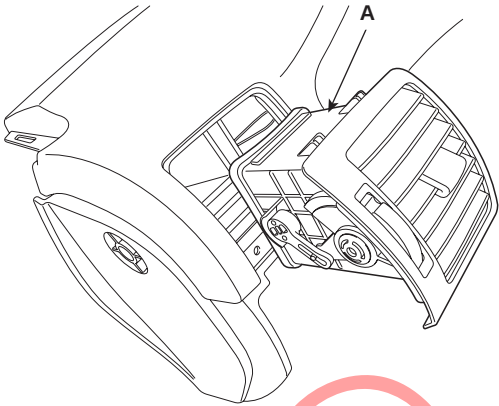


SBLBD6025D

2. Installation is the reverse of removal.

SHROUD REPLACEMENT

1. Loosen the screws, then remove the shroud assembly (A).

▷: Screw Locations, 3

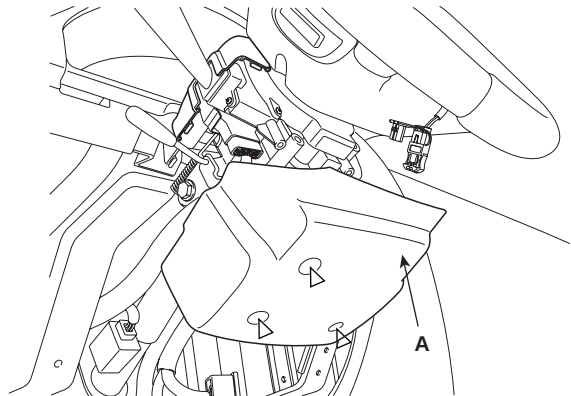

SBLBD6026L

2. Installation is the reverse of removal.

BD -12

BODY (INTERIOR & EXTERIOR)

CRASH PAD REPLACEMENT

 NOTE

- When prying with a flat-tipped screwdriver, wrap it with protective tape, and apply protective tape around the related parts, to prevent damaged.
- Put on gloves to protect your hands.

1. Remove the following items.
 - Front seat.(Refer to page BD-14)
 - Cluster facia panel and cluster.(Refer to page BD-6)
 - Audio assembly.(Refer to page BD-9)
 - Glove box.(Refer to page BD-10)
 - Lower panel.(Refer to page BD-8)
 - Front pillar trim.

2. Remove the photo sensor.

3. Disconnect the passenger's air bag connector (A). Loosen the bolt and nut, then remove the crash pad (B).

4. Installation is the reverse of removal.

 NOTE

- Make sure the crash pad fits onto the guide pins correctly.
- Before tightening the bolts, make sure the crash pad wire harnesses are not pinched.
- Make sure the connectors are plugged in properly, and the antenna lead is connected properly.
- Enter the anti- theft code for the radio, then enter the customer's radio station presets.

Fastener Locations

► : Bolt

▷ : Nut

