

item code	description	information
0004	null	/ instrument panel
1630	null	/ automatic gearbox ECU
4410	null	brake fluid level switch
7800	null	calculateur controle de stabilite
7801	null	ESP cut-off switch
7810	null	front left wheel speed sensor
7815	null	front right wheel speed sensor
7820	null	rear left wheel speed sensor
7825	null	rear right wheel speed sensor
BB00	null	ancillaries battery
BFRM	null	engine fuse and relay box
BSI1	null	built-in systems interface
CA00	null	ignition switch
CV00	null	control under the steering wheel
E265	null	crimp one information (or equipotential 265) wire
E900A	null	crimp one information (or equipotential 276A) wire
E900B	null	crimp one information (or equipotential 900B) wire
E901A	null	crimp one information (or equipotential 901A) wire
E901B	null	crimp one information (or equipotential 901B) wire
E934	null	crimp one information (or equipotential 934) wire
E935	null	crimp one information (or equipotential 935) wire
E938	null	crimp one information (or equipotential 938) wire
E939	null	crimp one information (or equipotential 939) wire
EC12A	null	splice of an "ignition +" protected by fuse no. 12
EM35B	null	crimp earth (earth point number 35B)
MC13	null	body earth point number 13
MC14A	null	body earth point number 14
MC35	null	body earth point number 35
MM01A	null	engine earth point number 01A