


vehicle : 301		VIN: VF3DDNFPTGJ721797 / OPR : 14466	
domain	protections and doors	function	electric window
component			


principle

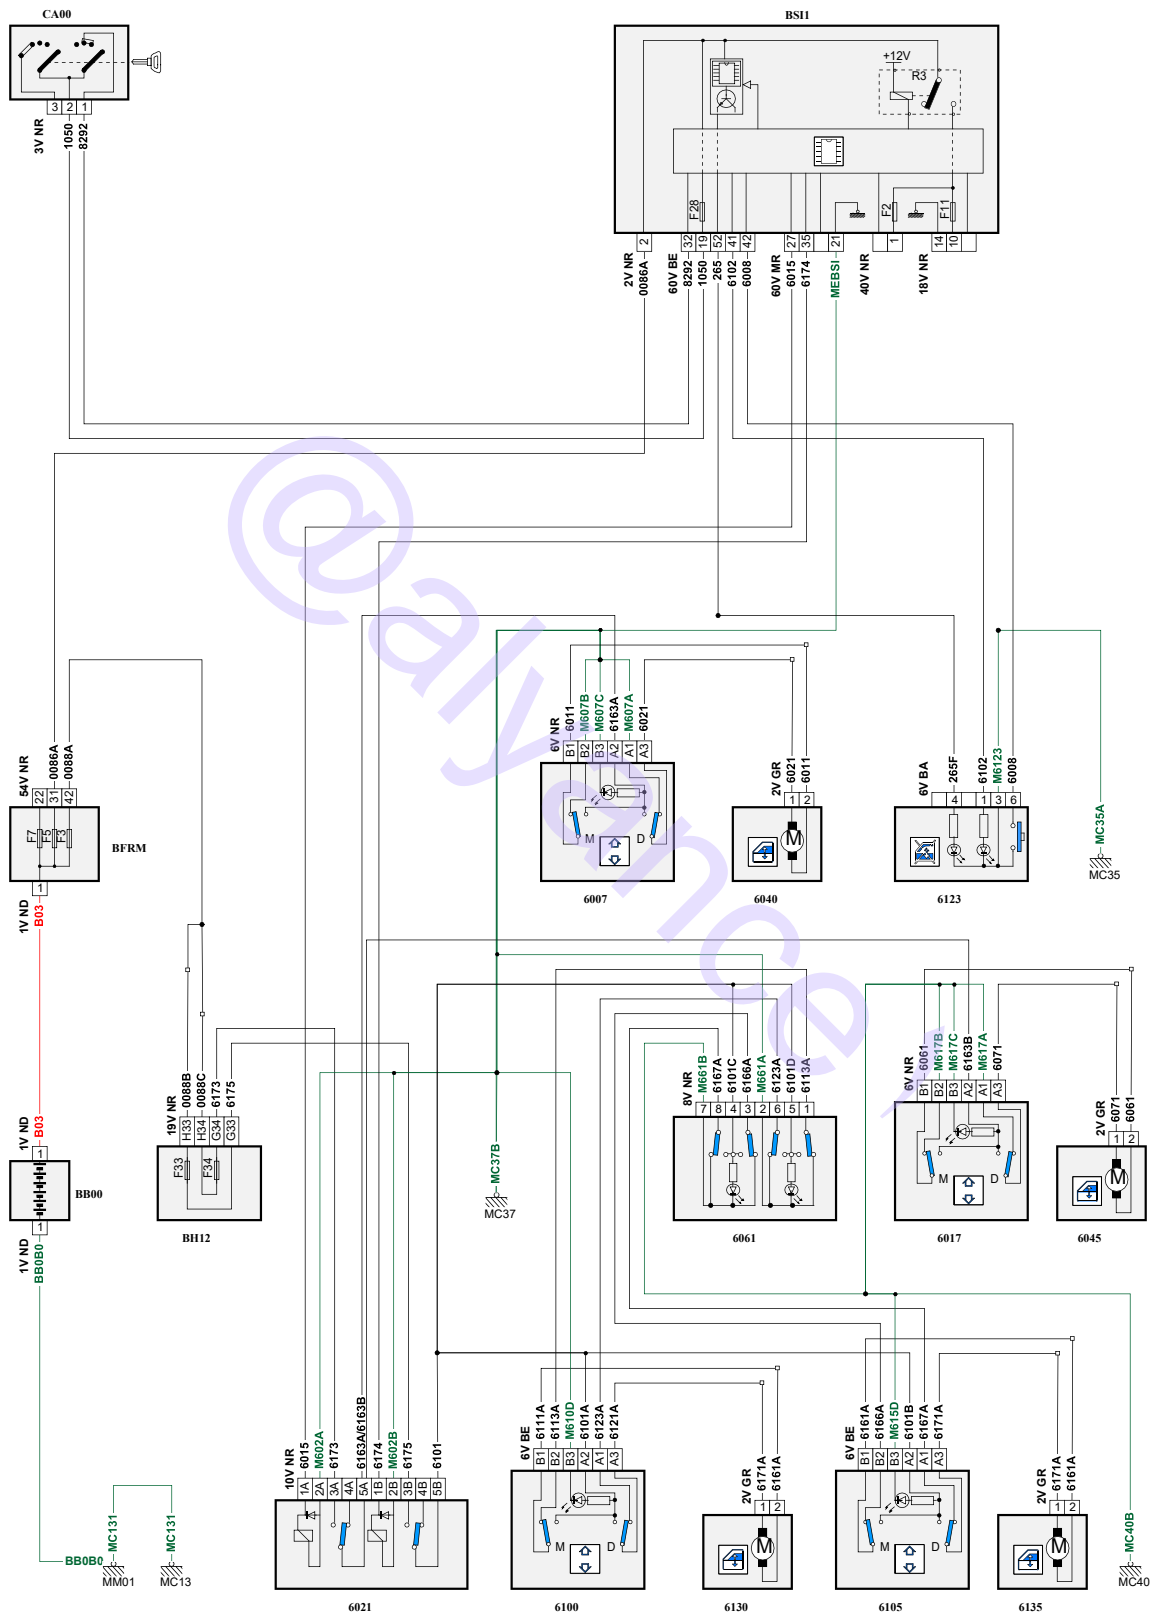

item code	description	information
6007	null	driver's electric window switch, driver's side
6017	null	front passenger's electric window switch /
6021	null	electric windows relay
6040	null	driver's electric window motor
6045	null	front passenger door electric window reduction motor
6061	null	double module electric window control
6100	null	left rear electric window switch
6105	null	right rear electric window switch
6123	null	Rear window neutralisation command
6130	null	rear left door electric window reduction motor
6135	null	rear right door electric window reduction motor
BB00	null	ancillaries battery
BFRM	null	engine fuse and relay box
BH12	null	passenger compartment fuse box /, 12 fuses
BSI1	null	built-in systems interface
CA00	null	ignition switch
E265A	null	crimp one information (or equipotential 265A) wire
E611	null	crimp one information (or equipotential 611) wire
EB88A	null	splice of a "battery +" protected by fuse no. 88A
EM35A	null	crimp earth (earth point number 35A)
EM37A	null	crimp earth (earth point number 37A)
EM37B	null	crimp earth (earth point number 37B)
EM40B	null	crimp earth (earth point number 40B)
MC13	null	body earth point number 13
MC35	null	body earth point number 35
MC37A	null	body earth point number 37A
MC40A	null	body earth point number 40
MM01	null	engine earth point number 01

vehicle : 301	VIN: VF3DDNFPTGJ721797 / OPR : 14466		
domain	protections and doors	function	electric window
component			

wiring

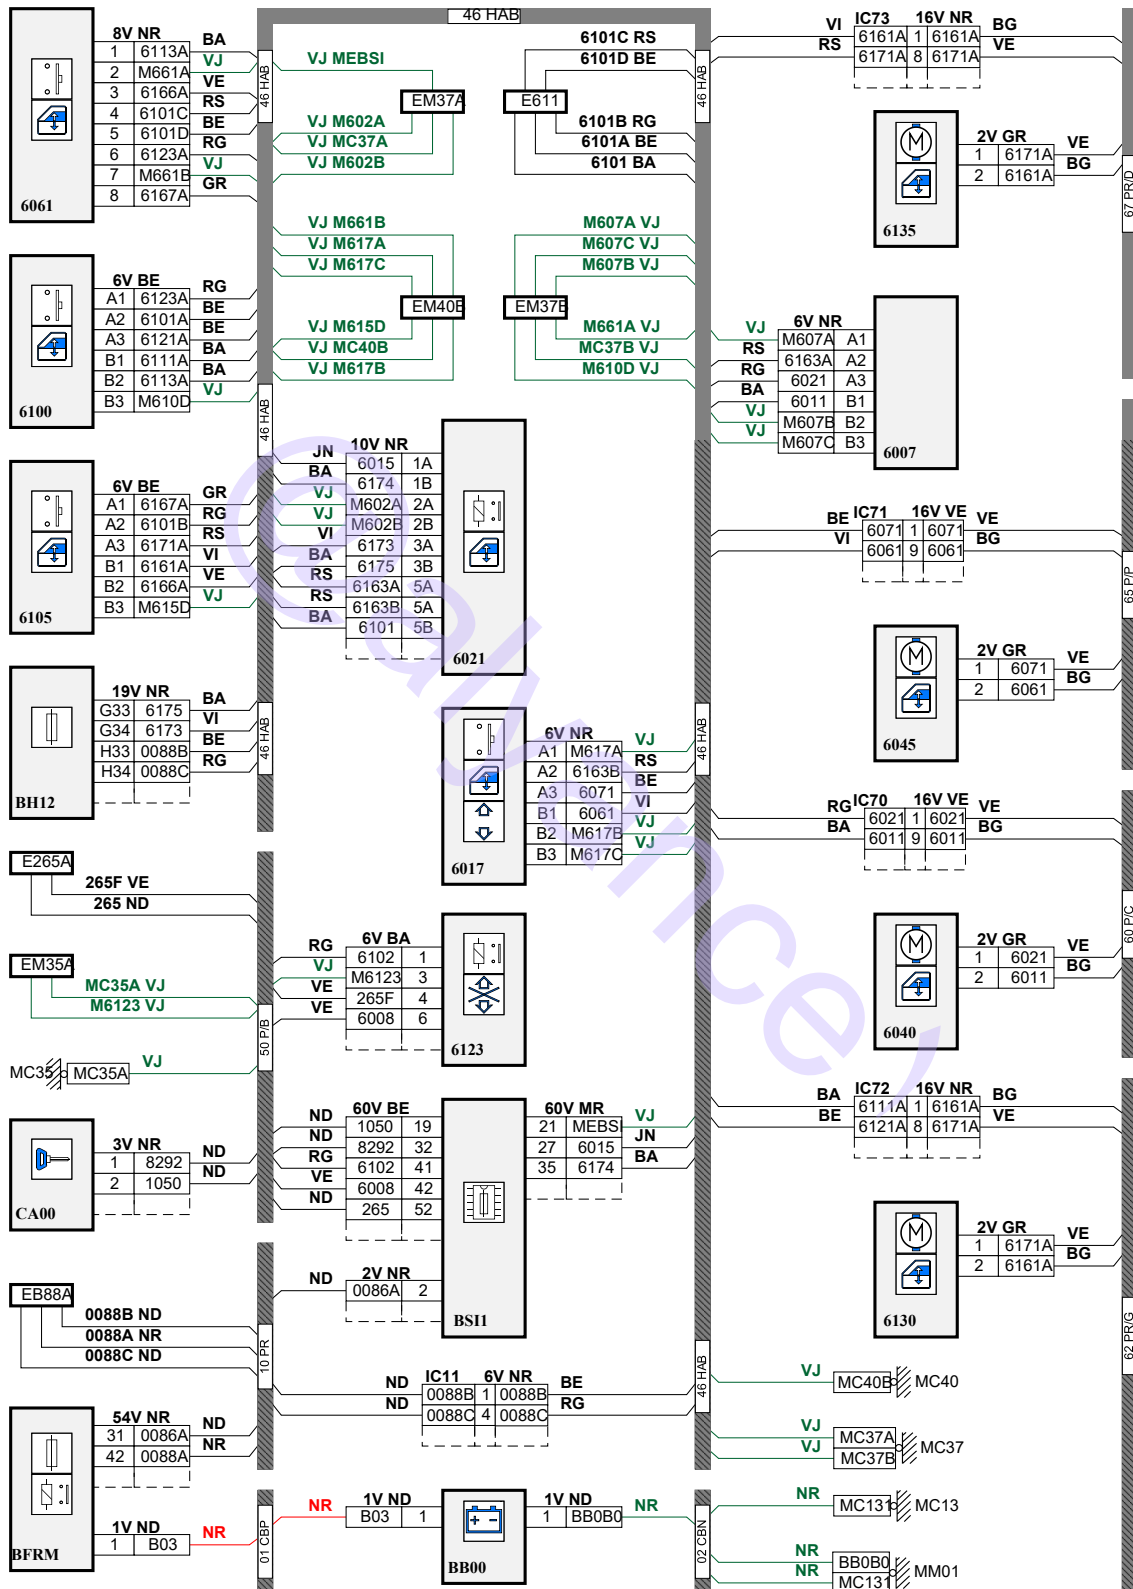

item code	description	information
6007	null	driver's electric window switch, driver's side
6017	null	front passenger's electric window switch /
6021	null	electric windows relay
6040	null	driver's electric window motor
6045	null	front passenger door electric window reduction motor
6061	null	double module electric window control
6100	null	left rear electric window switch
6105	null	right rear electric window switch
6123	null	Rear window neutralisation command
6130	null	rear left door electric window reduction motor
6135	null	rear right door electric window reduction motor
BB00	null	ancillaries battery
BFRM	null	engine fuse and relay box
BH12	null	passenger compartment fuse box /, 12 fuses
BSI1	null	built-in systems interface
CA00	null	ignition switch
E265A	null	crimp one information (or equipotential 265A) wire
E611	null	crimp one information (or equipotential 611) wire
EB88A	null	splice of a "battery +" protected by fuse no. 88A
EM35A	null	crimp earth (earth point number 35A)
EM37A	null	crimp earth (earth point number 37A)
EM37B	null	crimp earth (earth point number 37B)
EM40B	null	crimp earth (earth point number 40B)
MC13	null	body earth point number 13
MC35	null	body earth point number 35
MC37A	null	body earth point number 37A
MC40A	null	body earth point number 40
MM01	null	engine earth point number 01