


Central Electrical Box Relay Layout


• Under steering wheel inside cabine ý

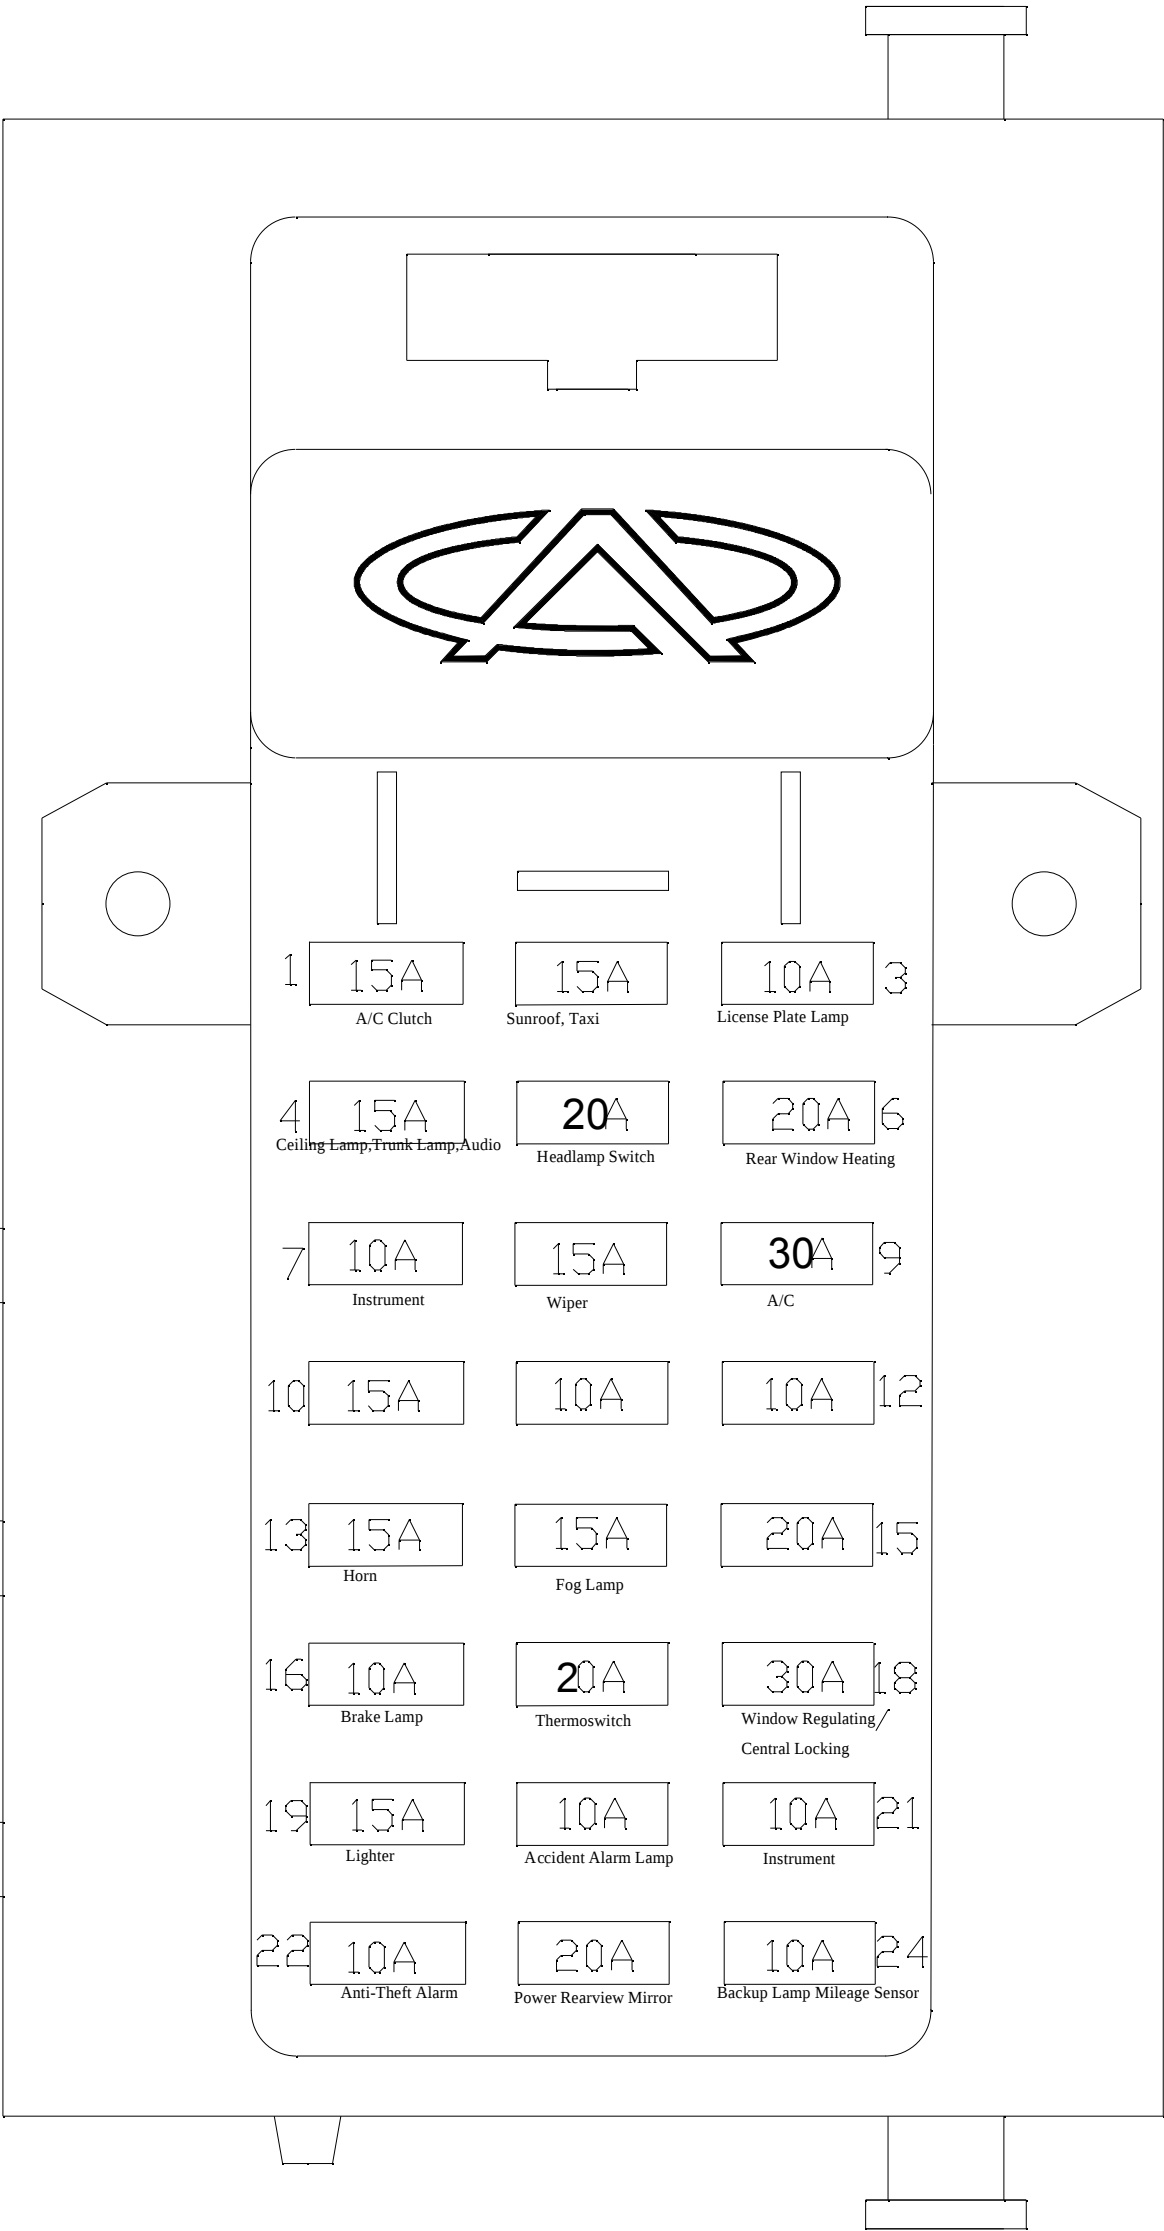

Relays & Fuses Layout

Radiator Fan Control


(I) By Washer Fluid Reservoir

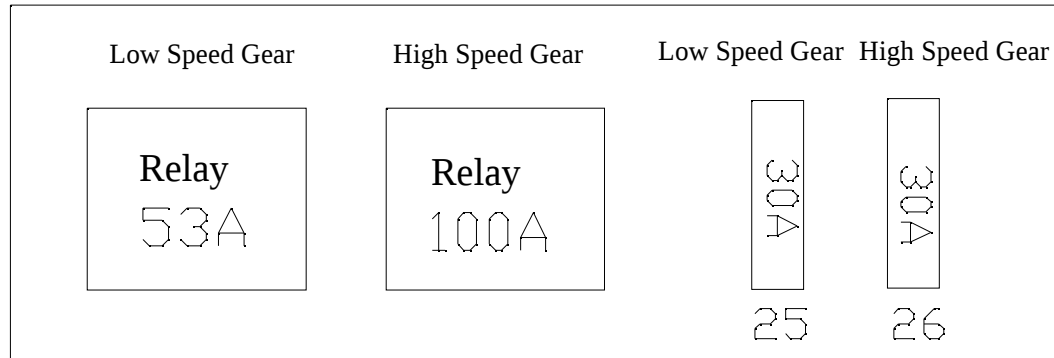

Note: Fuse 50A with double fans at high speed


Relay Box Fuse Layout

(II) Right Side of Engine Hood

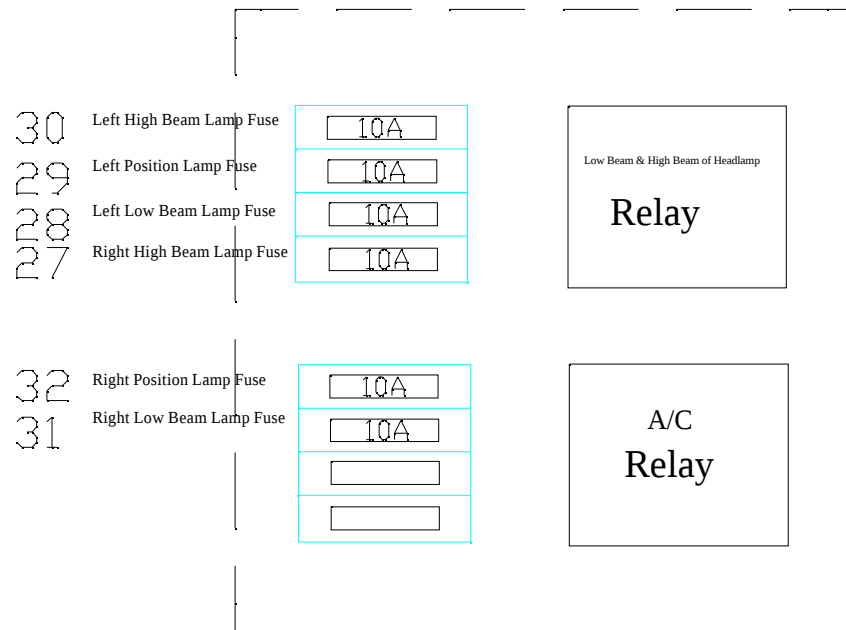


Central Electrical Box Fuse Layout


(under steering wheel inside cabin)

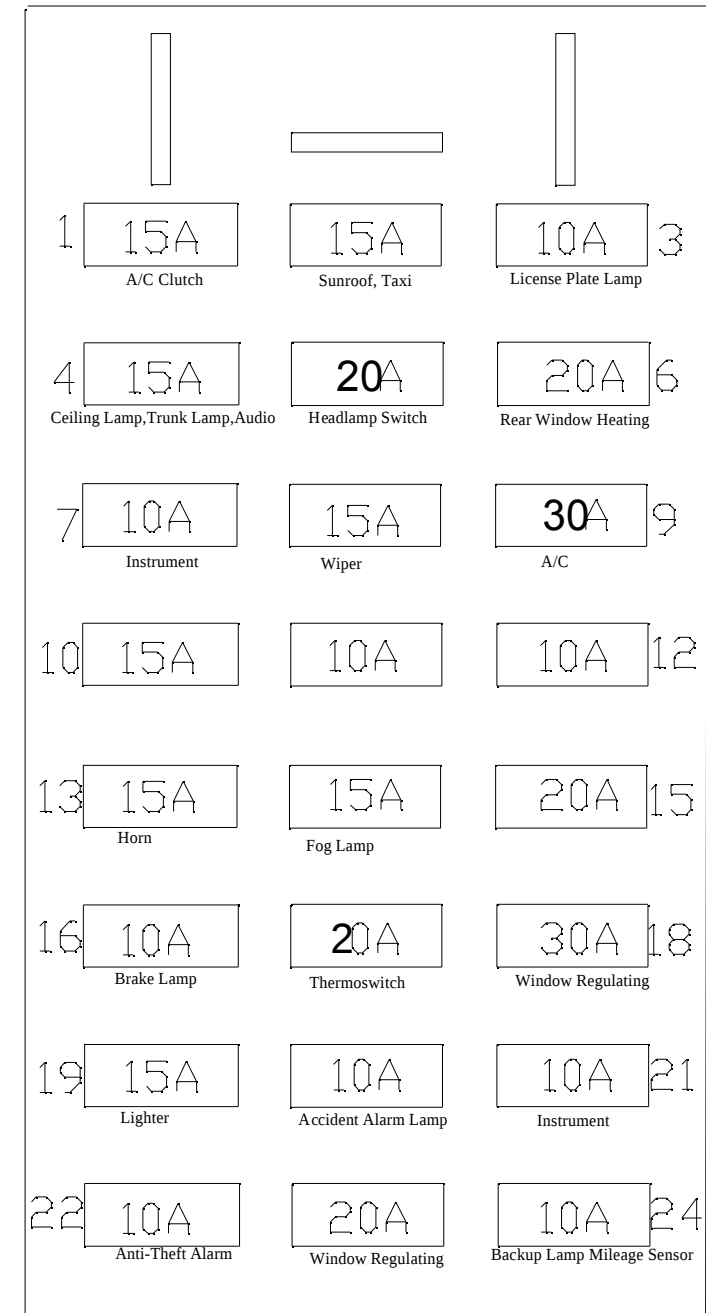

Central Electrical Box Plug-in Parts Layout

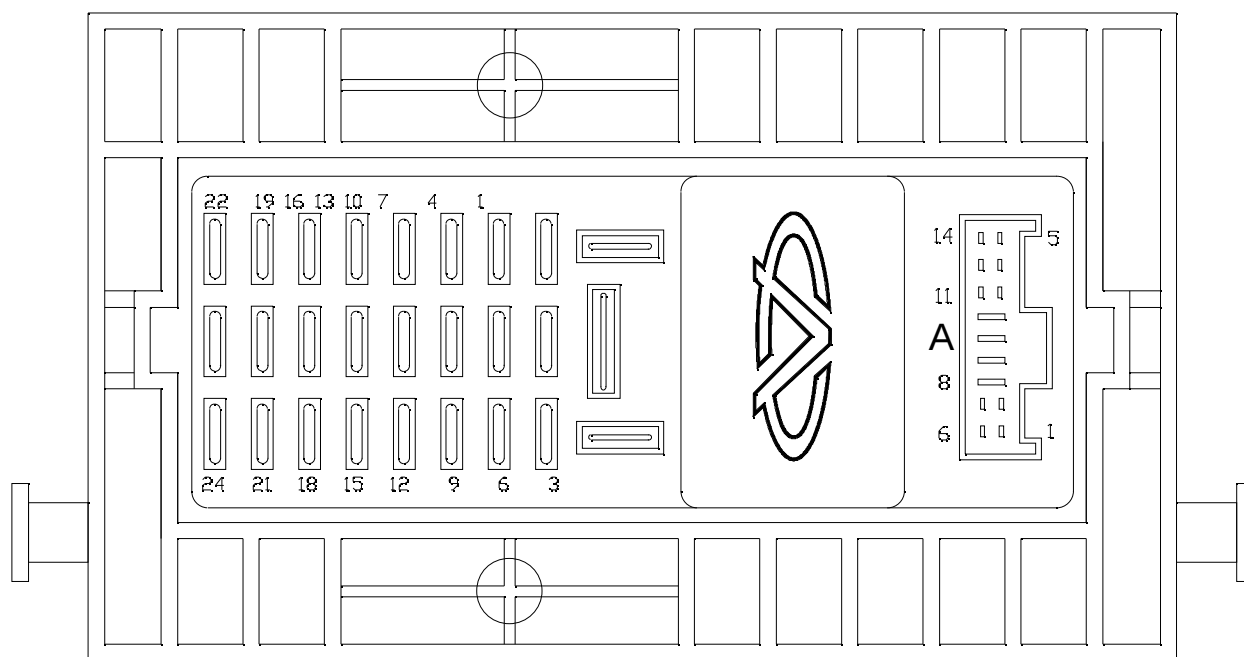

• Front View ý

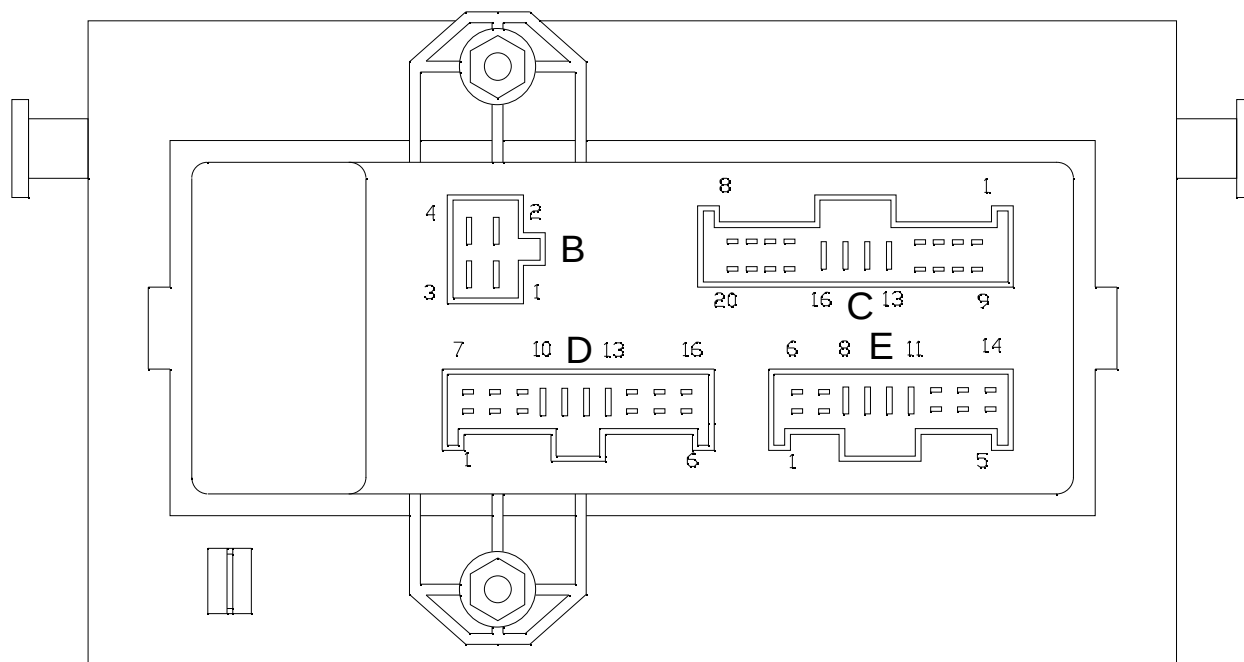

• Back View ý


کدها و توصیف عملکرد اجزای کانکتور الکتریکی مرکزی

کد مدار	عملکرد پین های کانکتور	کد قطعه کانکتور
—	01- دریچه سقفی	A
138	02- سیگنال ورودی ECU تهویه مطبوع	
—	03- ———	
247	04- دسته سیم چراغ ، رادیو ، چراغ سقفی	
—	05- ———	
—	06- ———	
—	07- ———	
—	08- ———	
134	09- گرمکن شیشه عقب ، محافظ یخ زدگی آینه	
—	10- ———	
132	11- سوئیچ پرژکتور ، تغذیه عیب یاب	
—	12- ———	
114	13. اندازه گیر مجموعه تغذیه کننده آند	
192	14- سوئیچ چراغ ترمز	
—	01- ———	B
—	02- ———	
—	03- ———	
51	04- رله A/C بخاری ، مدارات مربوطه داخلی	
142	01. کلید بوق	C
219	02- رله مه شکن	
220	03- کلید مه شکن	
140	04 سیگنال رله بوق	
141	05- بوق دو صدایی	
154	06- موتور برف پاکن	
209	07- جلو آمپر ، کلید پرژکتور ، چراغ دنده عقب	
83	09- ———	
152	10- ———	
—	11- ———	
—	12- رله مه شکن	
215	13- ———	
—	14- ———	
47	15- سوئیچ حرارتی . سوئیچ فشار بالای تهویه مطبوع	
6		
—		
149		
210		

	16-منبع تغذیه الکتریکی مرکزی 17----- 18-رله متناوب برف پاک کن 19- چراغ صفحه پلاک 20-سنسور سرعت	81
D	01----- 02-فندک 03-کلید چرخشی چراغ ، کلید تنظیم چراغ جلو 04----- 05-اندازه گیر مجموعه آند 06-سانروف (دریچه سقفی) 07-سیم اتصال بدنه 08----- 09-سوئیچ آینه دید عقب ، رگولاتور مدول تعویض دنده 10-سوئیچ جرقه 11-کنترل یونیت قفل مرکزی 12-سوئیچ جرقه ، برف پاک کن 13-منبع تغذیه الکتریکی مرکزی 14----- 15----- 16-----	- 129 175 - 116 - 53 - - 272 14 260 8 10 - - 248
E	01----- 02----- 03----- 04-محرك كلاچ كمپرسور كولر 05--- 06---- 07---- 08-منبع تغذیه الکتریکی مرکزی 09-سوئیچ جرقه 10-کلید چراغ 11----- 12-رله بوق 13----- 14-----	- - - 137 - - - 5 9 207 - 139 - -

NO.3


Explanatory Description on This *Circuit Diagram Manual*

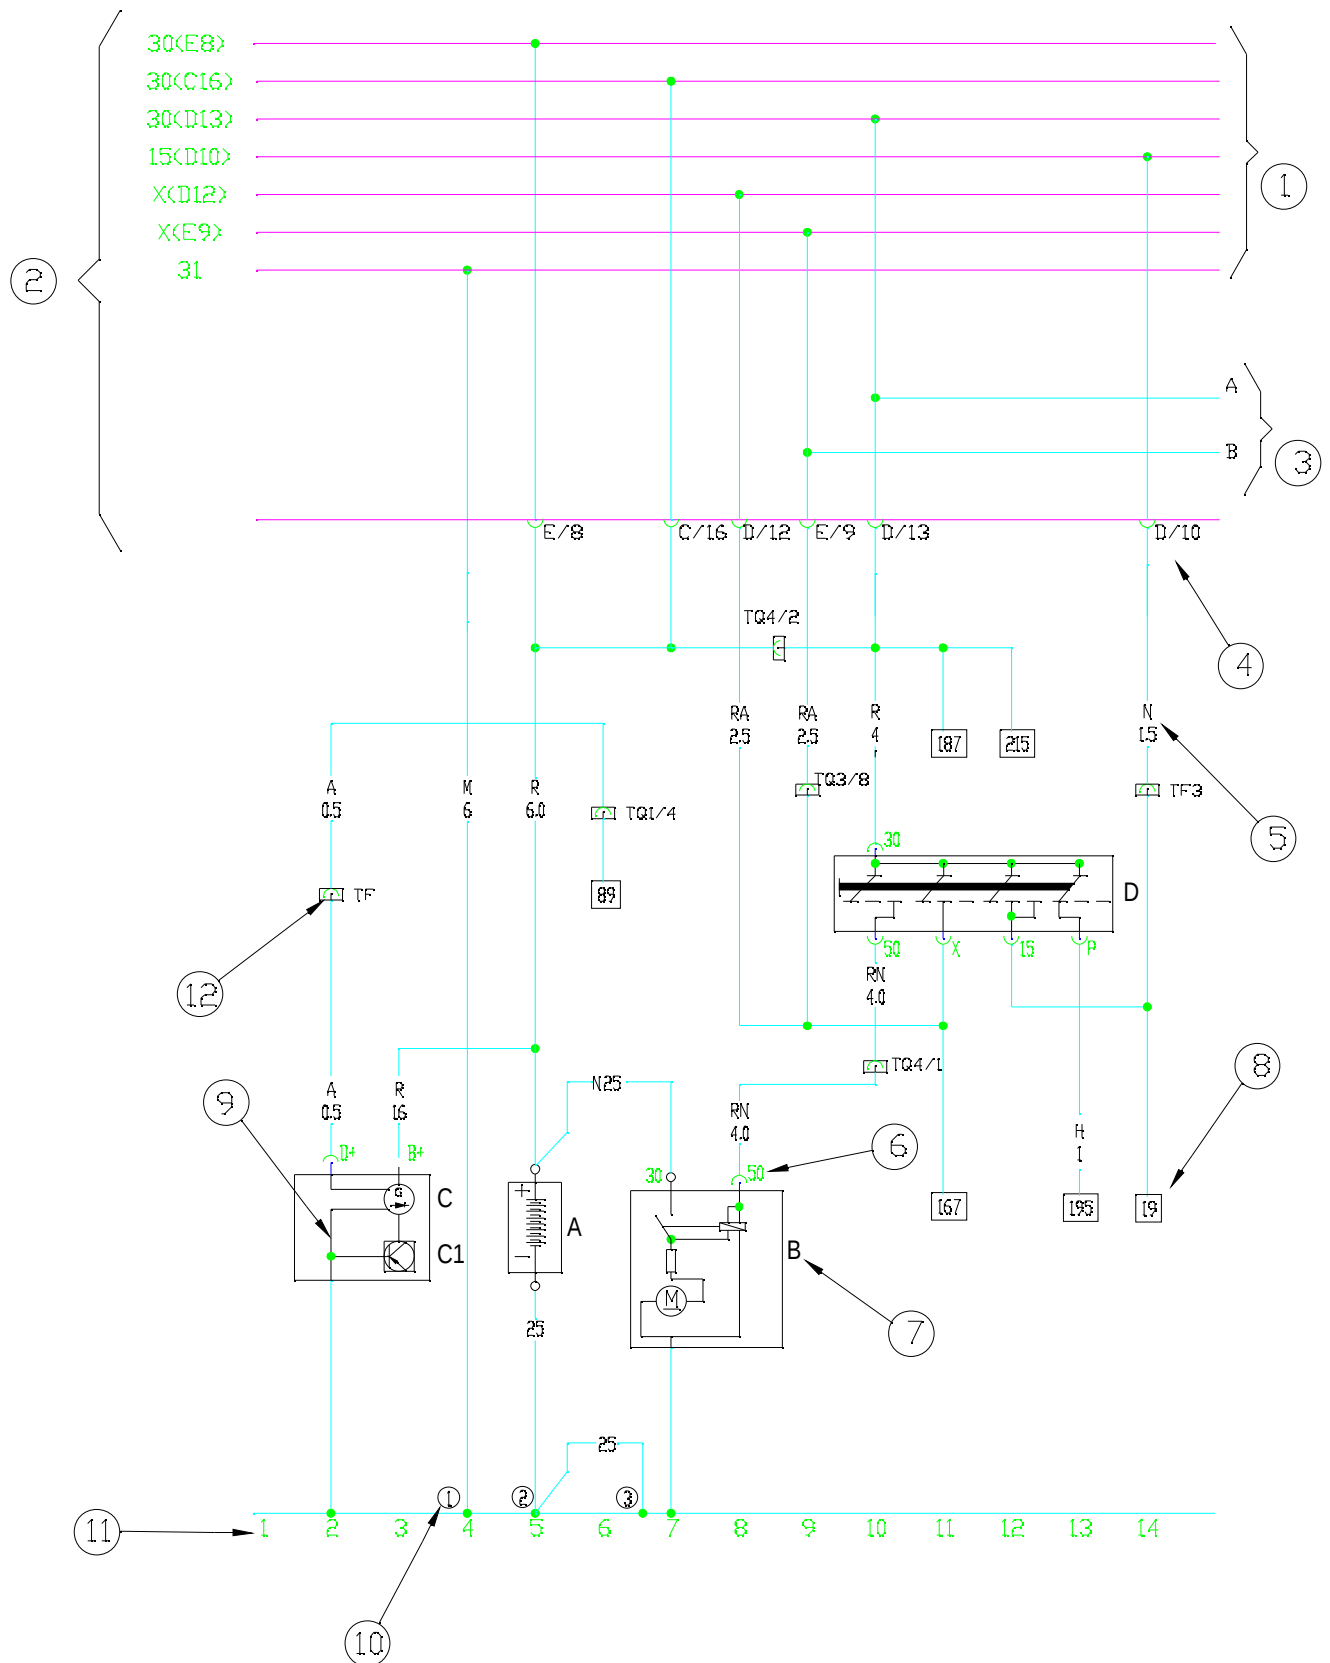

30 (E08)
30 (C16)
30 (D13)
15 (D10)
X (D12)
X (E09)
58b (RHEO)




A/C System

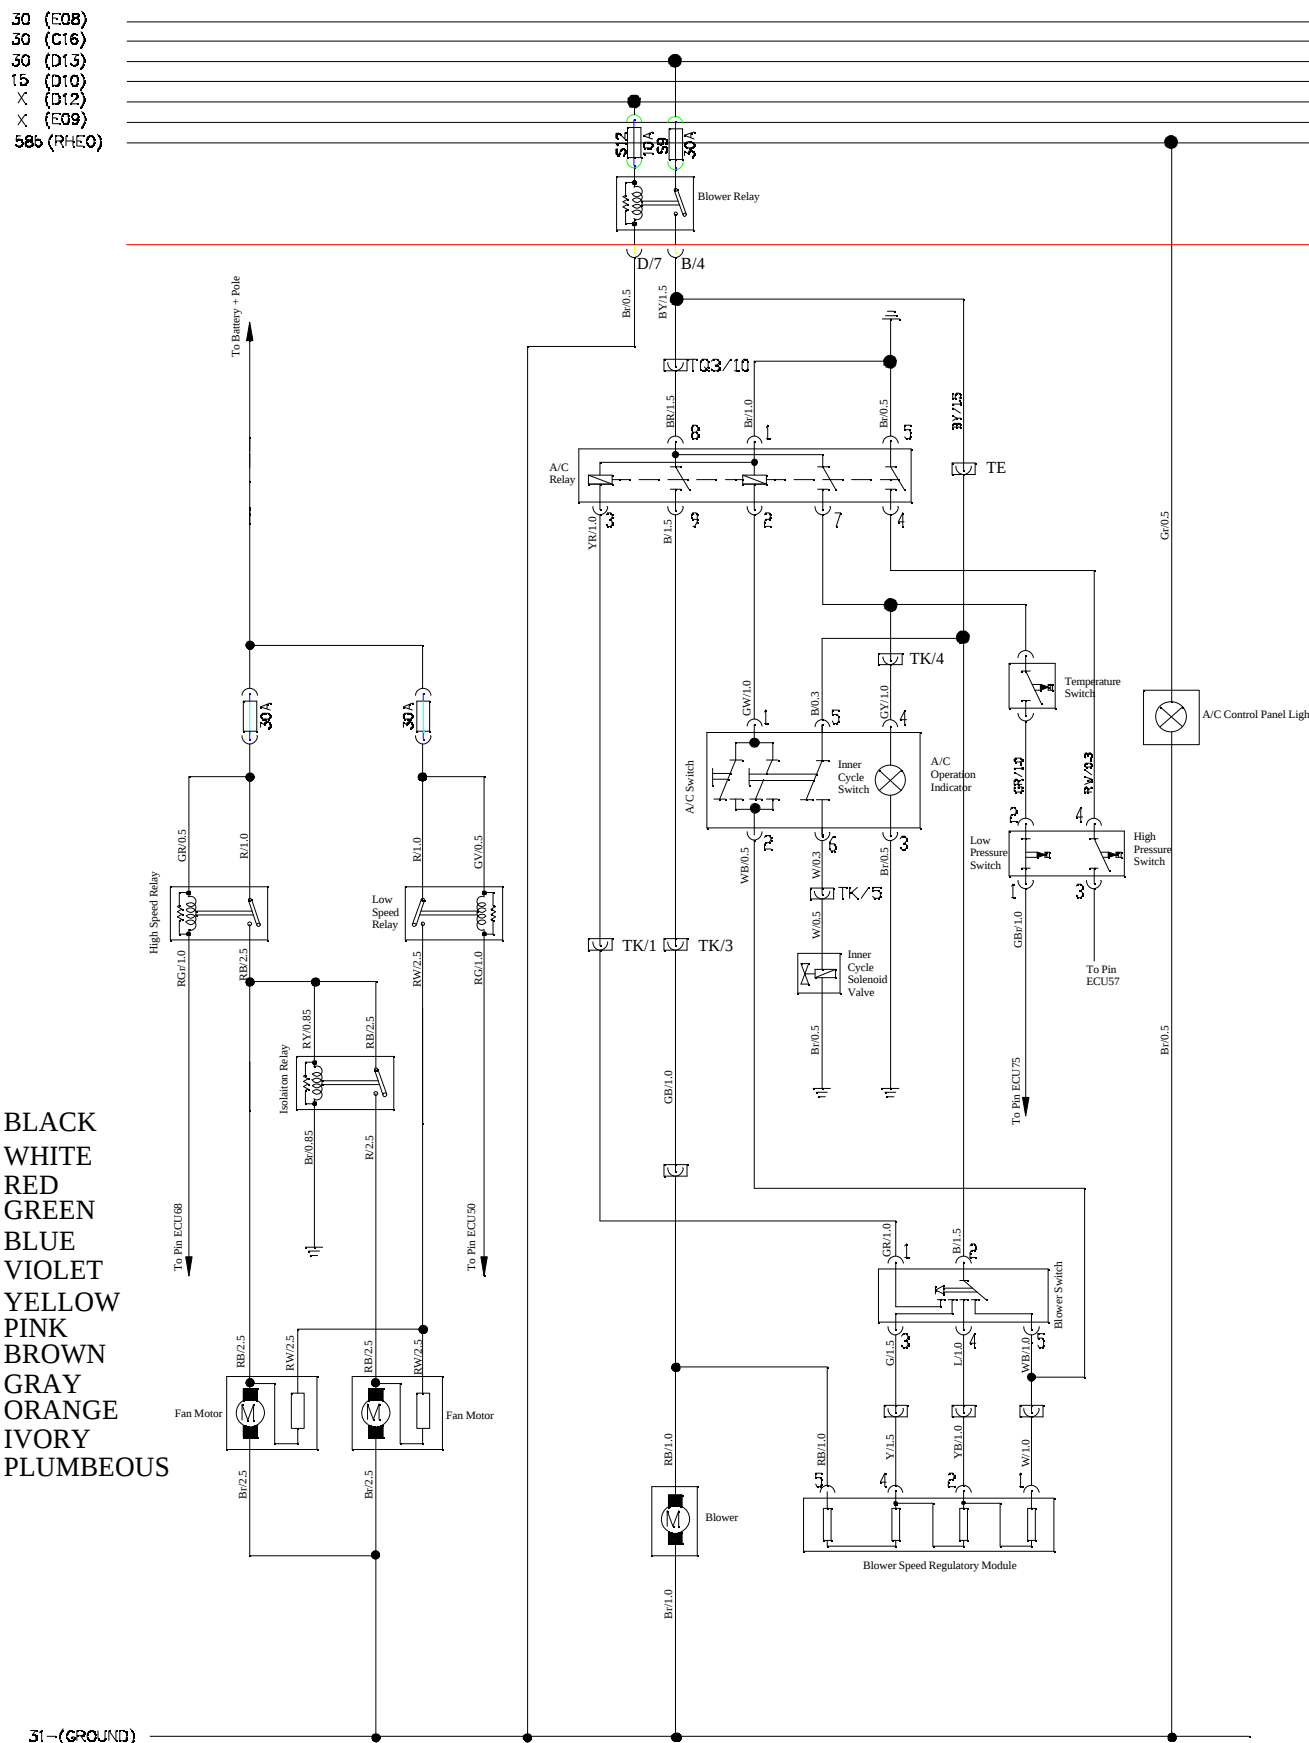


B = BLACK
W = WHITE
R = RED
G = GREEN
L = BLUE
V = VIOLET
Y = YELLOW
P = PINK
Br = BROWN
Gr = GRAY
Or = ORANGE
Lg = IVORY
Pl = PLUMBEOUS


ABS

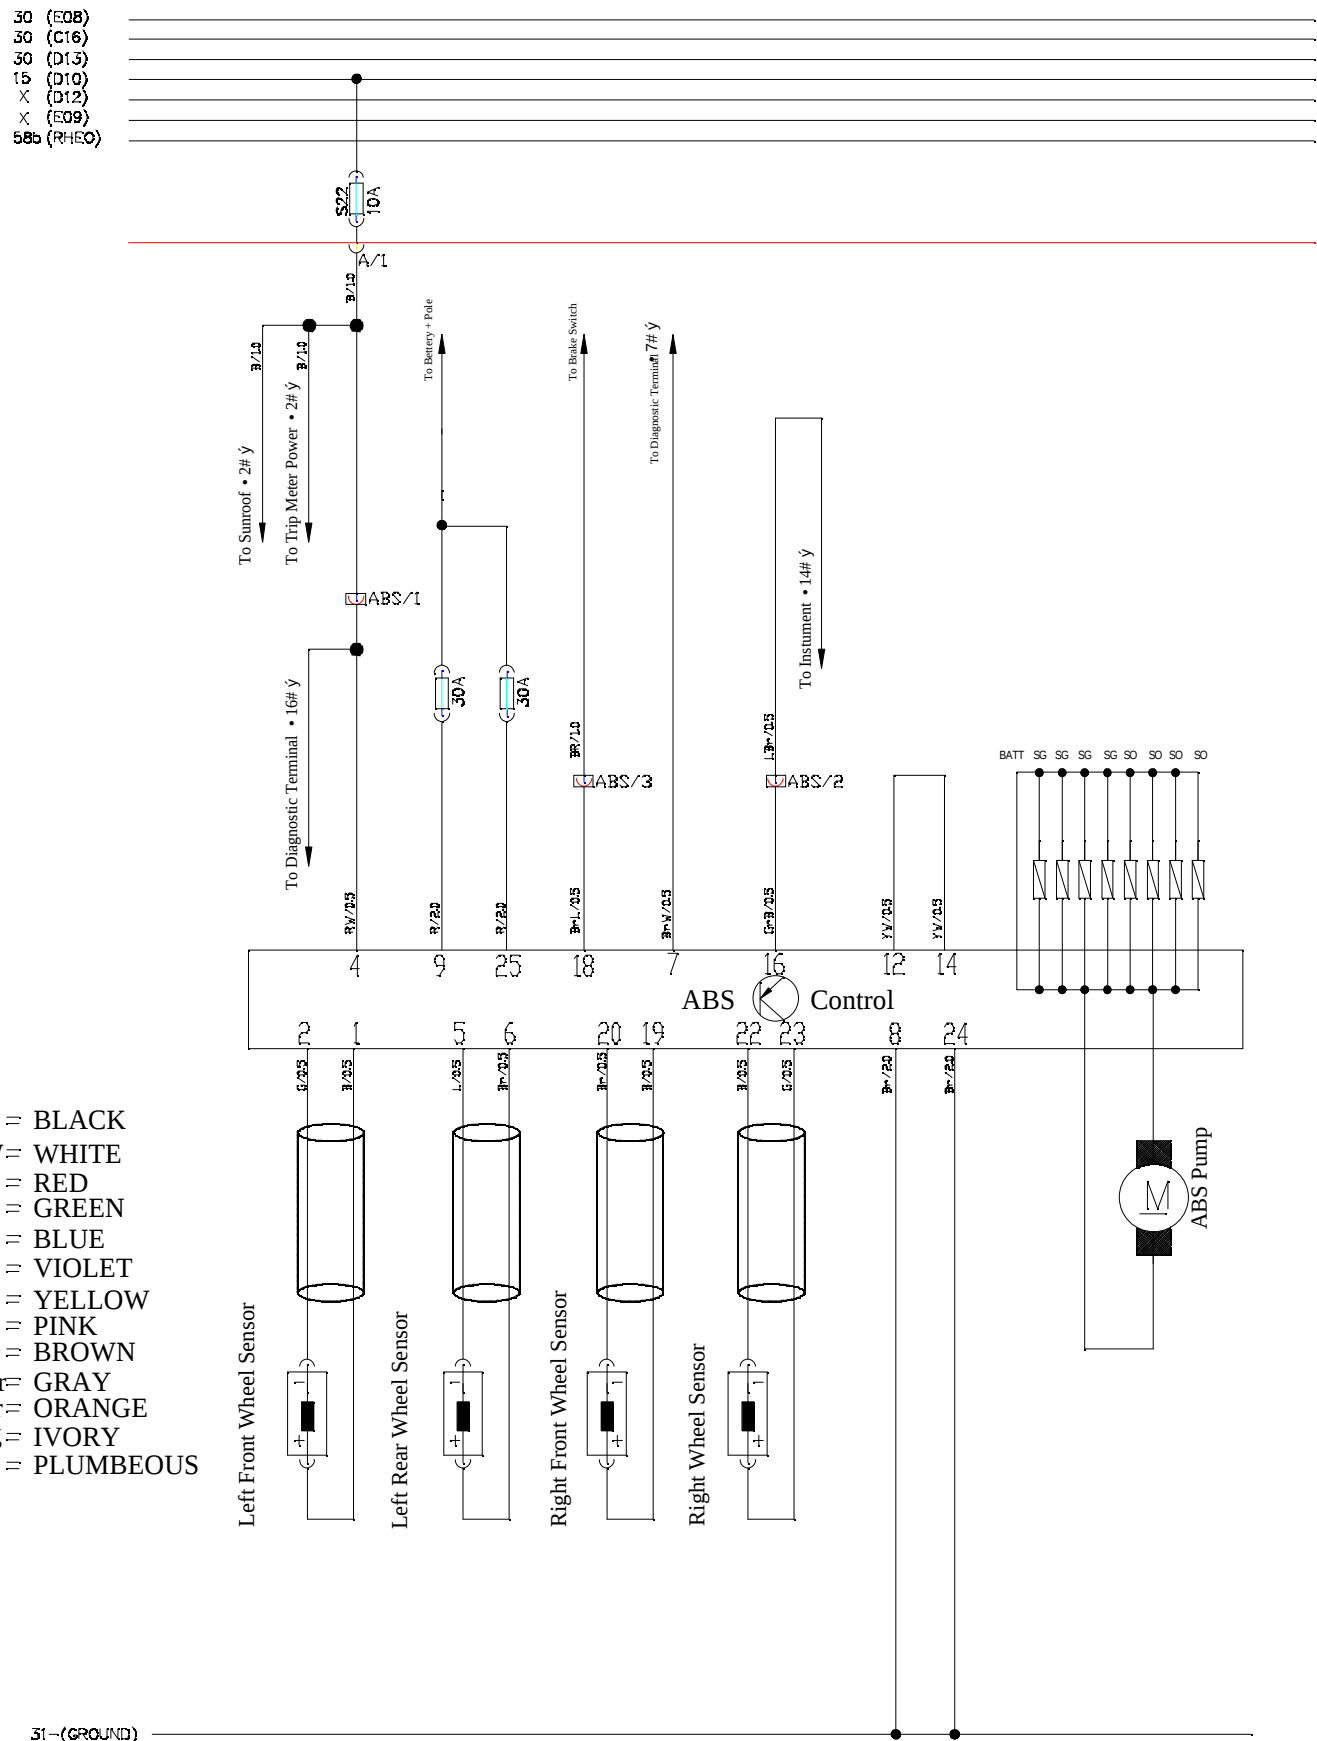

Instrument

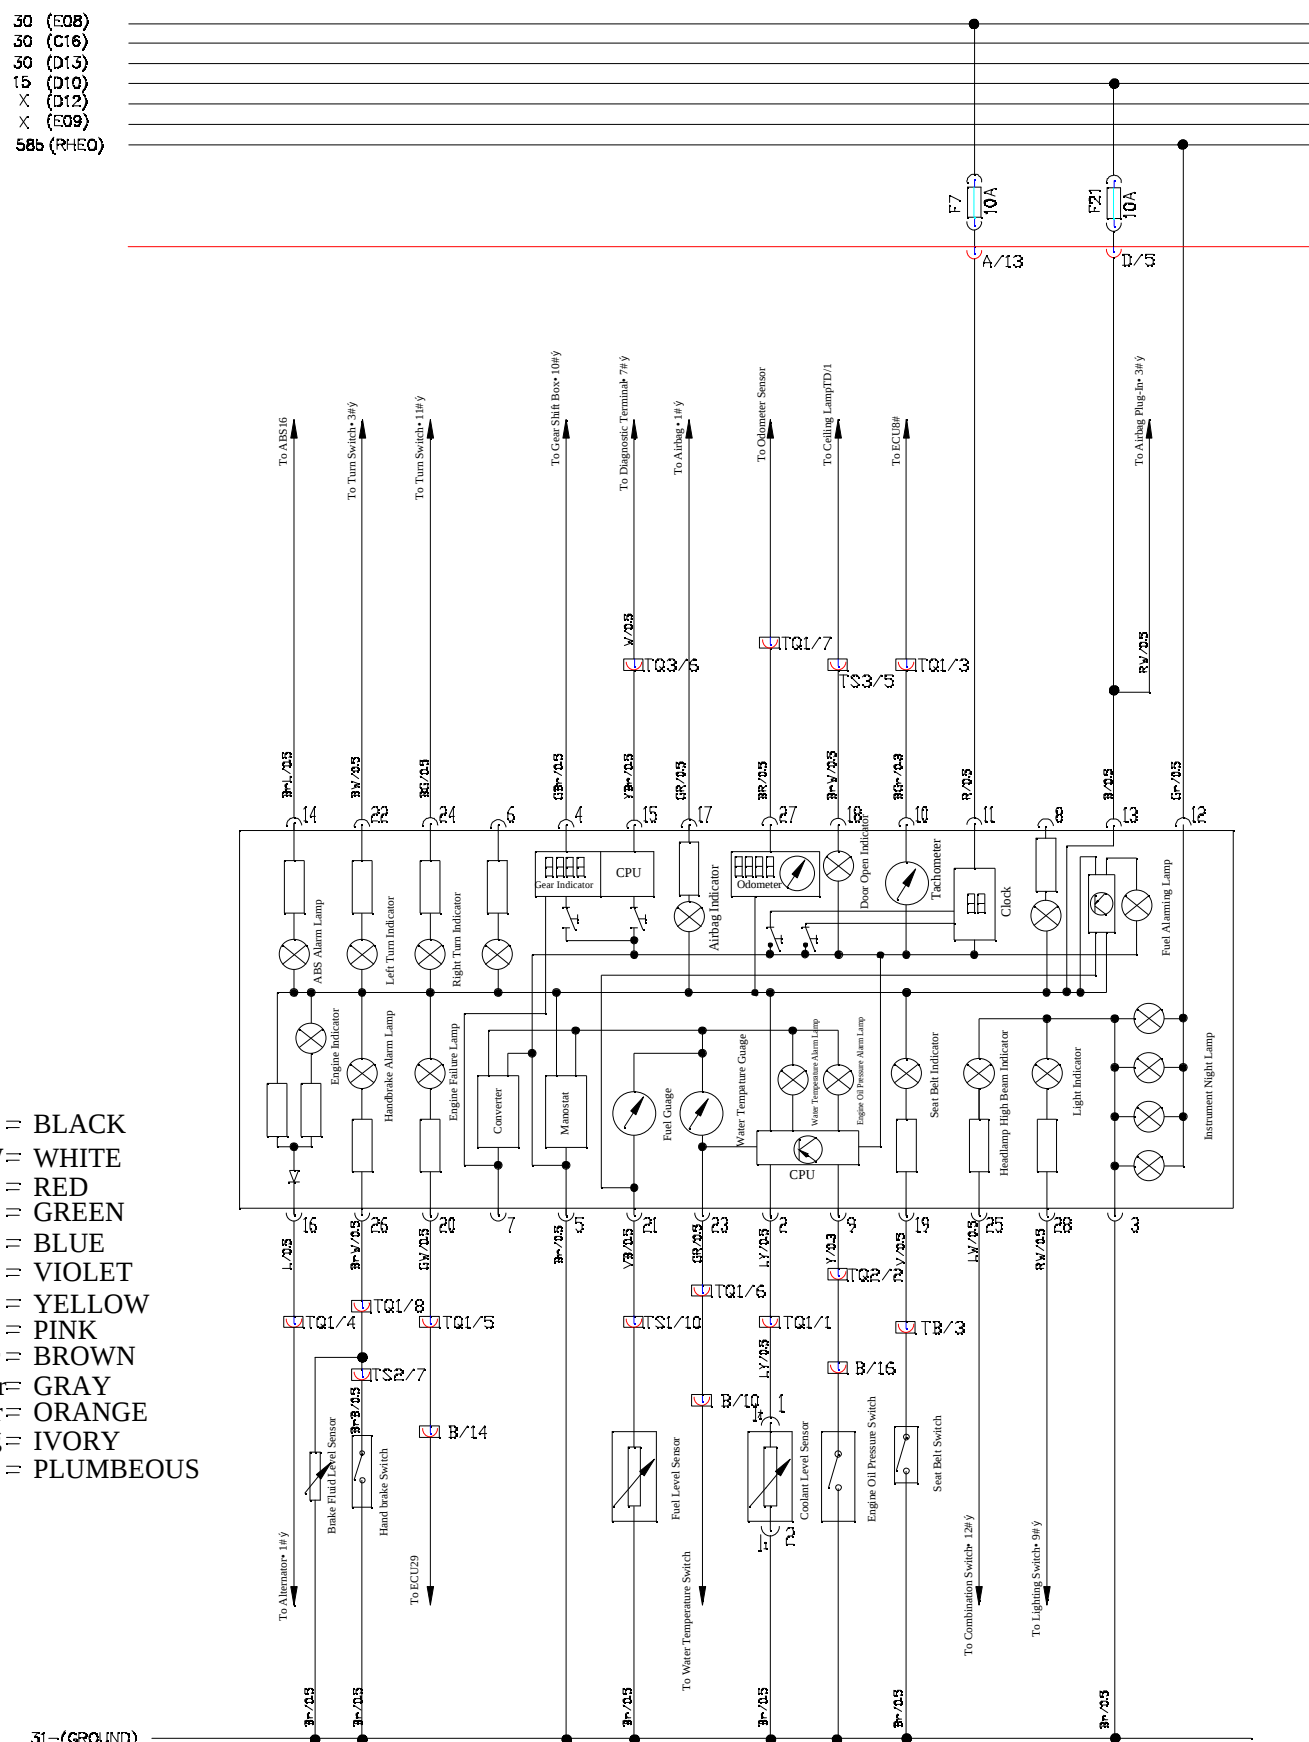


Audio System

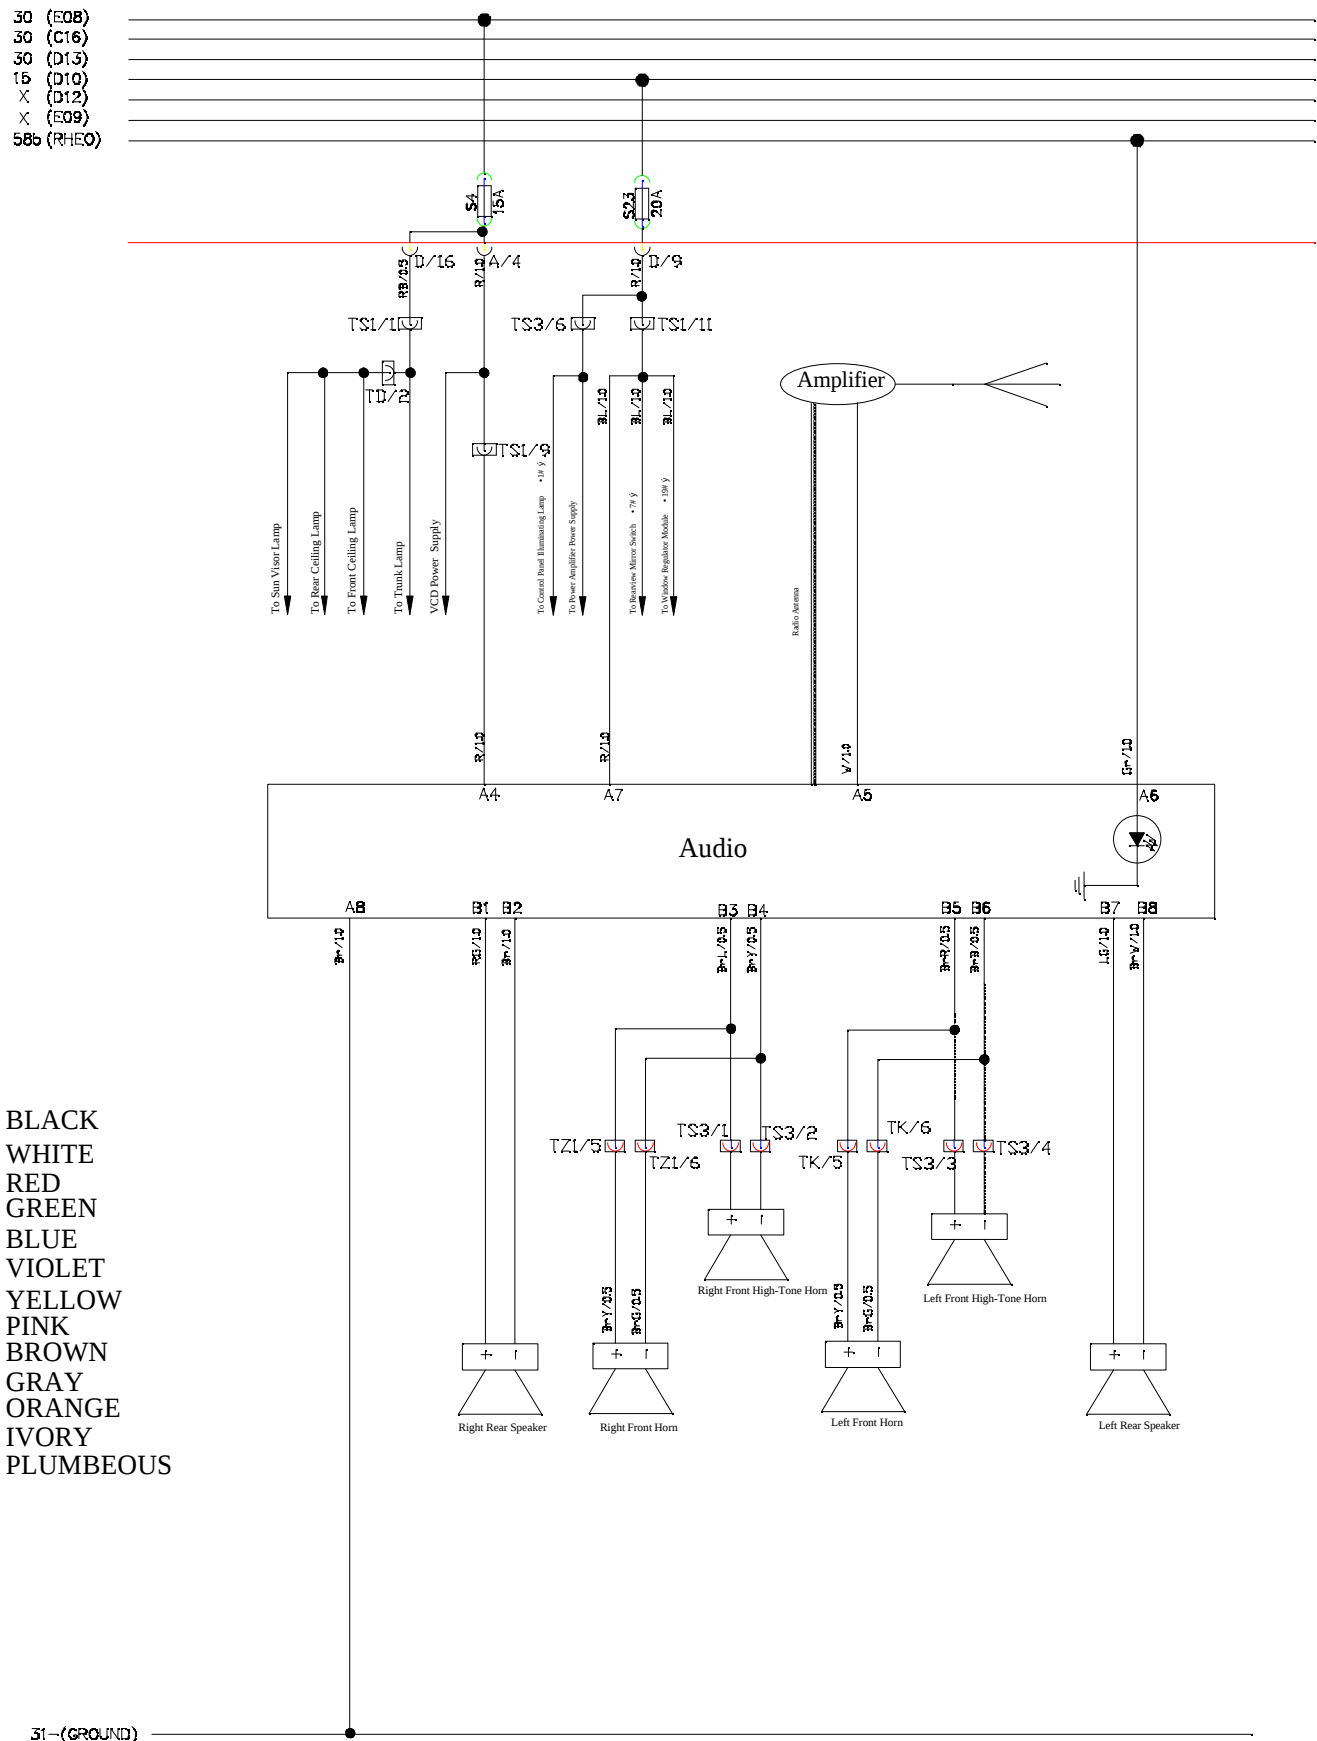


B = BLACK
W = WHITE
R = RED
G = GREEN
L = BLUE
V = VIOLET
Y = YELLOW
P = PINK
Br = BROWN
Gr = GRAY
Or = ORANGE
Lg = IVORY
Sb = PLUMBEOUS

[illegible]

Central Locking System

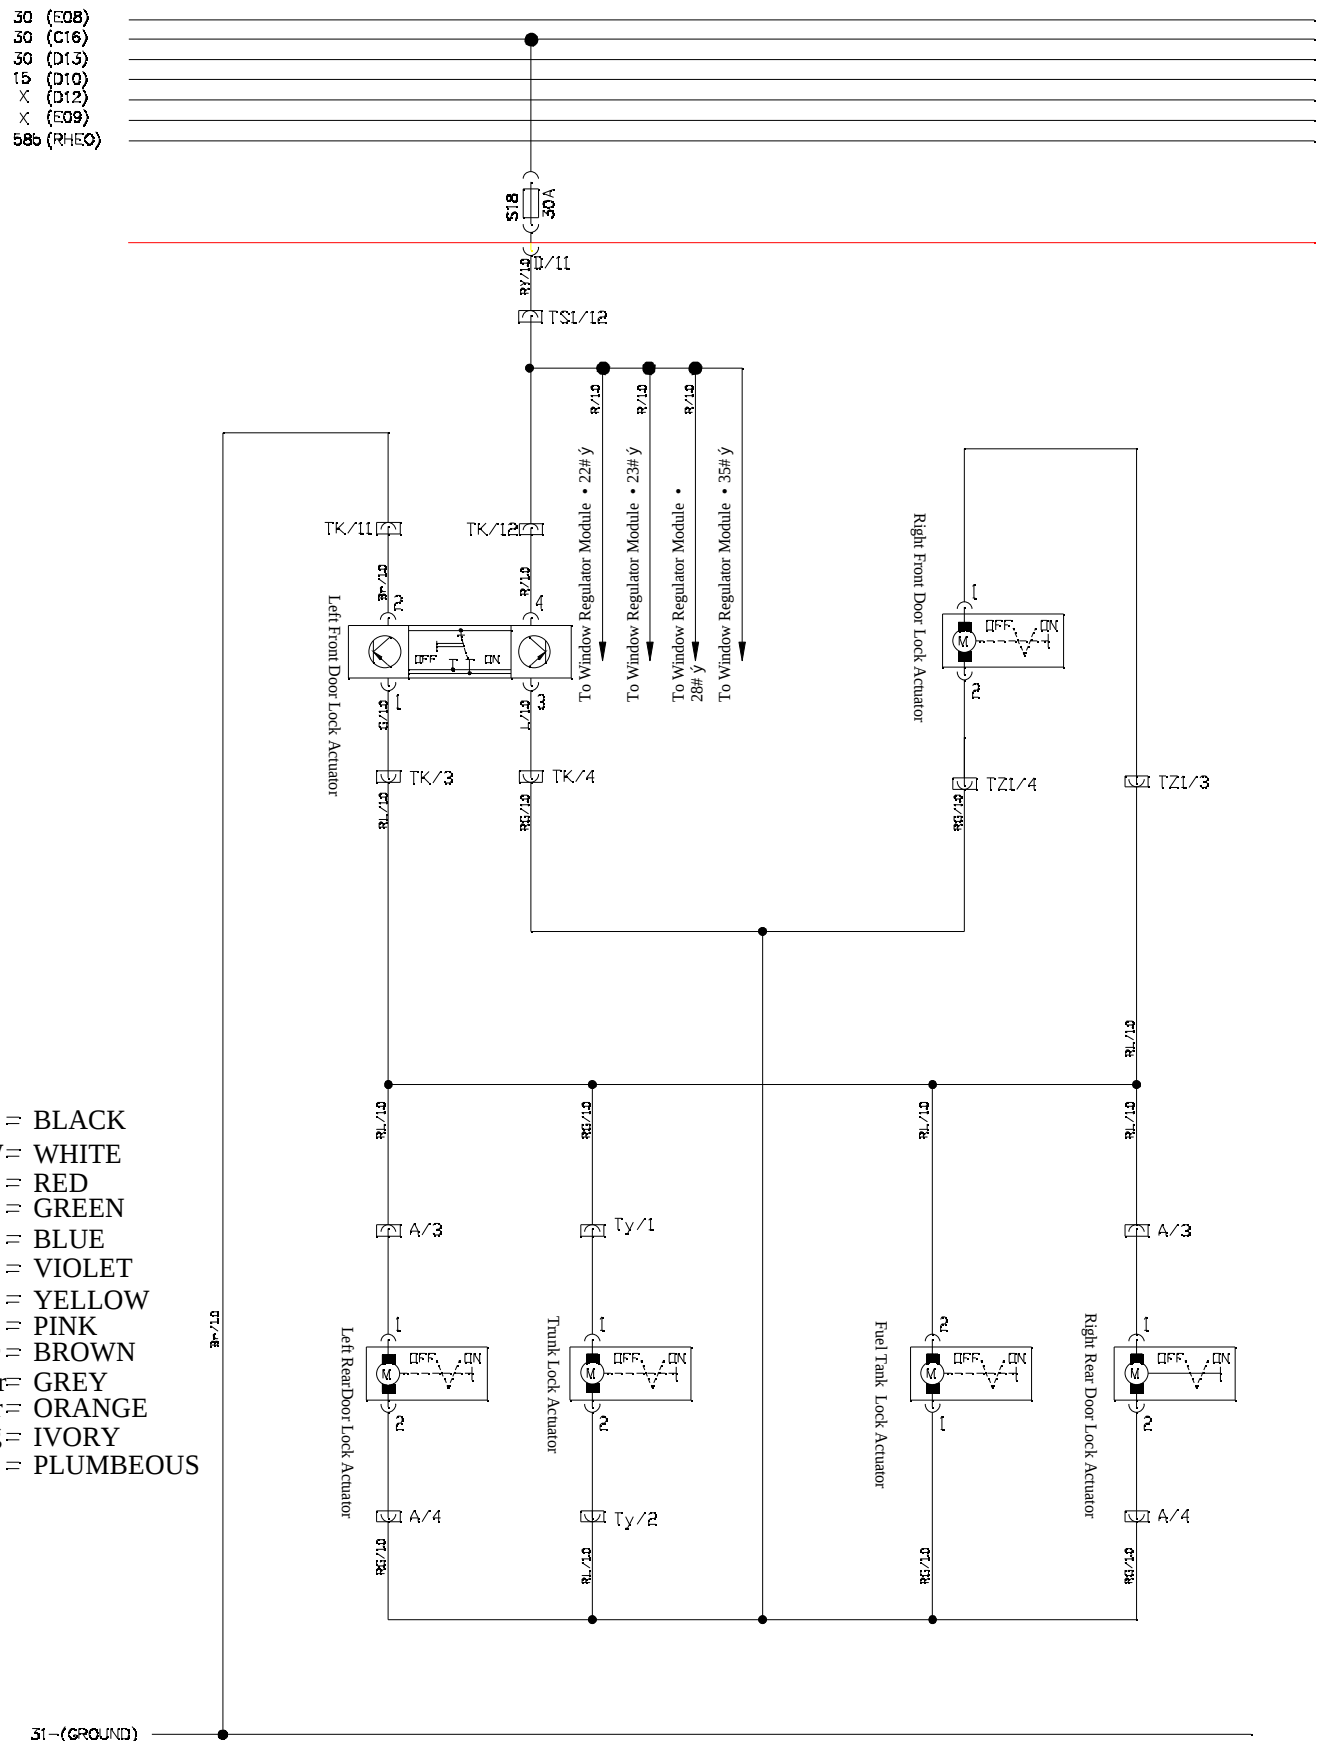

Power Rearview Mirror

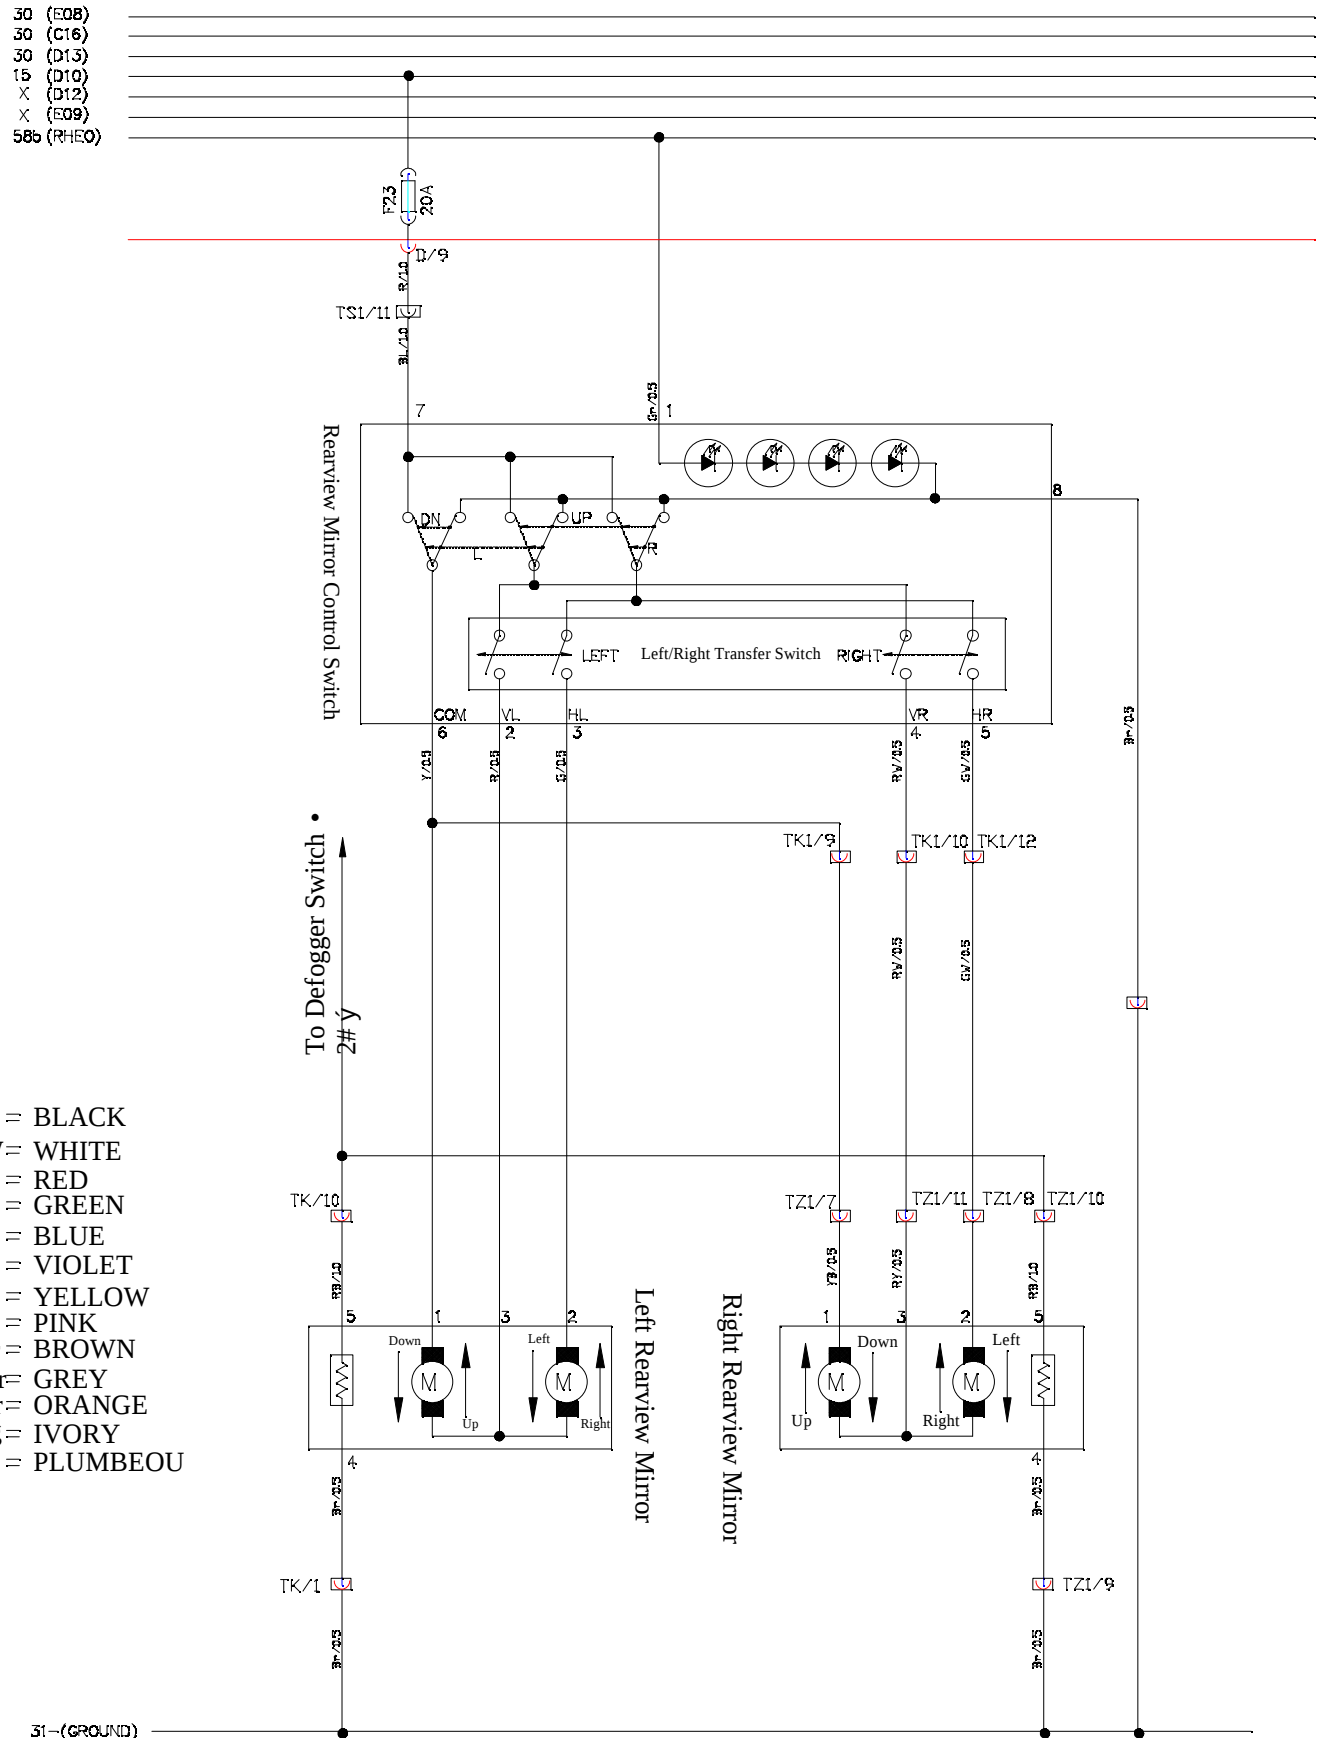


30 (E08)
30 (C16)
30 (D13)
15 (D10)
X (D12)
X (E09)
55b (RHEO)

31-(GROUND)


== BLACK
== WHITE
== RED
== GREEN
== BLUE
== VIOLET
== YELLOW
== PINK
== BROWN
== GREY
== ORANGE
== IVORY
== PLUMBEOUS

Diagram showing the wiring for the 1965 Ford Mustang's electrical system, including the ignition switch, reverse switch, brake switch, and various lamps (Trunk, Sun Visor, Front Ceiling, Rear Ceiling, High Mounted Brake, Backup, Brake, Trunk Touch Switch, Right Rear Door Touch Switch, Left Rear Door Touch Switch, Right Front Door Touch Switch, Left Front Door Touch Switch). It also includes a legend for wire colors and a note about the instrument cluster (To Instrument 27#).


Horn & Wiper

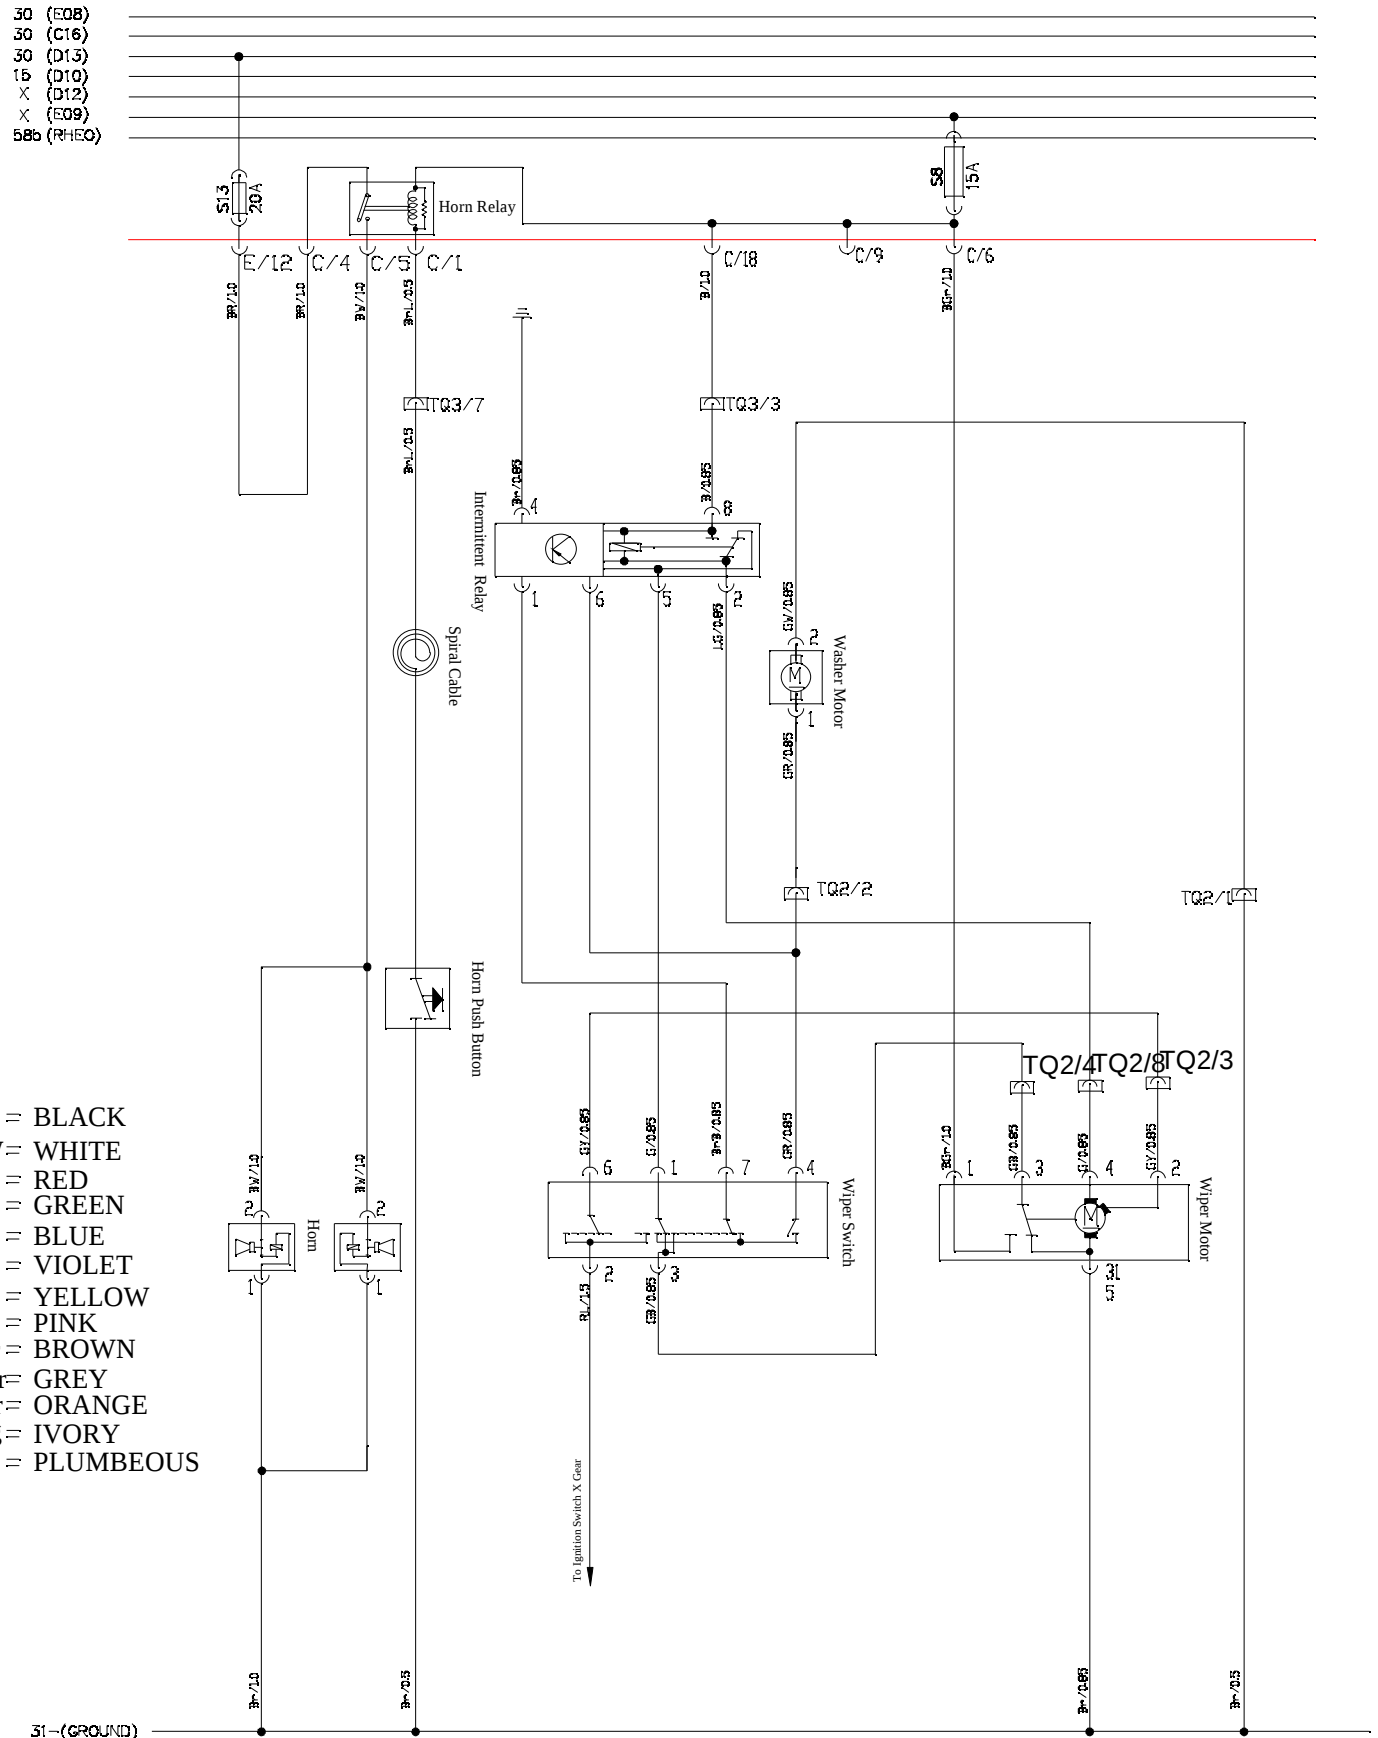

Lighting & Defroster

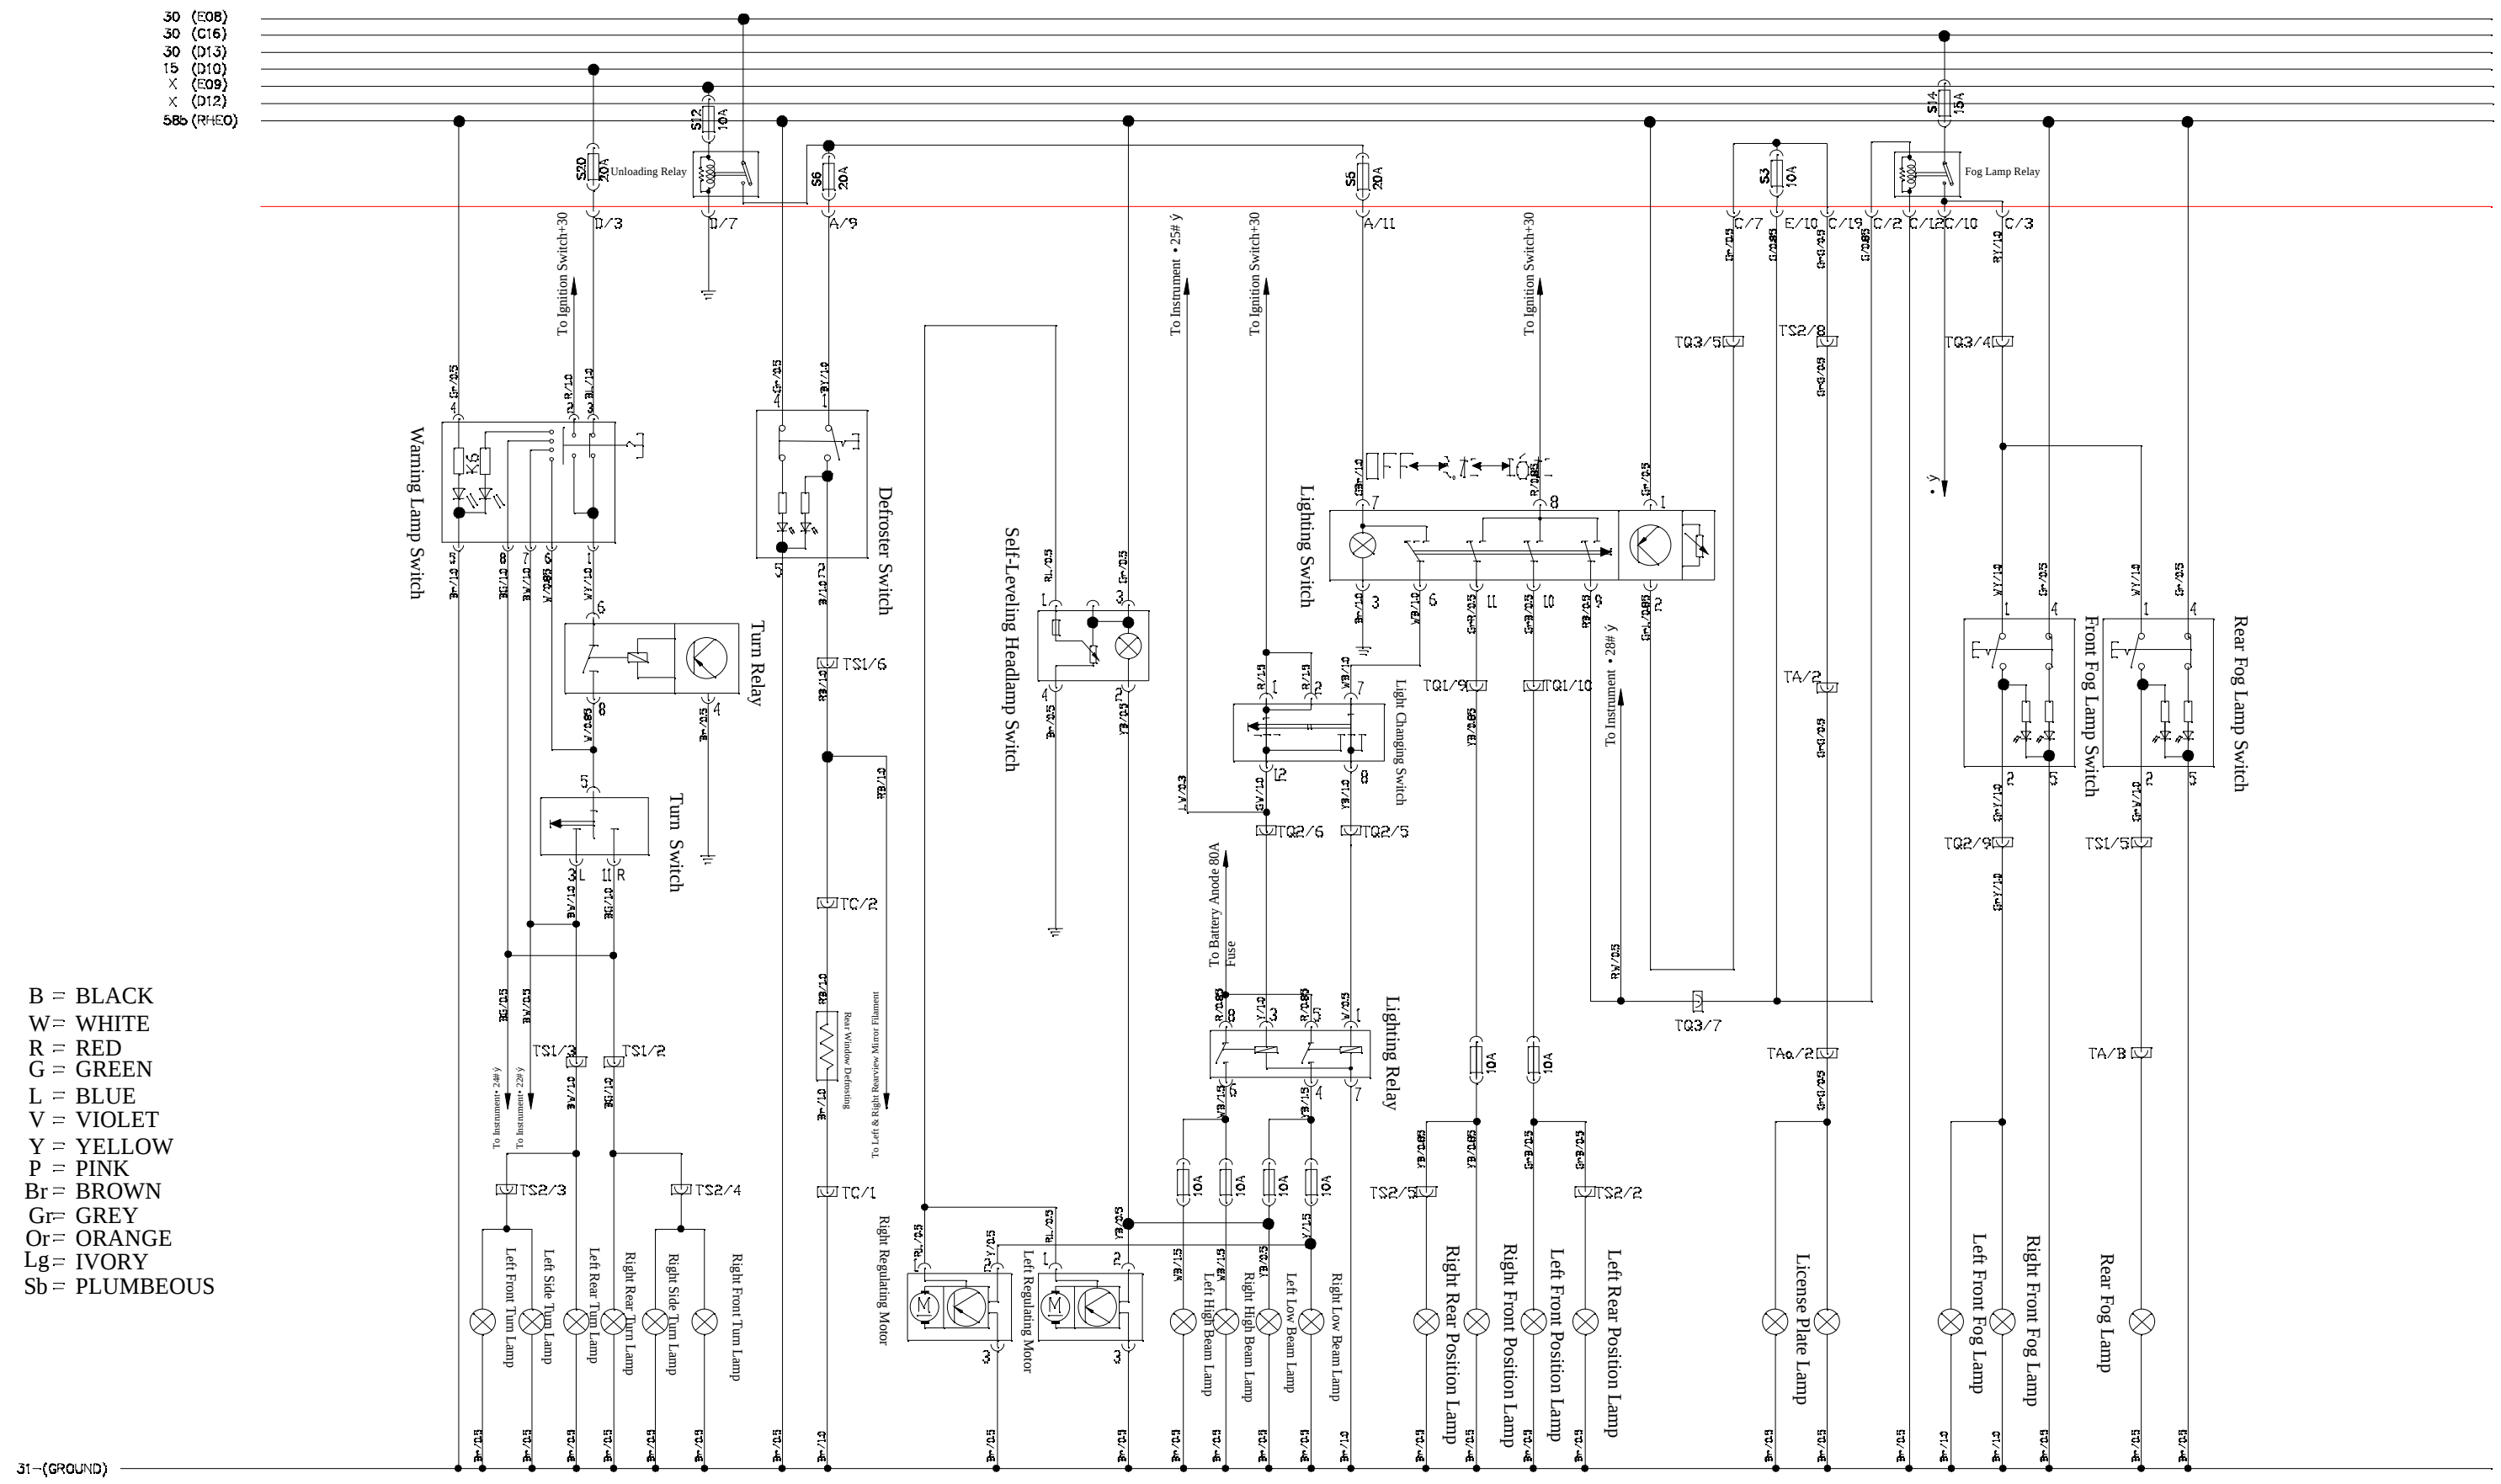

Airbag

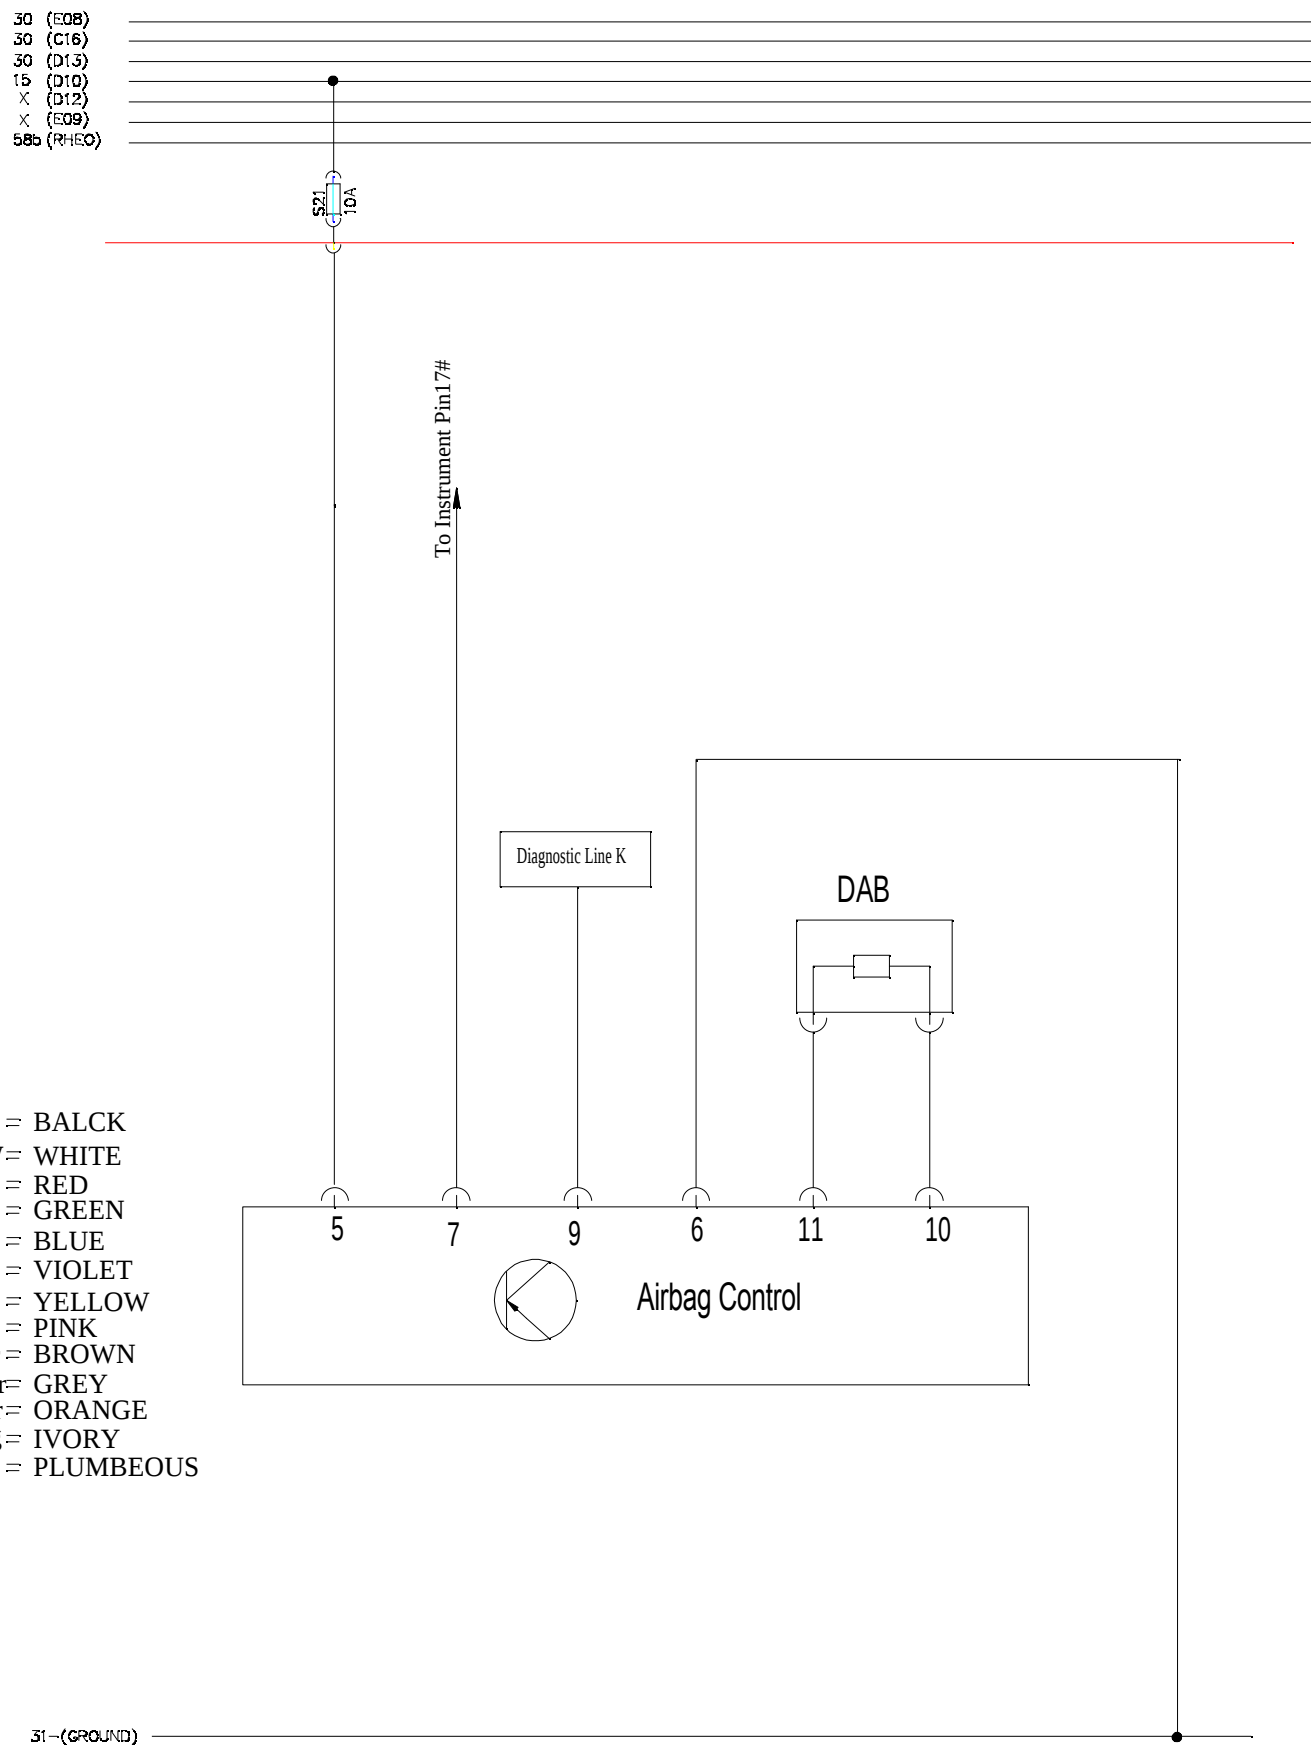

MPI Electric Injection System(UAES)

