



انجمن تخصصی آموزش تجهیزات تعمیرگاهی خودرو

چراغ چک



www.CheraghCheck.ir



www.Telegram.me/CheraghCheck



www.Aparat.Com/CheraghCheck.ir

راهنمای نقشه های شماتیک خودروی

سورن ELX

لیست نقشه ها


- چراغ هشدار ترمز دستی و سطح روغن ترمز
- چراغ هشدار اتمام لنت ترمز عقب
- چراغ هشدار فشار روغن موتور
- ساعت دیجیتال
- چراغهای ترمز عقب و چراغ ترمز سوم
- بوق ها
- برف پاک کن و شیشه شور جلو
- چراغ داخل کابین
- نمایش وضعیت خنک کاری سیستم در جلو آمپر
- چراغ و سنسور دنده عقب
- سیستم خنک کاری و موتور فن
- سیستم ترمز ABS Mando
- پمپ بنزین و گیج بنزین
- چراغ های نور بالا و نور پایین
- پخش CD و رادیو
- چراغهای راهنما و فلاشر
- قفل مرکزی (بدون سیستم A.C.U)
- فندک
- بخاری و سیستم تهویه
- گرمکن شیشه عقب و آینه ها
- سیستم ایربگ
- سیستم سوخت رسانی و جرقه بنزین - زیمنس
- چراغهای مه شکن جلو و عقب
- بالابرهای برقی جلو

- بالابرهای برقی عقب
- چراغهای راهنما
- چراغهای دربها
- استارت و آلترناتور
- آینه های برقی

توجه: سایر نقشه مطابق با نقشه های سمند LX

می باشد


P2-ELE-SCH-0024-01	Brake Fluid Level & Hand Brake Warning Lamps Samand Soren	13/10/2008
--------------------	---	------------

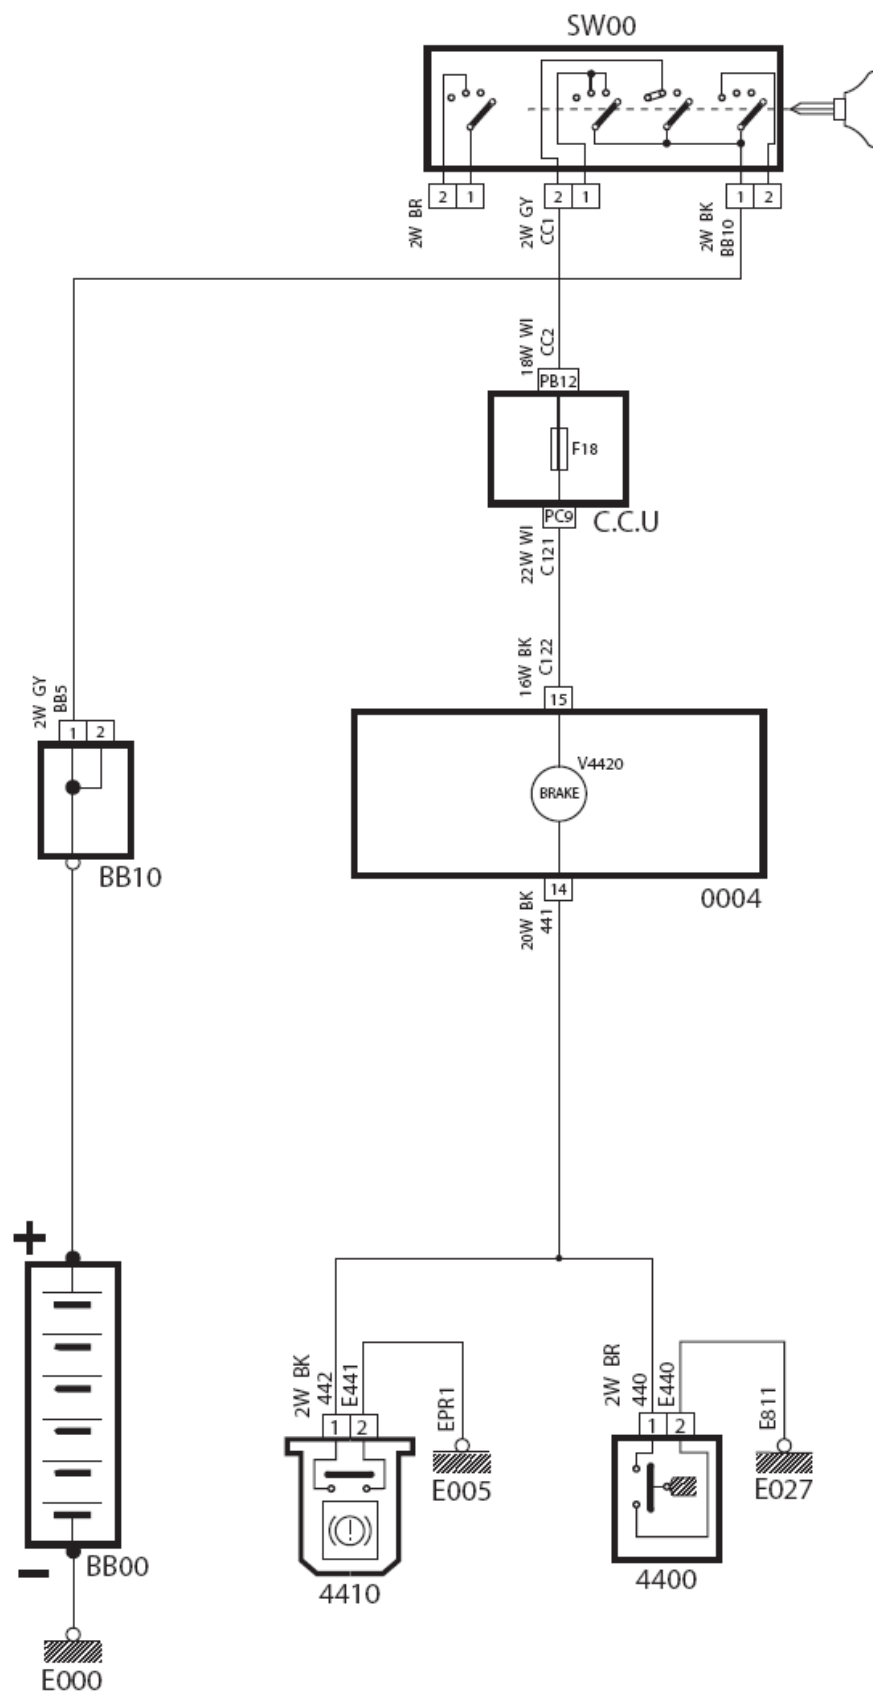

P2-ELE-SCH-0025-01

Brake Pad Rear Warning Lamp Samand Soren


13/10/2008

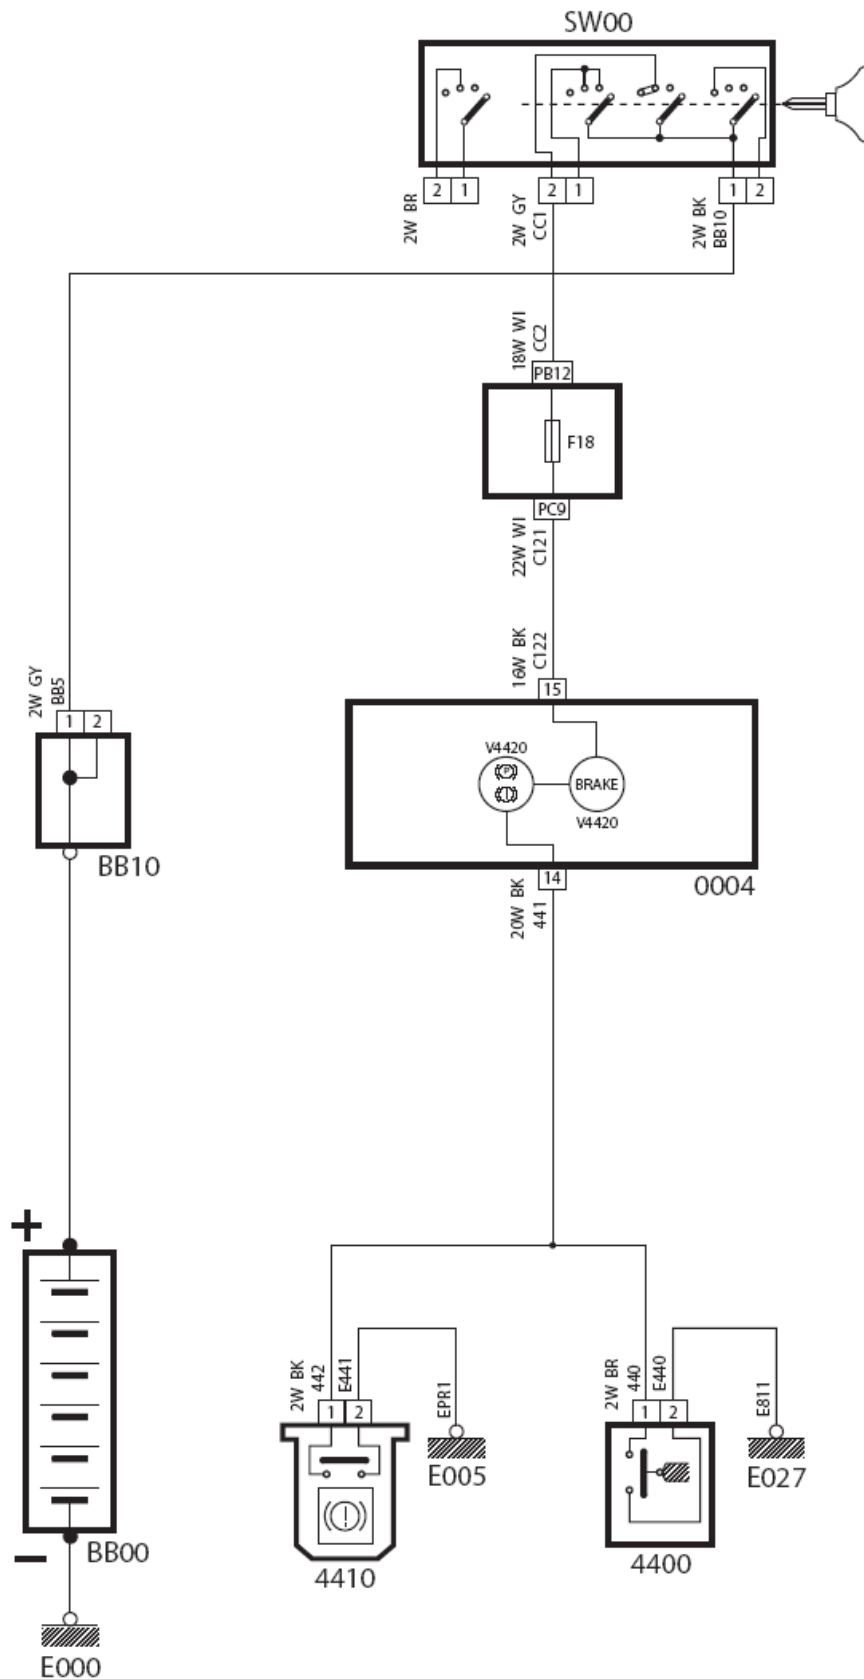

P2-ELE-SCH-0026-01

Engine Oil Pressure Samand Soren


13/10/2008

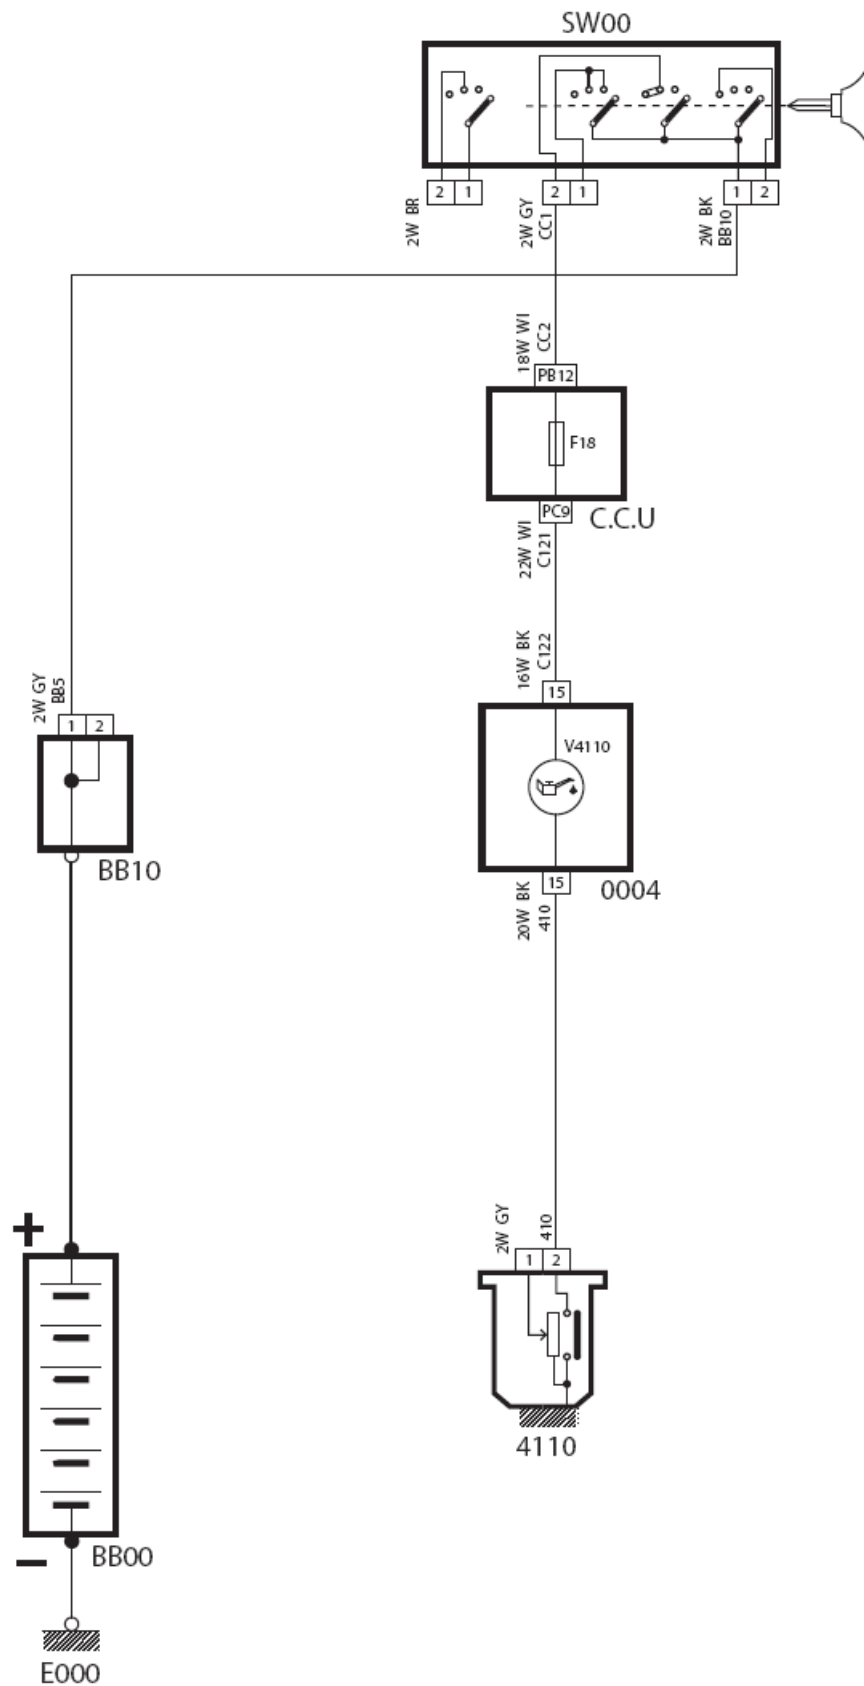

P2-ELE-SCH-0027-02

Digital Clock Samand Soren


06/11/2008

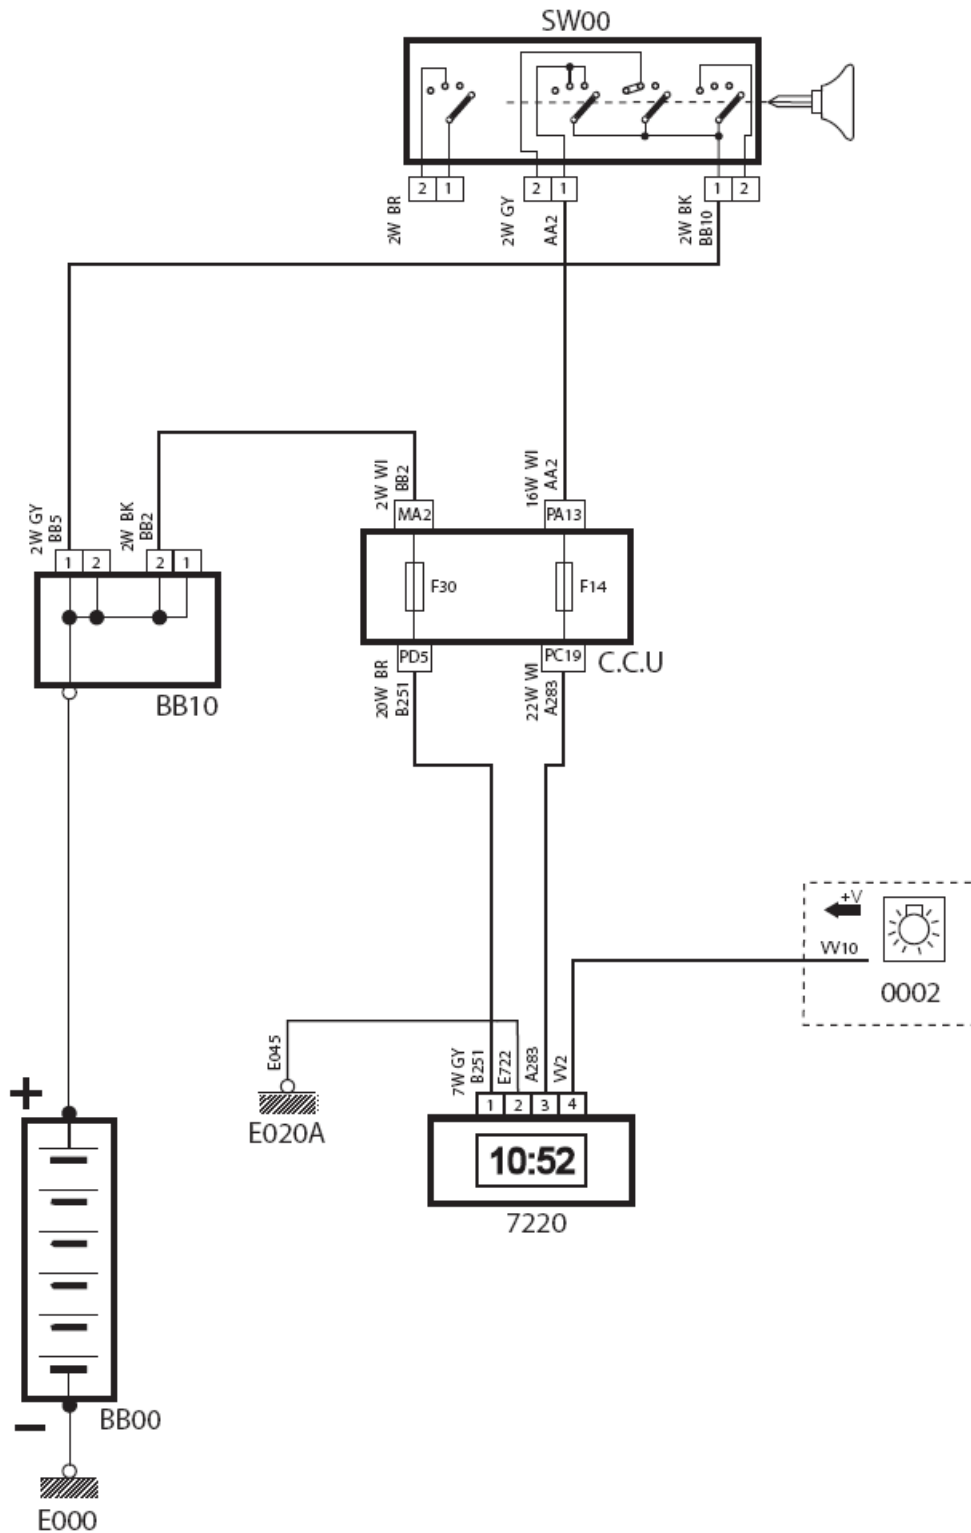

P2-ELE-SCH-0028-01

Stop Lamp & Additional Stop Lamp Samand Soren


13/10/2008

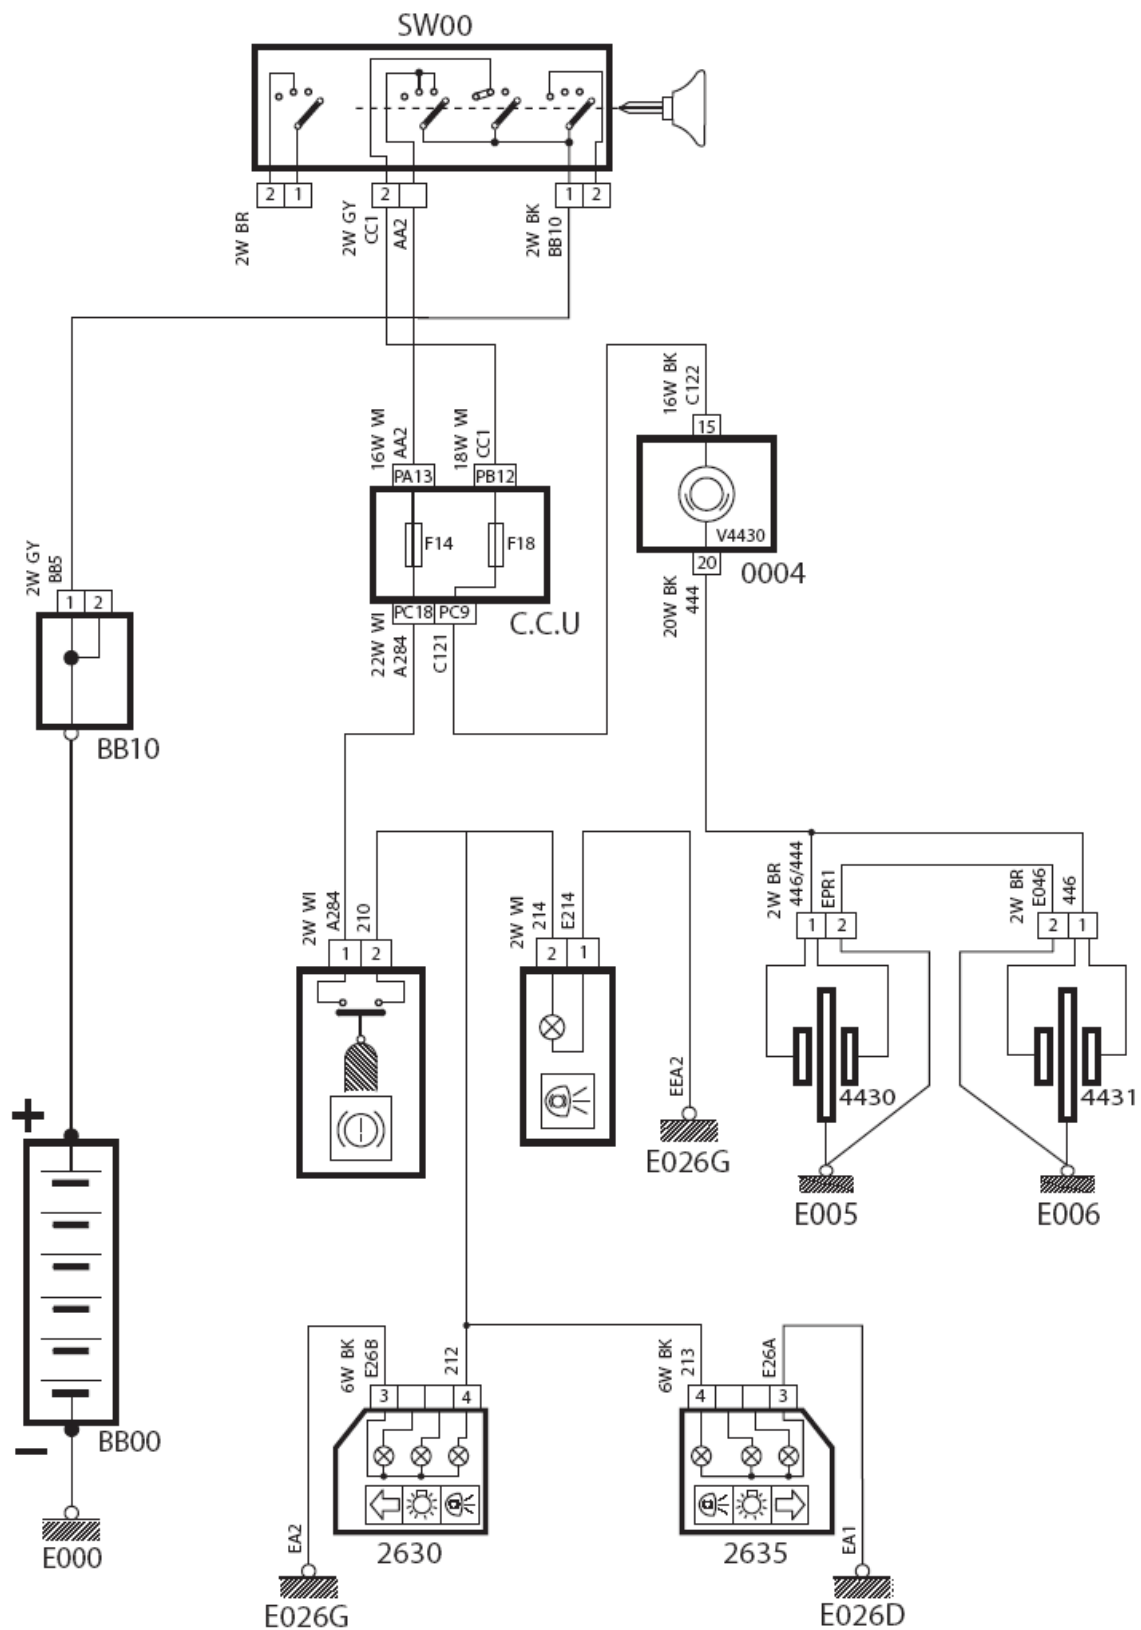


P2-ELE-SCH-0029-01

Horns Samand Soren

13/10/2008

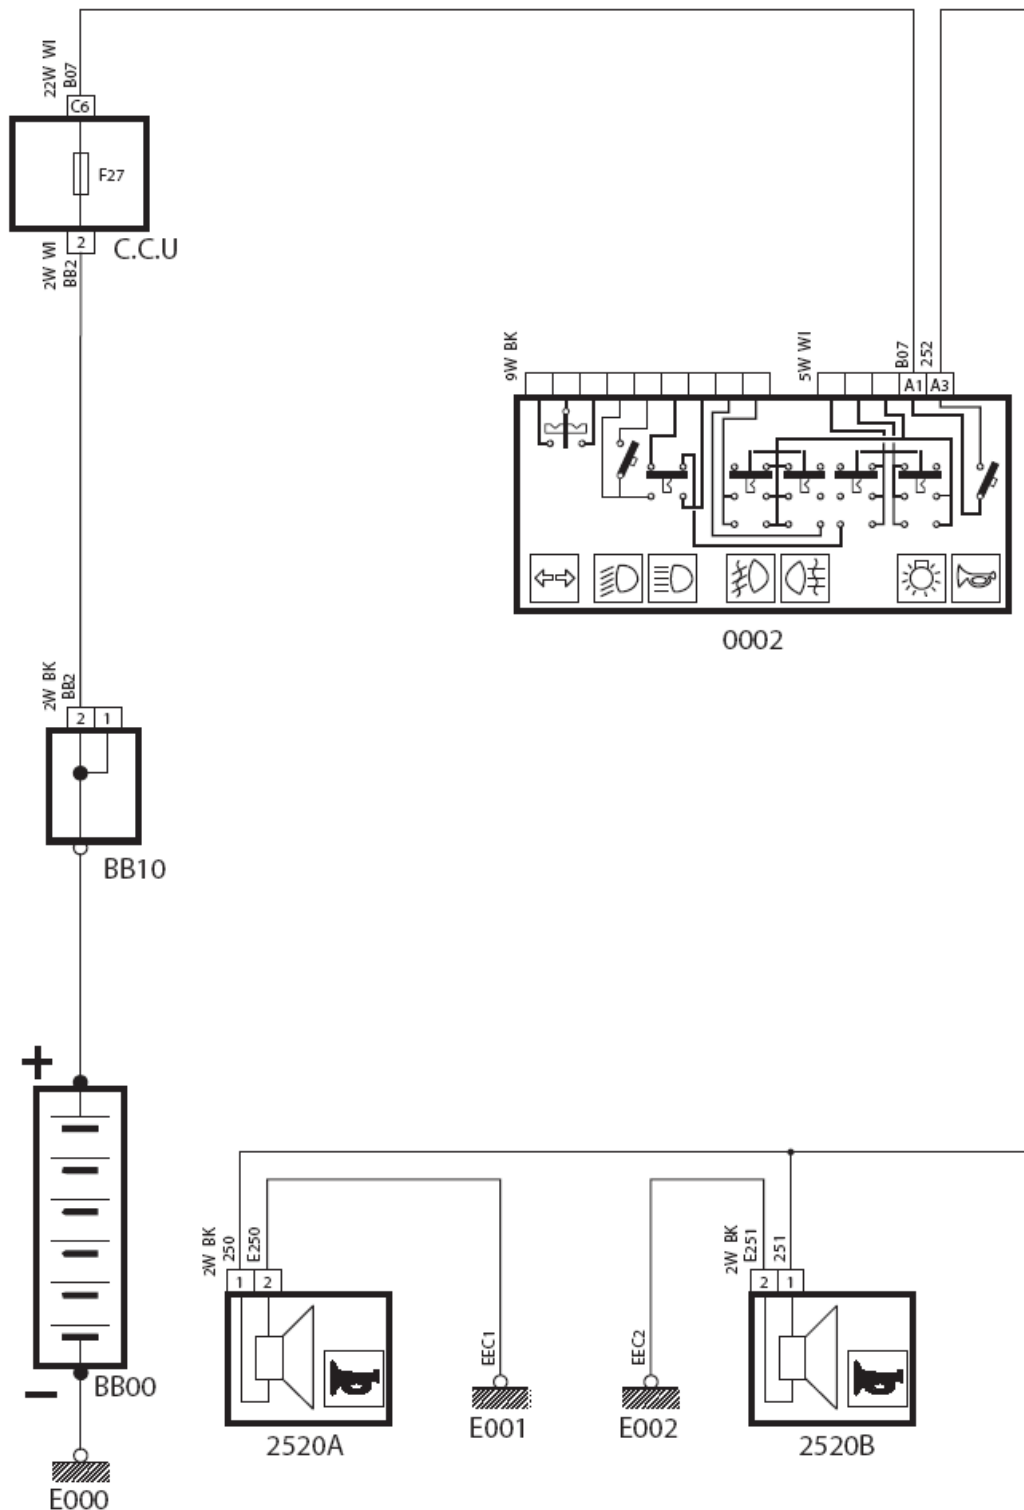


P2-ELE-SCH-0030-01	Front Wash & Screen Wipper Samand Soren	23/10/2008
--------------------	---	------------

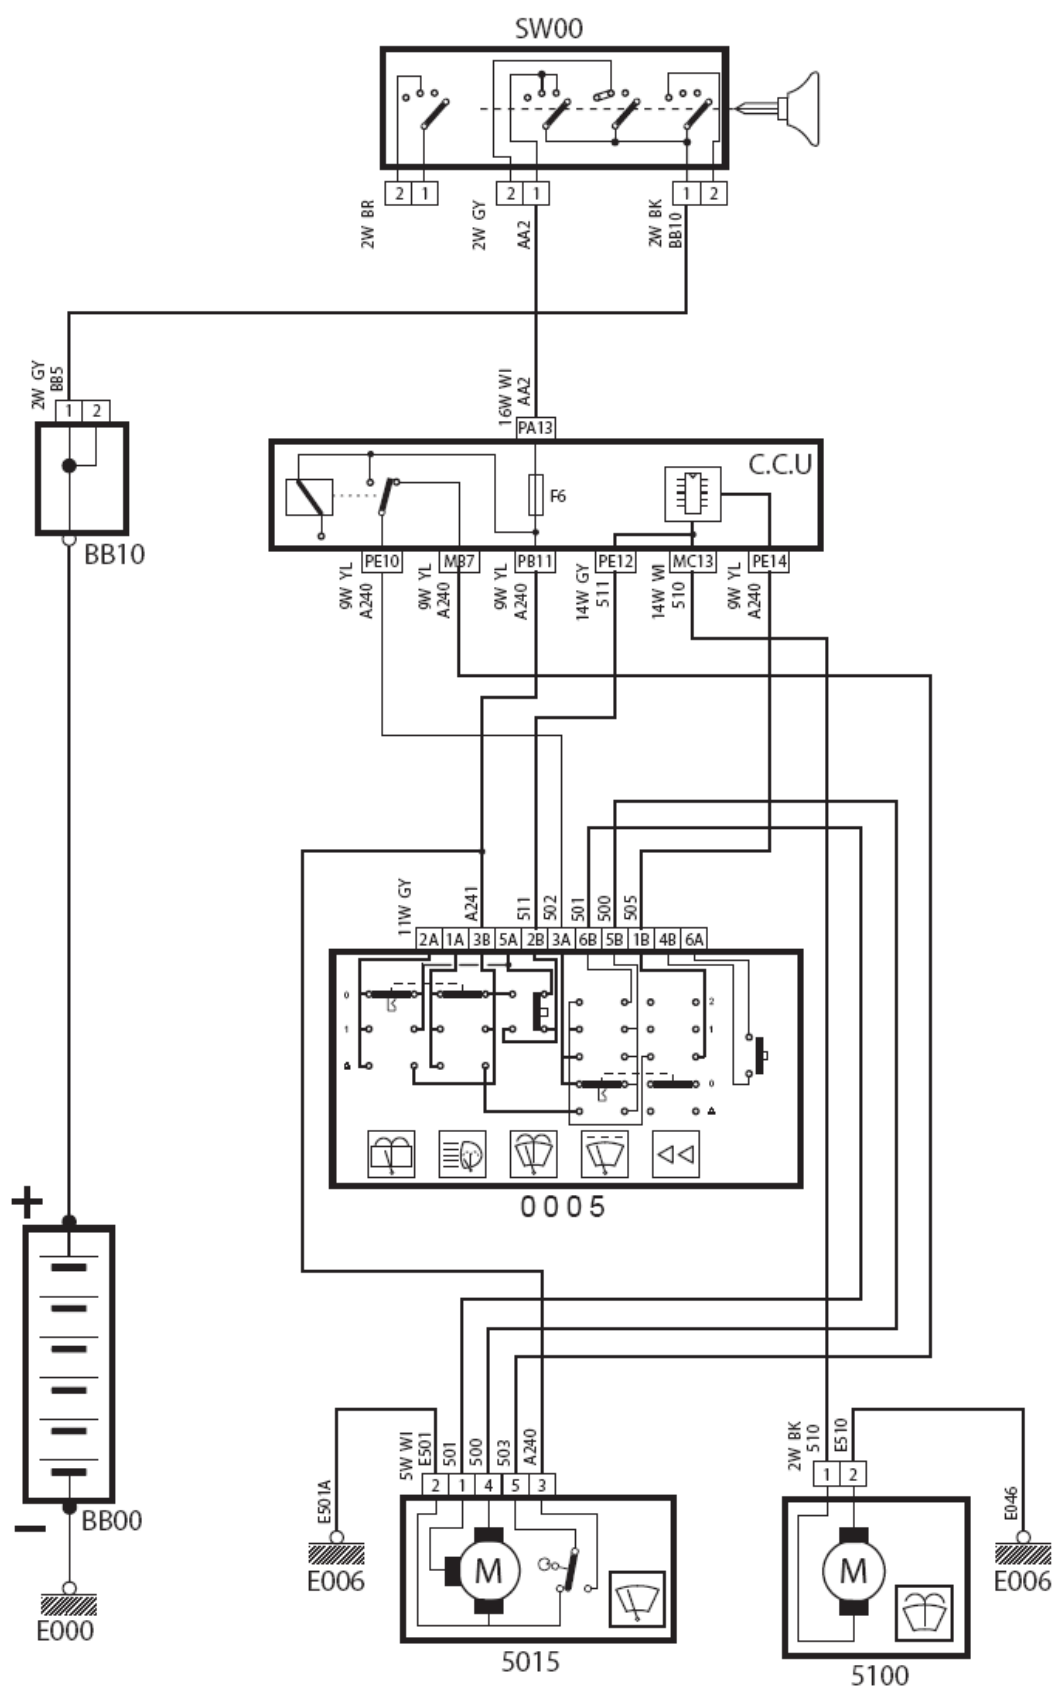


P2-ELE-SCH-0031-01

Interior Lightin Samand Soren

15/10/2008

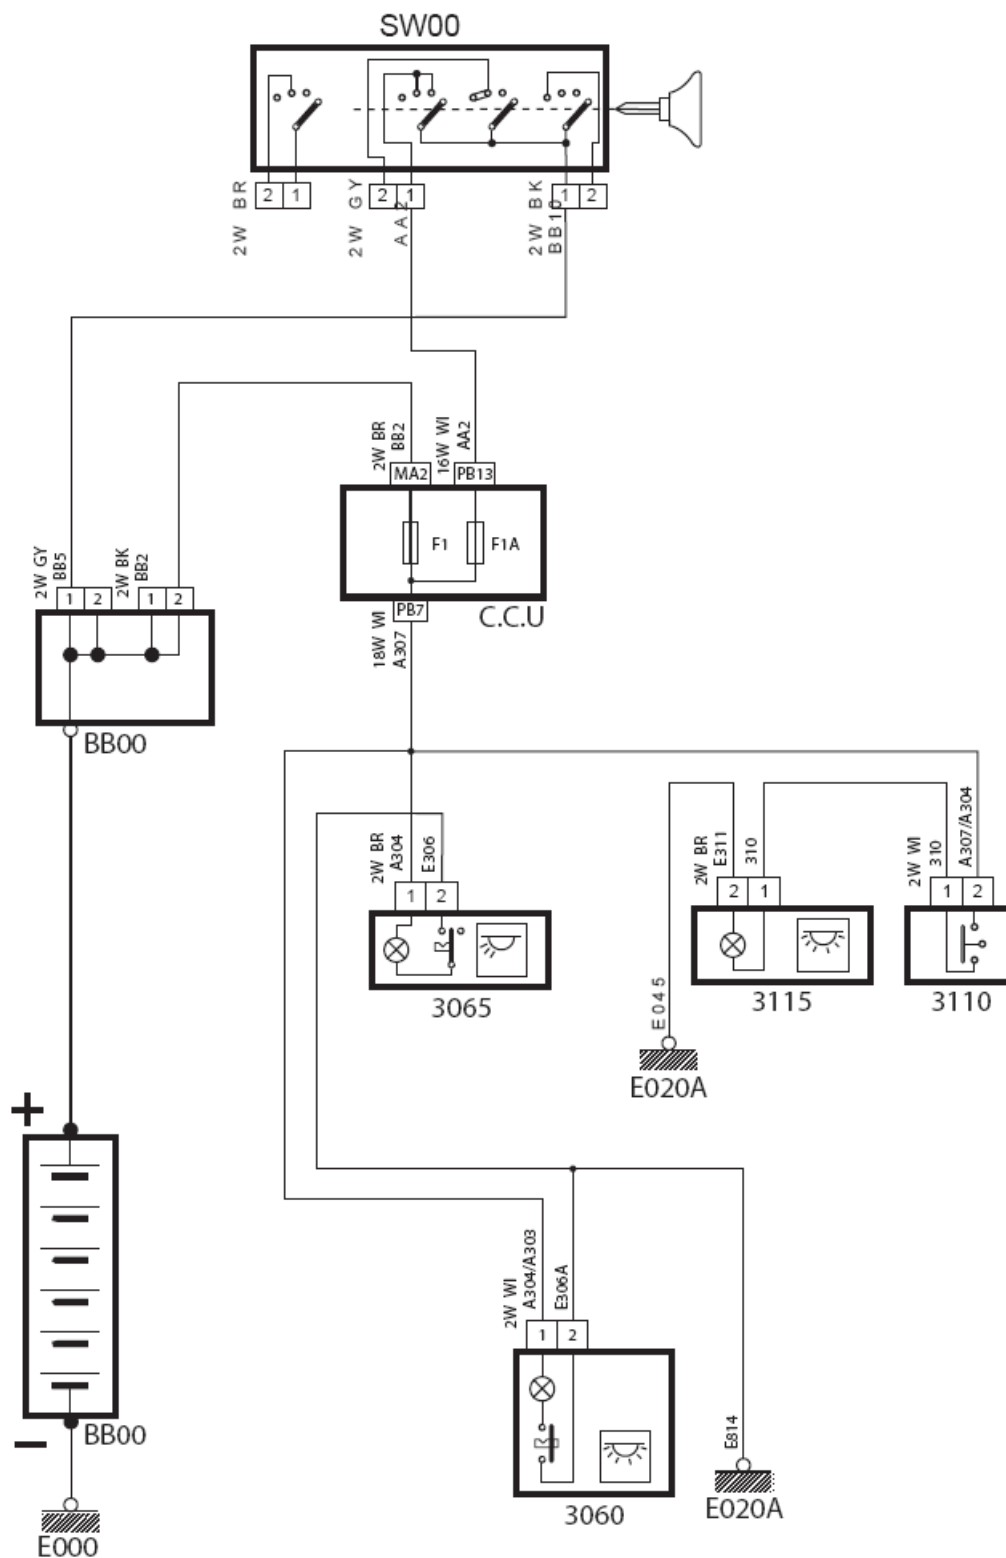


P2-ELE-SCH-0032-01	Coolant Temperature Samand Soren	13/10/2008
--------------------	----------------------------------	------------

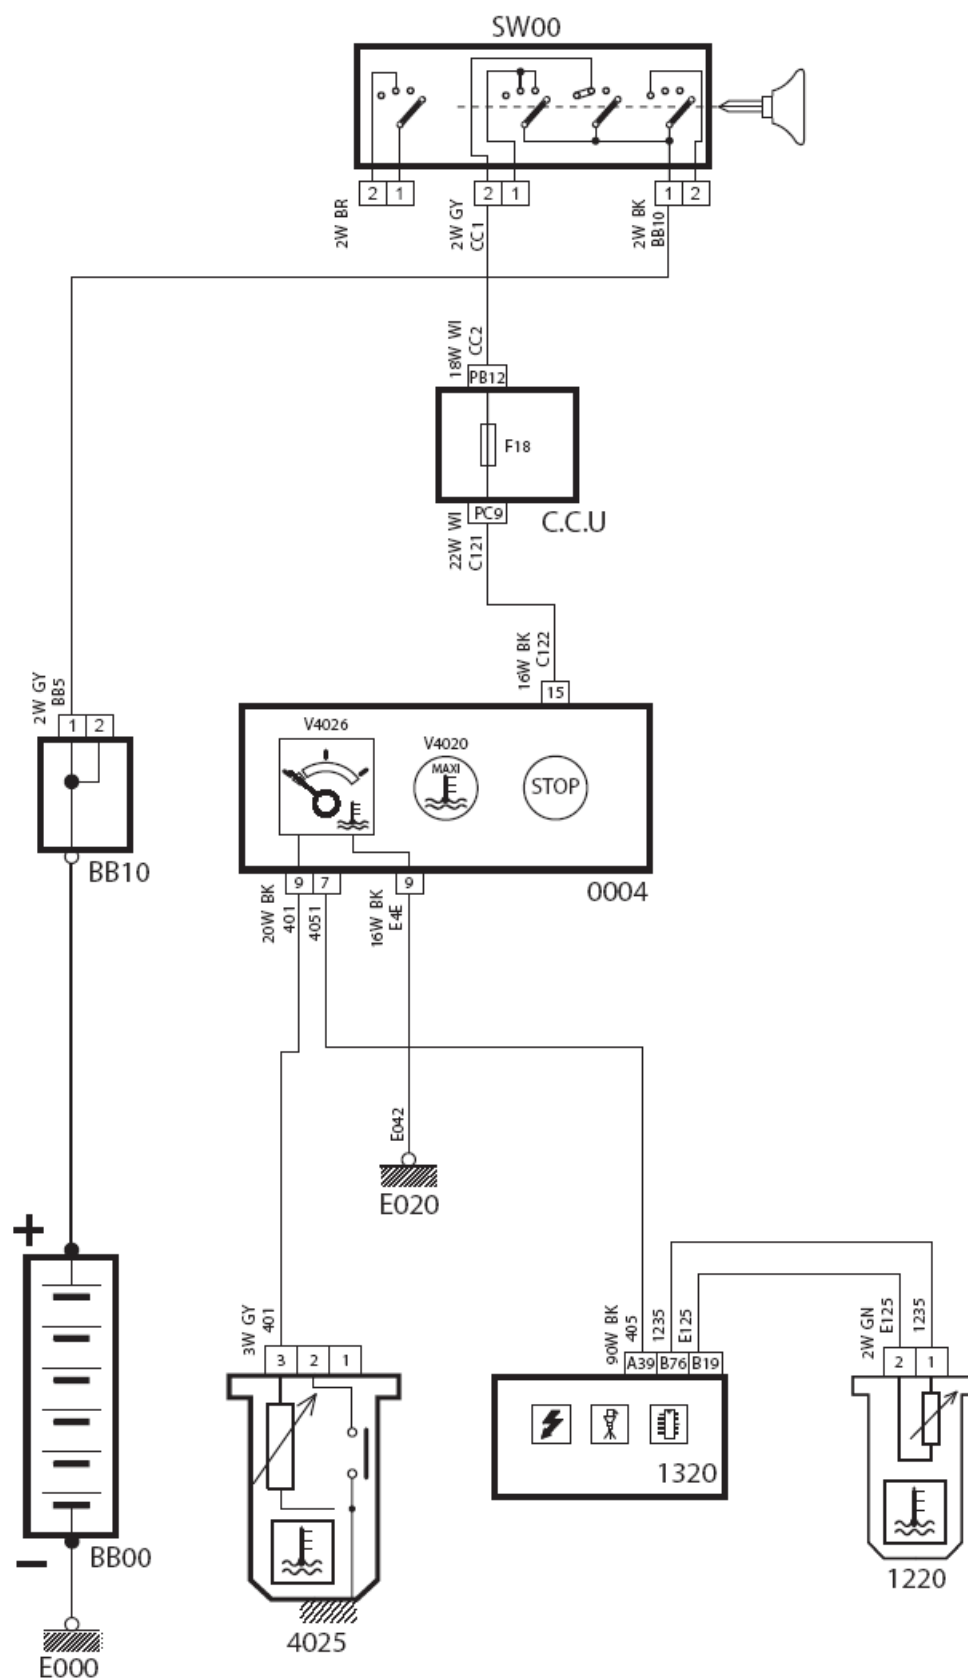

P2-ELE-SCH-0033-01

Reverse Lamp & Sensor Samand Soren


15/10/2008

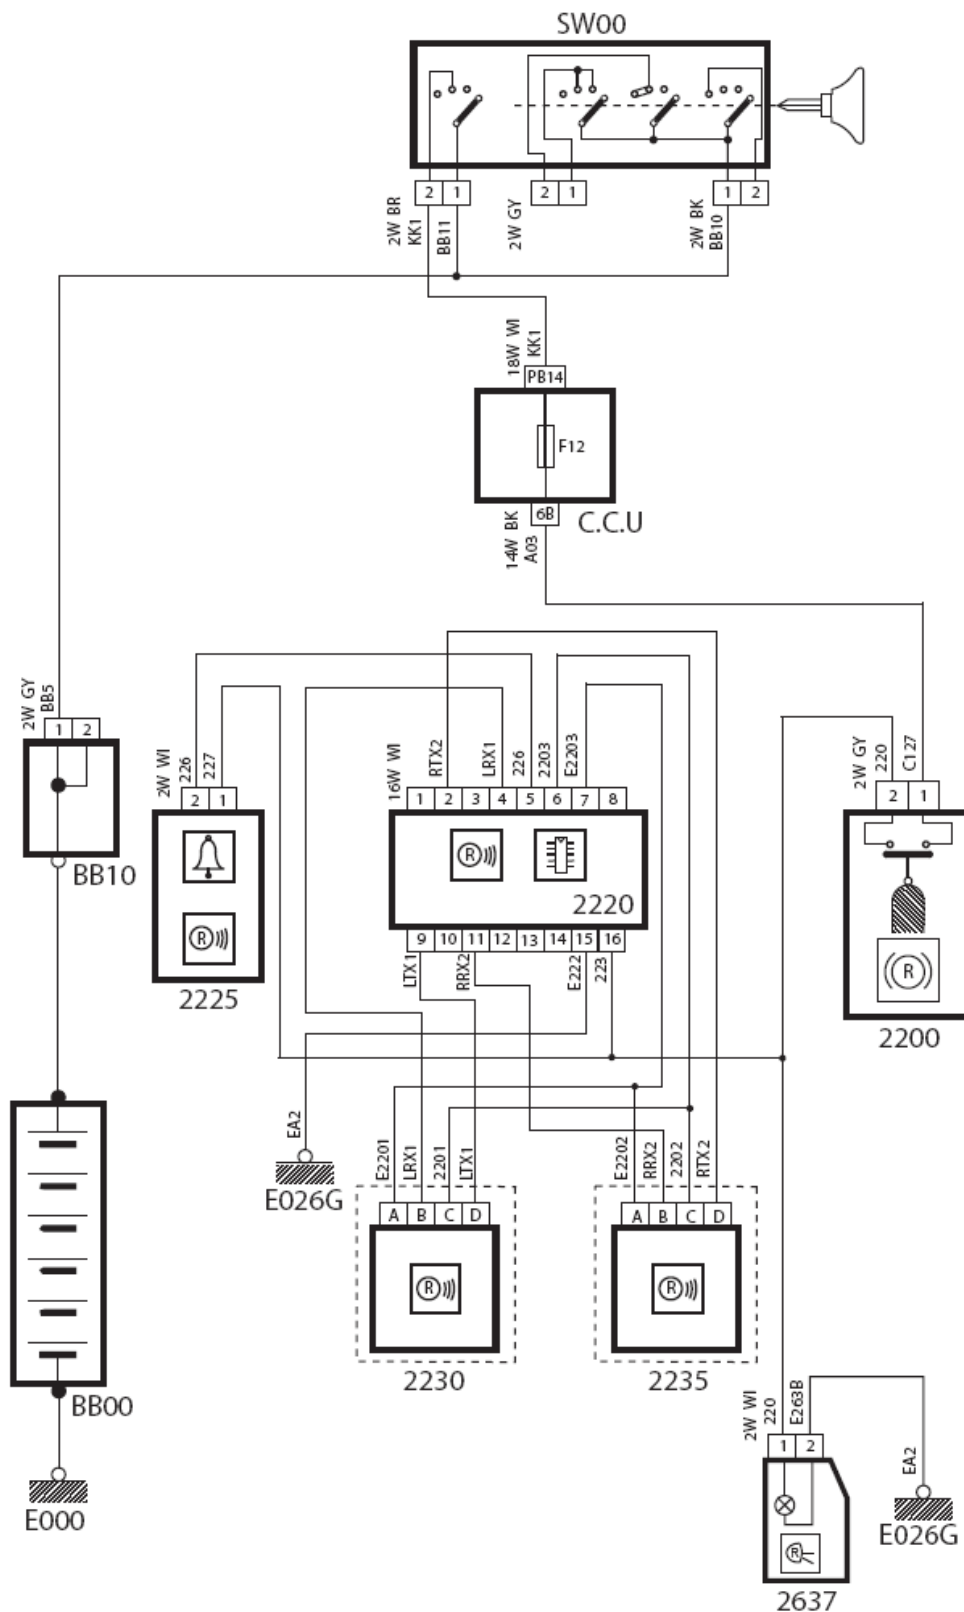

P2-ELE-SCH -0034-01

Engine Cooling System (XU7-JP/L3_Simens) Samand Soren


14/10/2008

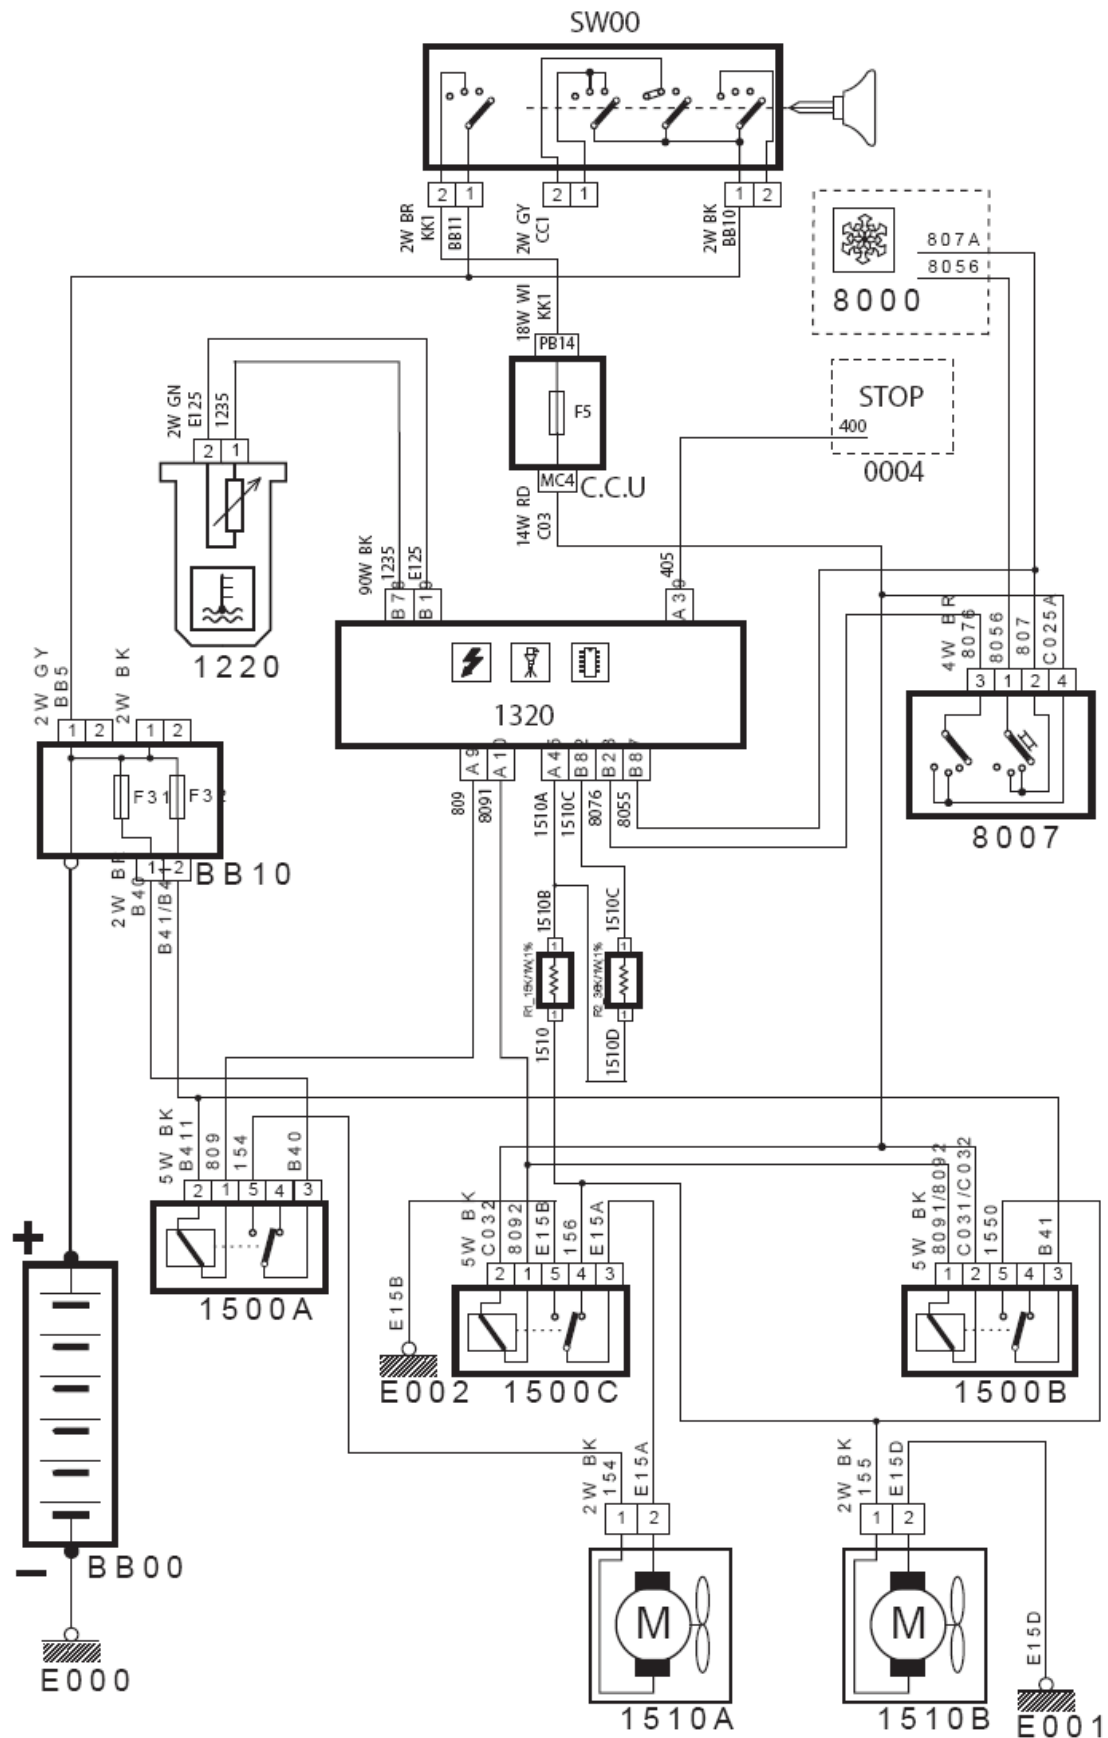

P2-ELE-SCH-0035-03

ABS Mando Samand Soren


06/06/2009

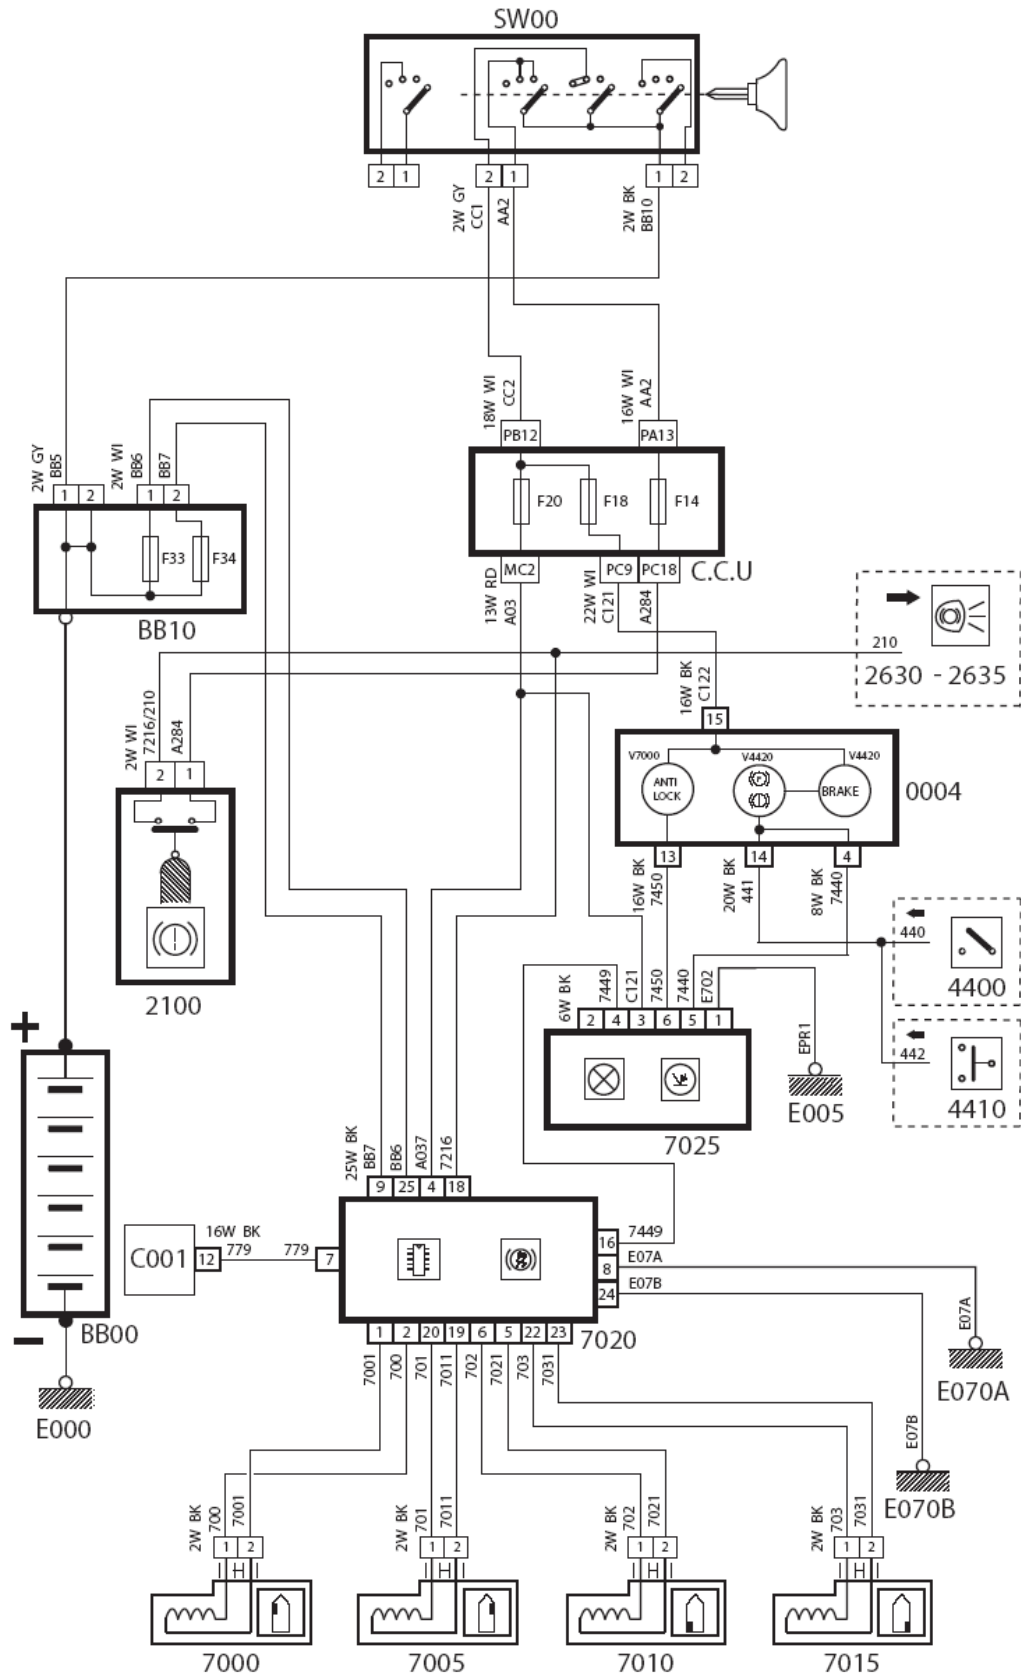

P2-ELE-SCH-0036-01

Fuel Gauge Samand Soren


26/10/2008

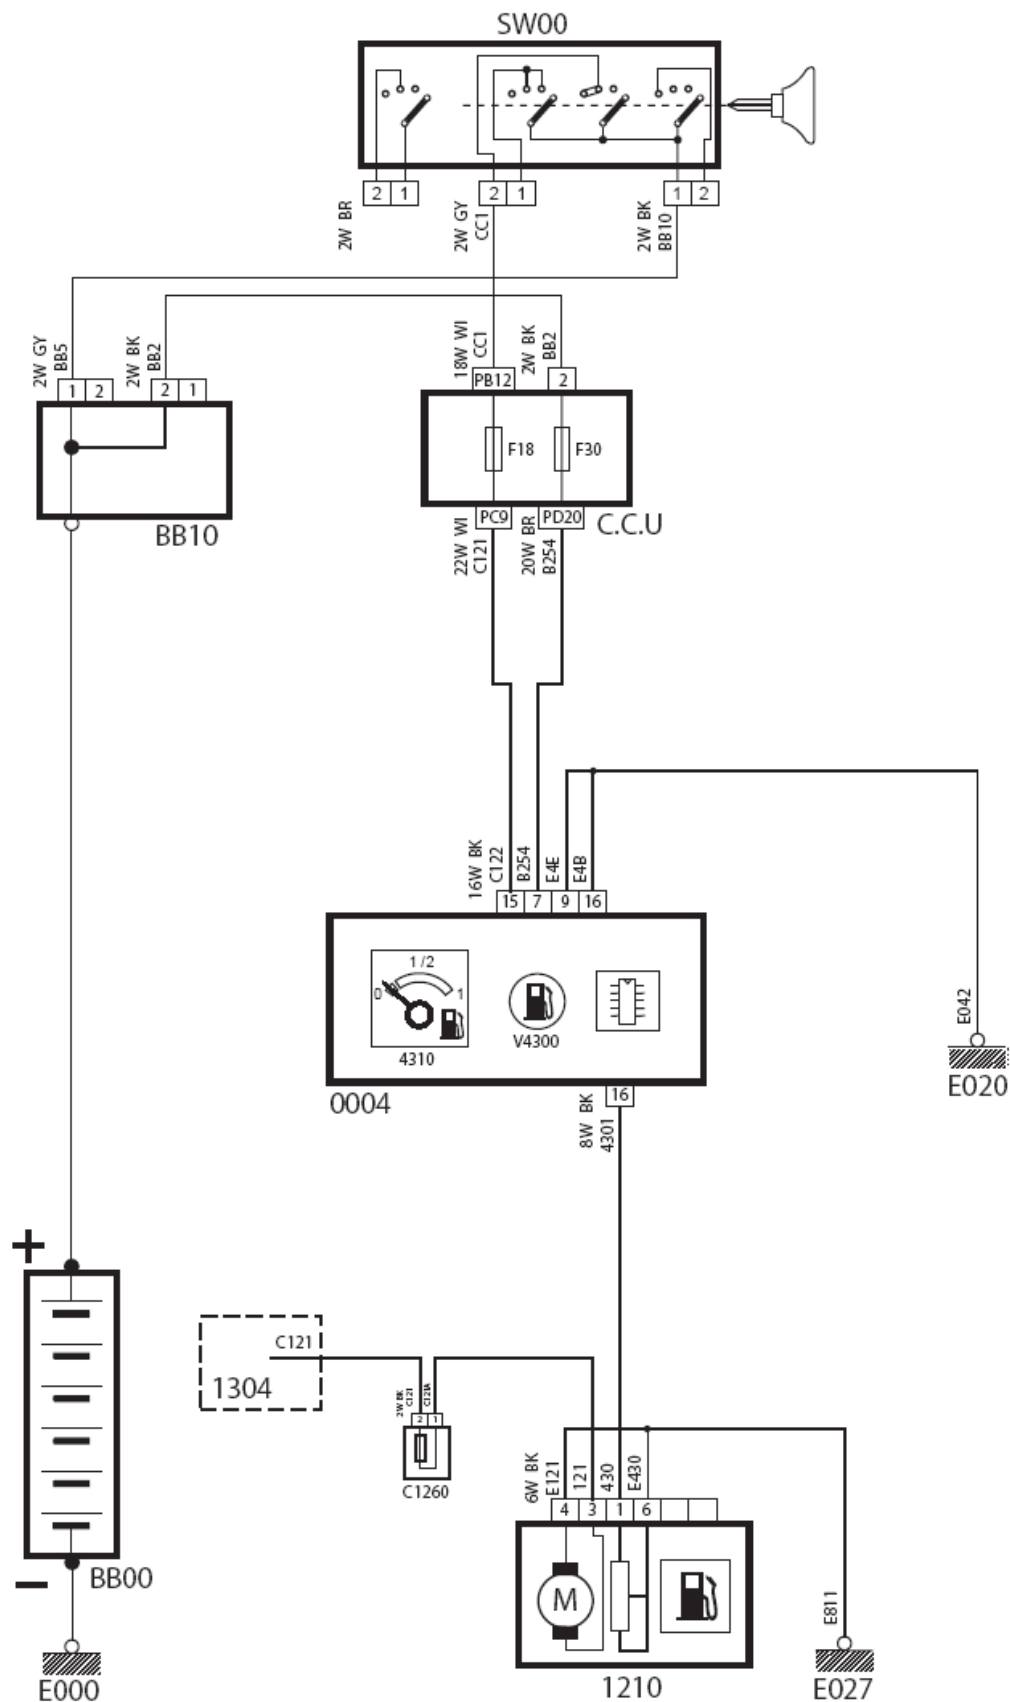

P2-ELE-SCH-0037-01

Dipped & Main Beam Samand Soren


26/10/2008

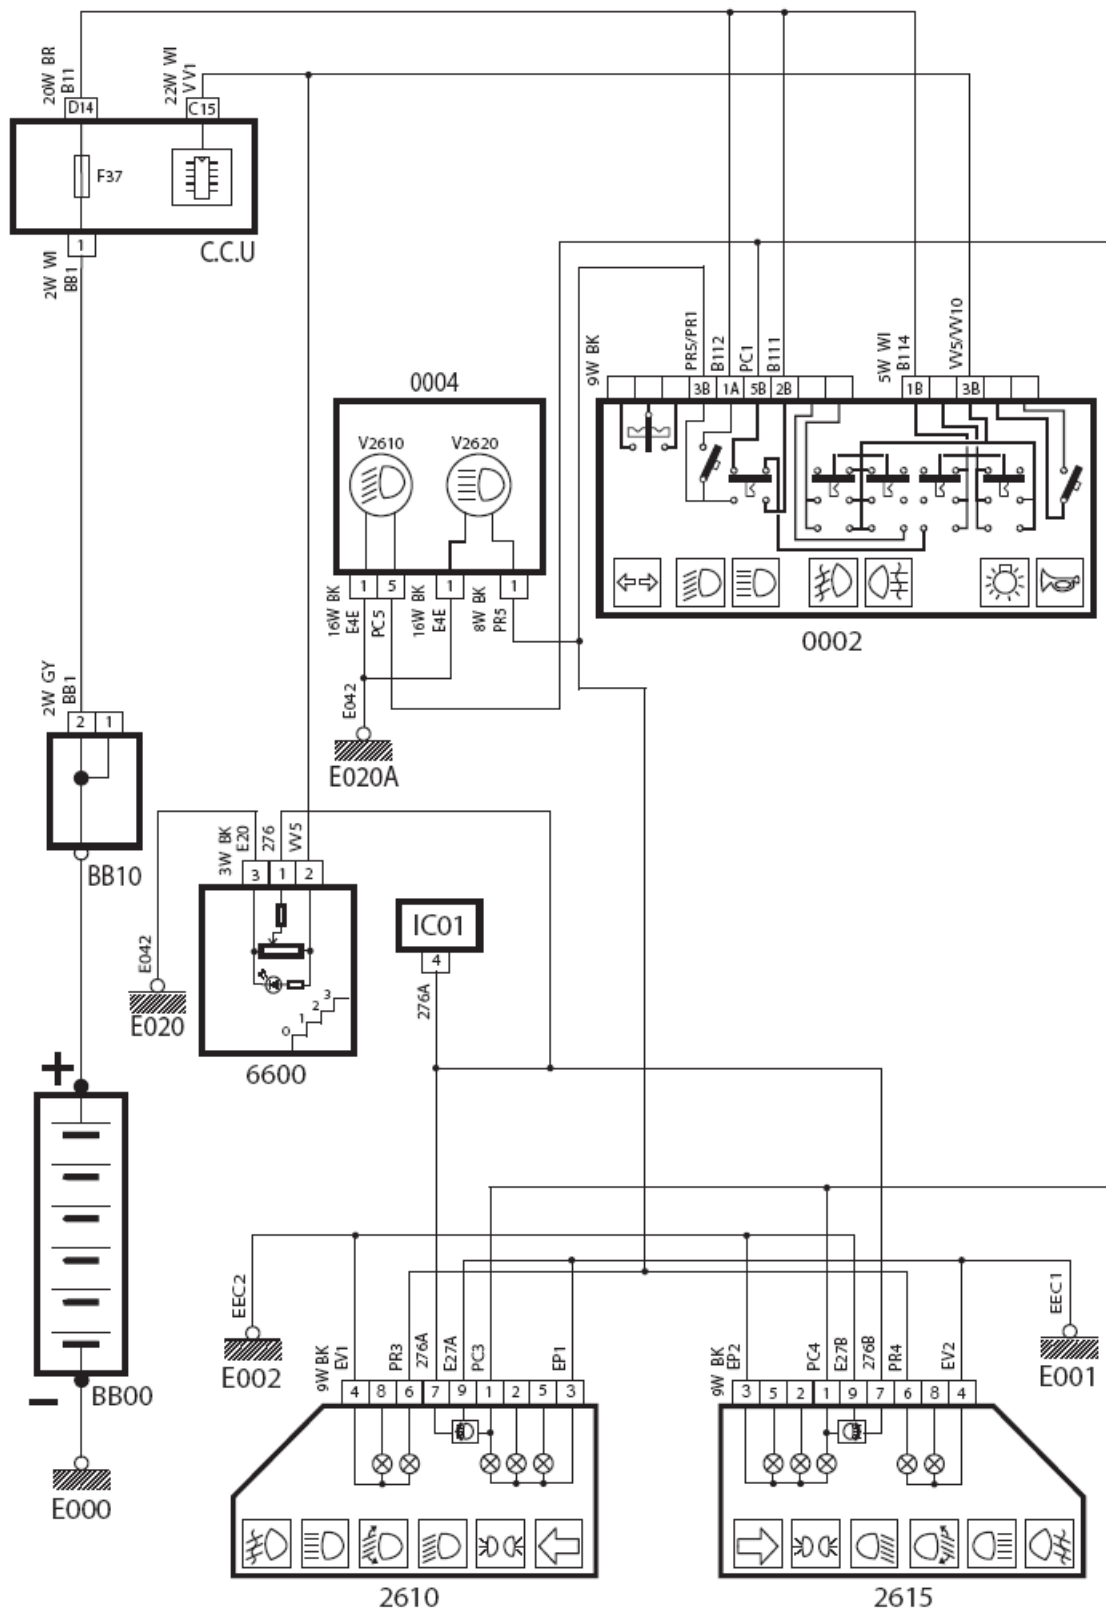

P2-ELE-SCH-0038-01

Radio & Cd Chenger Samand Soren


23/10/2008

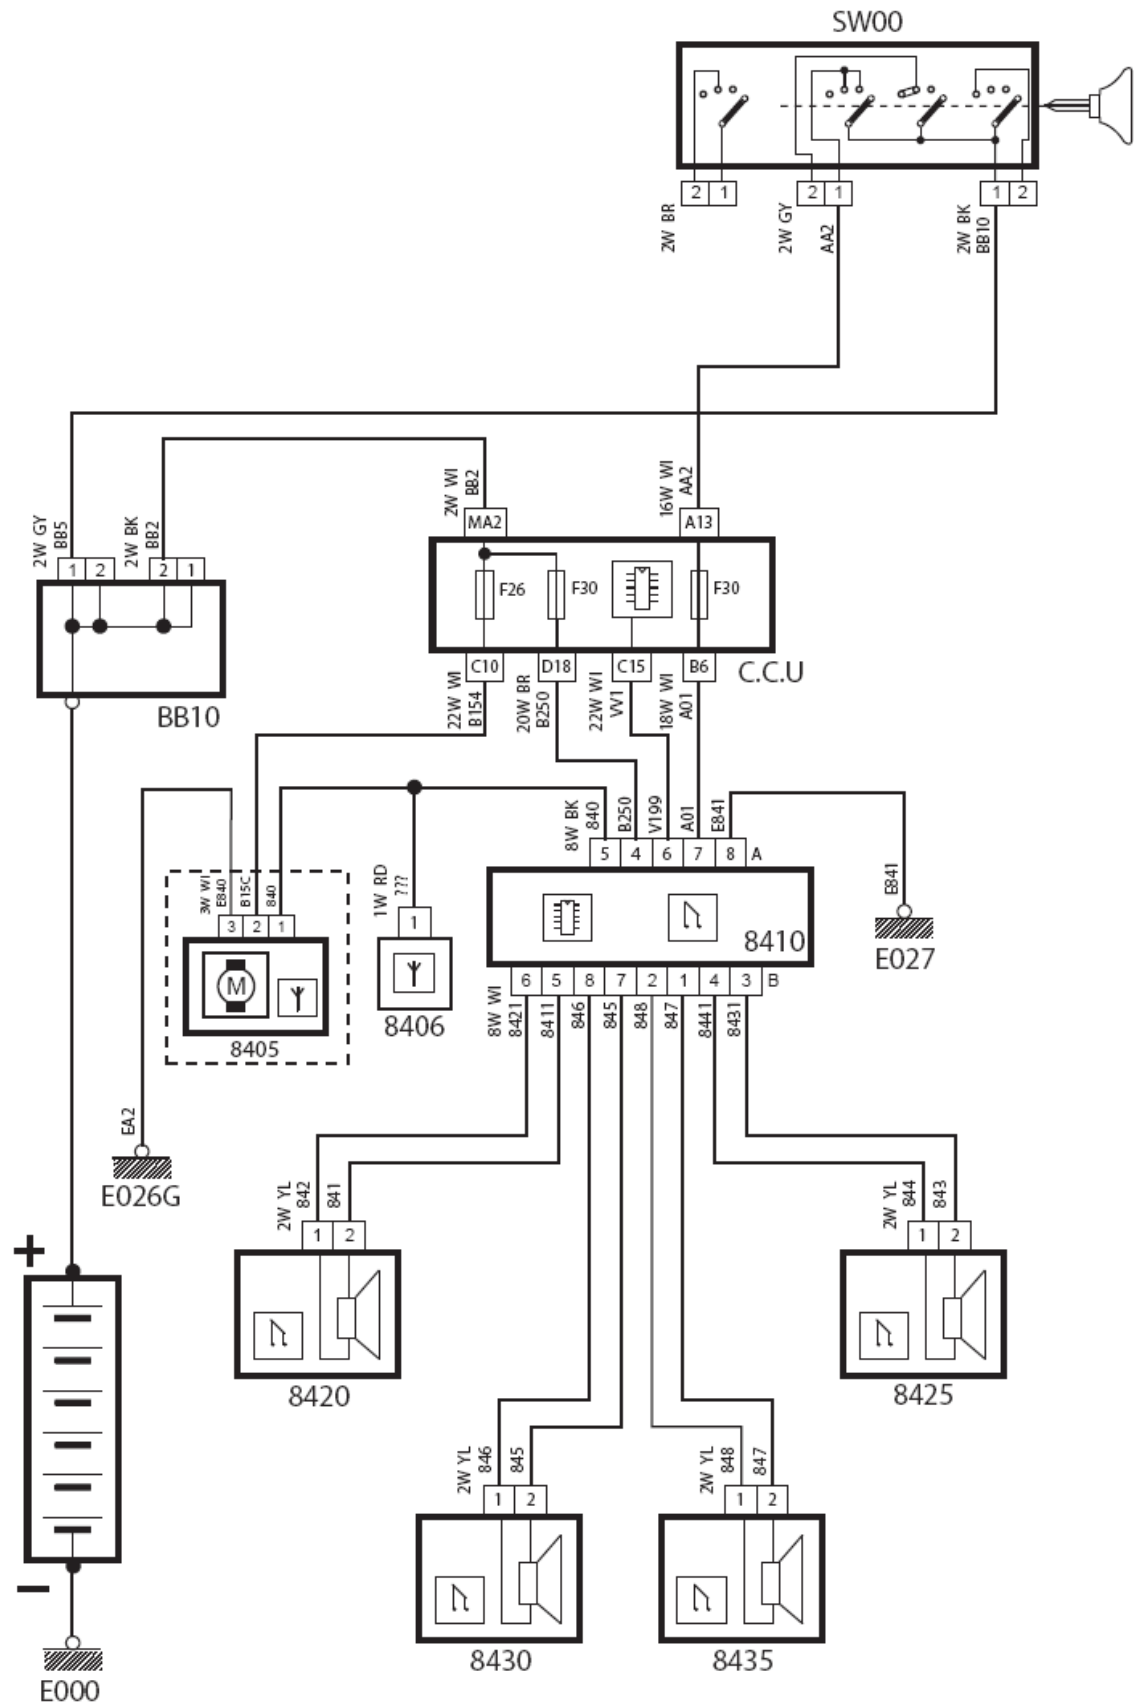


P2-ELE-SCH-0039-01

Direction Indicator & Hazard Warning Samand Soren

29/10/2008

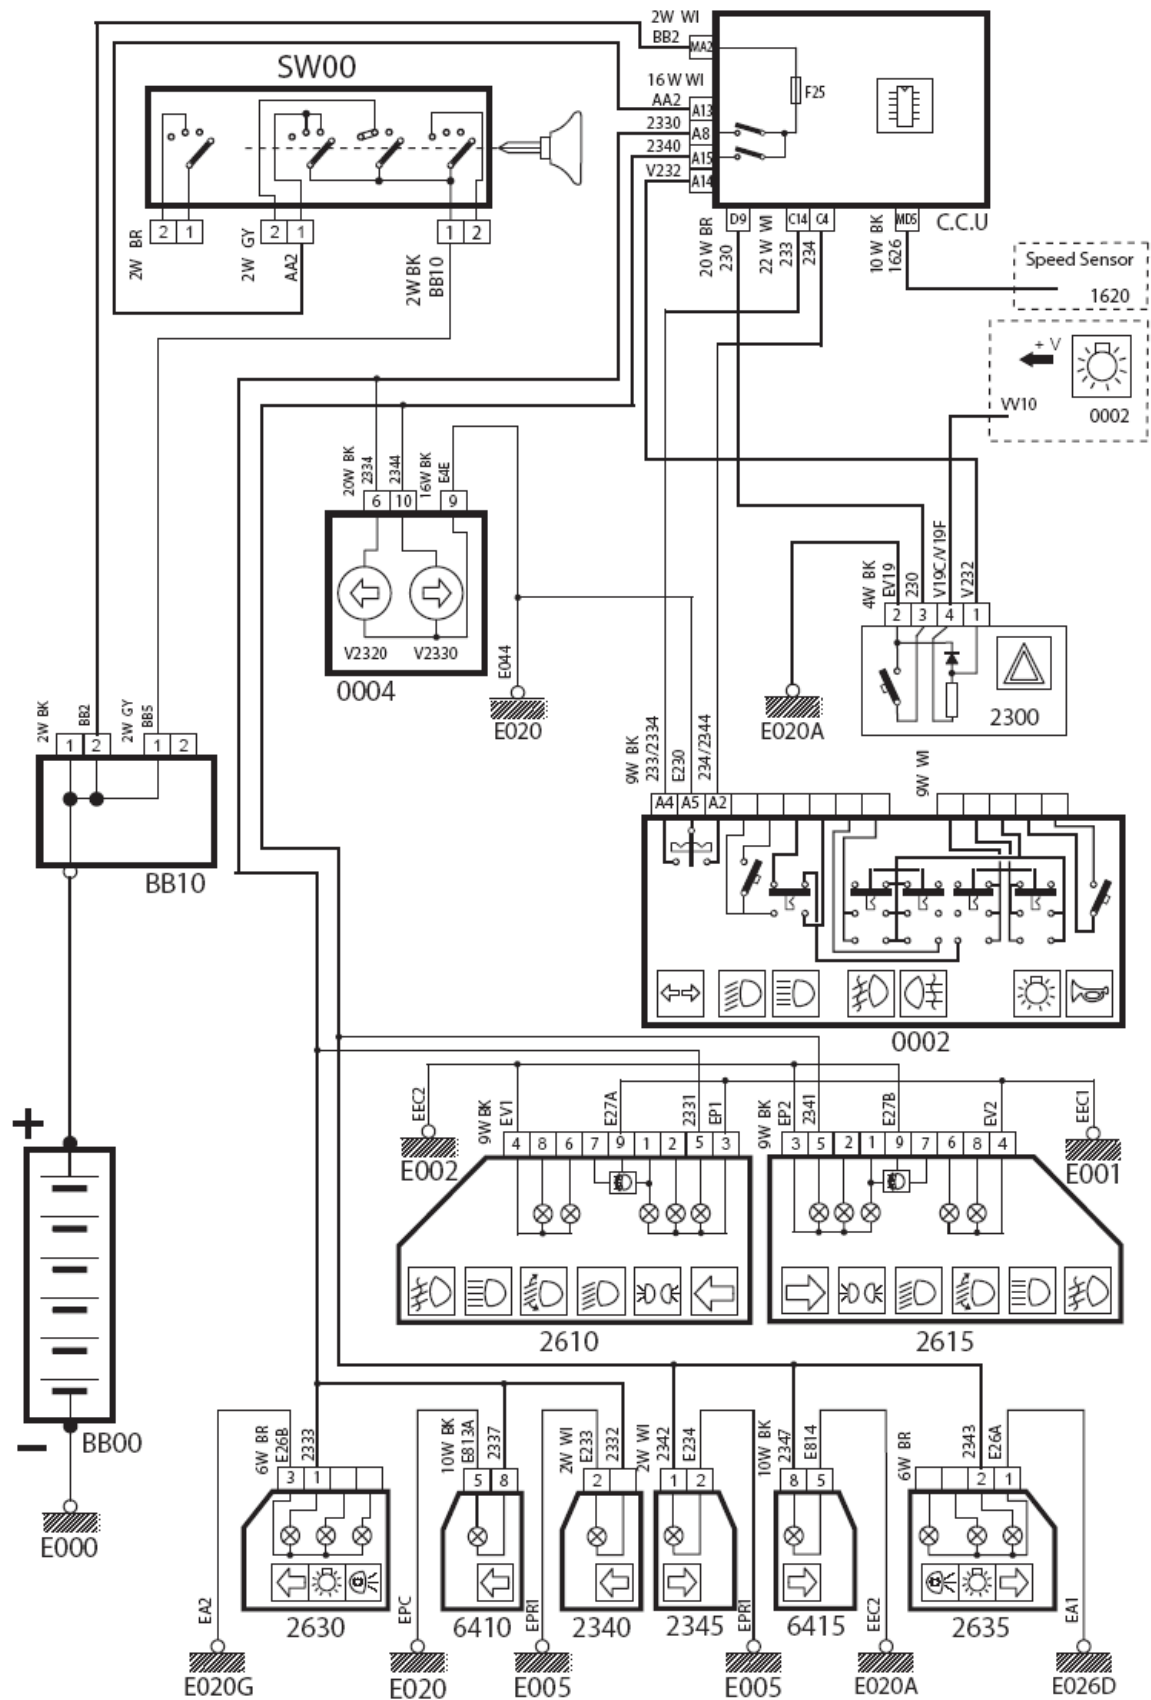

P2-ELE-SCH-0040-03	Central Locking (WithOut A.C.U) Soren ELX	06/06/2009
--------------------	---	------------

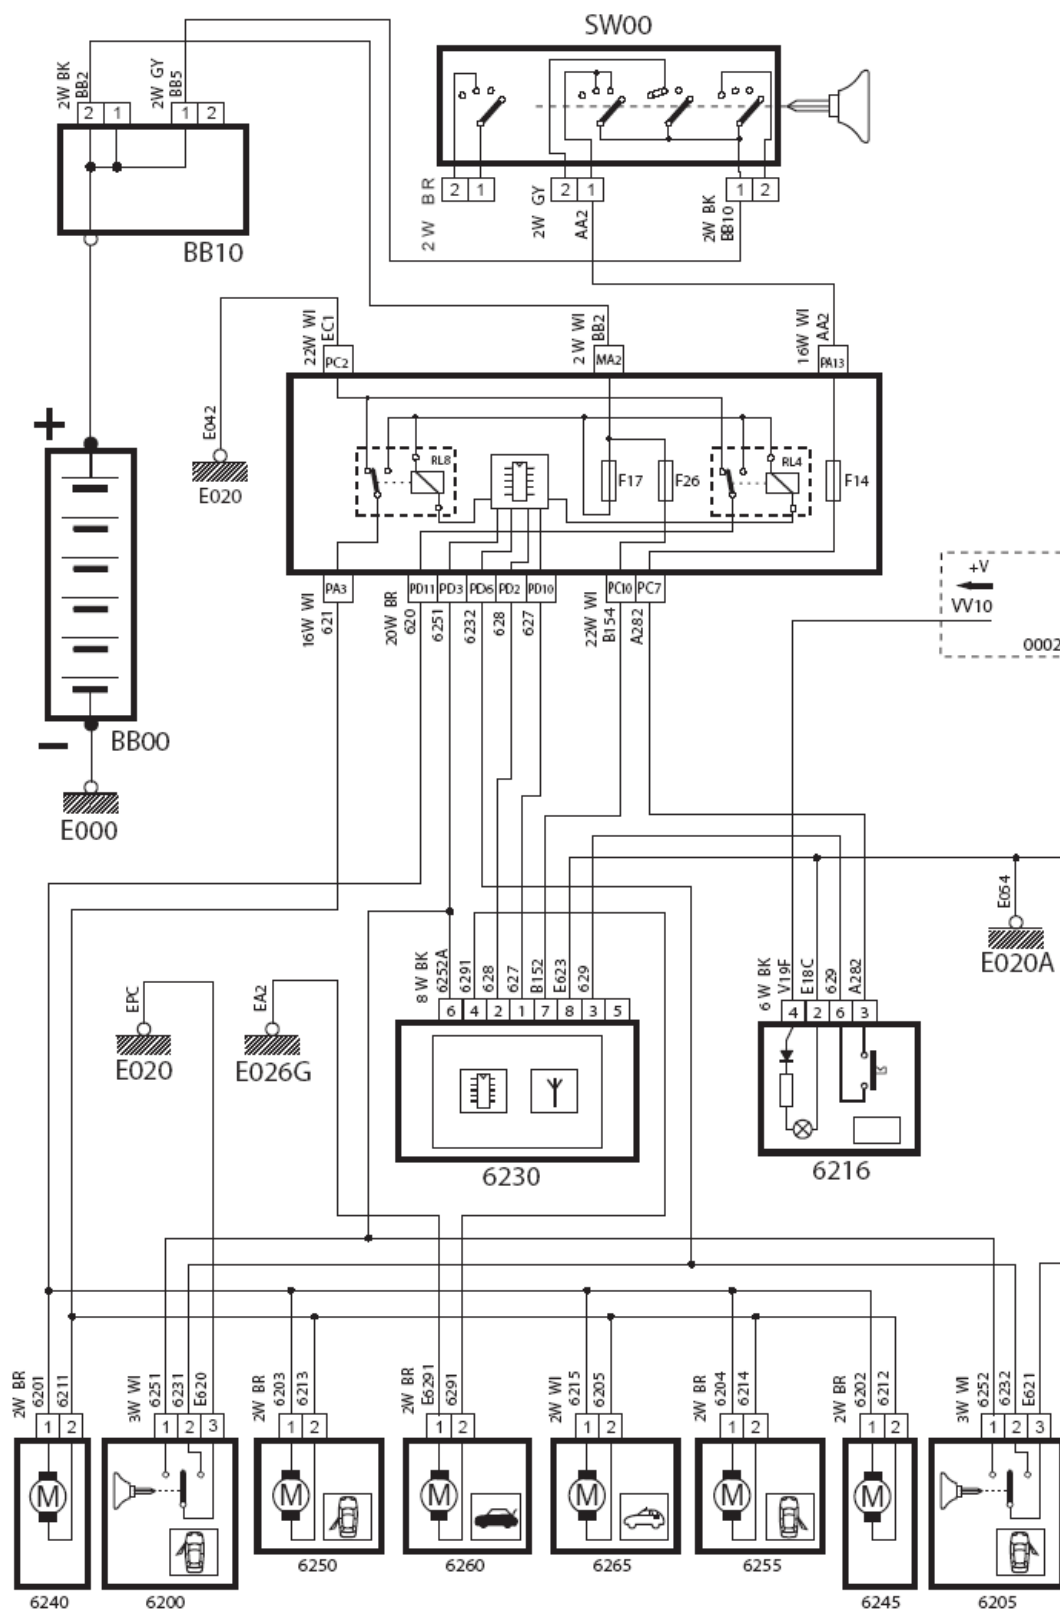


The diagram illustrates the electrical system for a vehicle, showing the following components and their connections:

- Battery (E000):** Connected to the positive terminal of the fuse block (BB00).
- Fuse Block (BB00):** Contains fuses for various circuits, including a 2W GY BB5, 2W BK BB8, and 2W BK BB2.
- Horn (SW00):** Connected to the 2W BK BB10 fuse.
- Central Control Unit (C.C.U.):** Contains a 2W WI BB2, 16W WI AA2, 8W WI BB4, and 2W WI MA2. It is connected to the 2W GY BB5, 2W BK BB8, and 2W BK BB2 fuses.
- Multi-Switch Unit (0002):** Controls various functions (Horn, Headlights, Fog Lights, Turn Signals, etc.) and is connected to the 2W WI BB2, 16W WI AA2, 8W WI BB4, and 2W WI MA2 fuses.
- Fuel Pump (8100):** Connected to the 3W WI B16 and 3W WI E810 fuses.
- Fuel Filter (E045):** Connected to the 3W WI B16 and 3W WI E810 fuses.
- Fuel Gauge (3053):** Connected to the 1W BK W8 fuse.


P2-ELE-SCH-0067-01

Heating And Ventilation(Air Conditioning)

06/06/2009

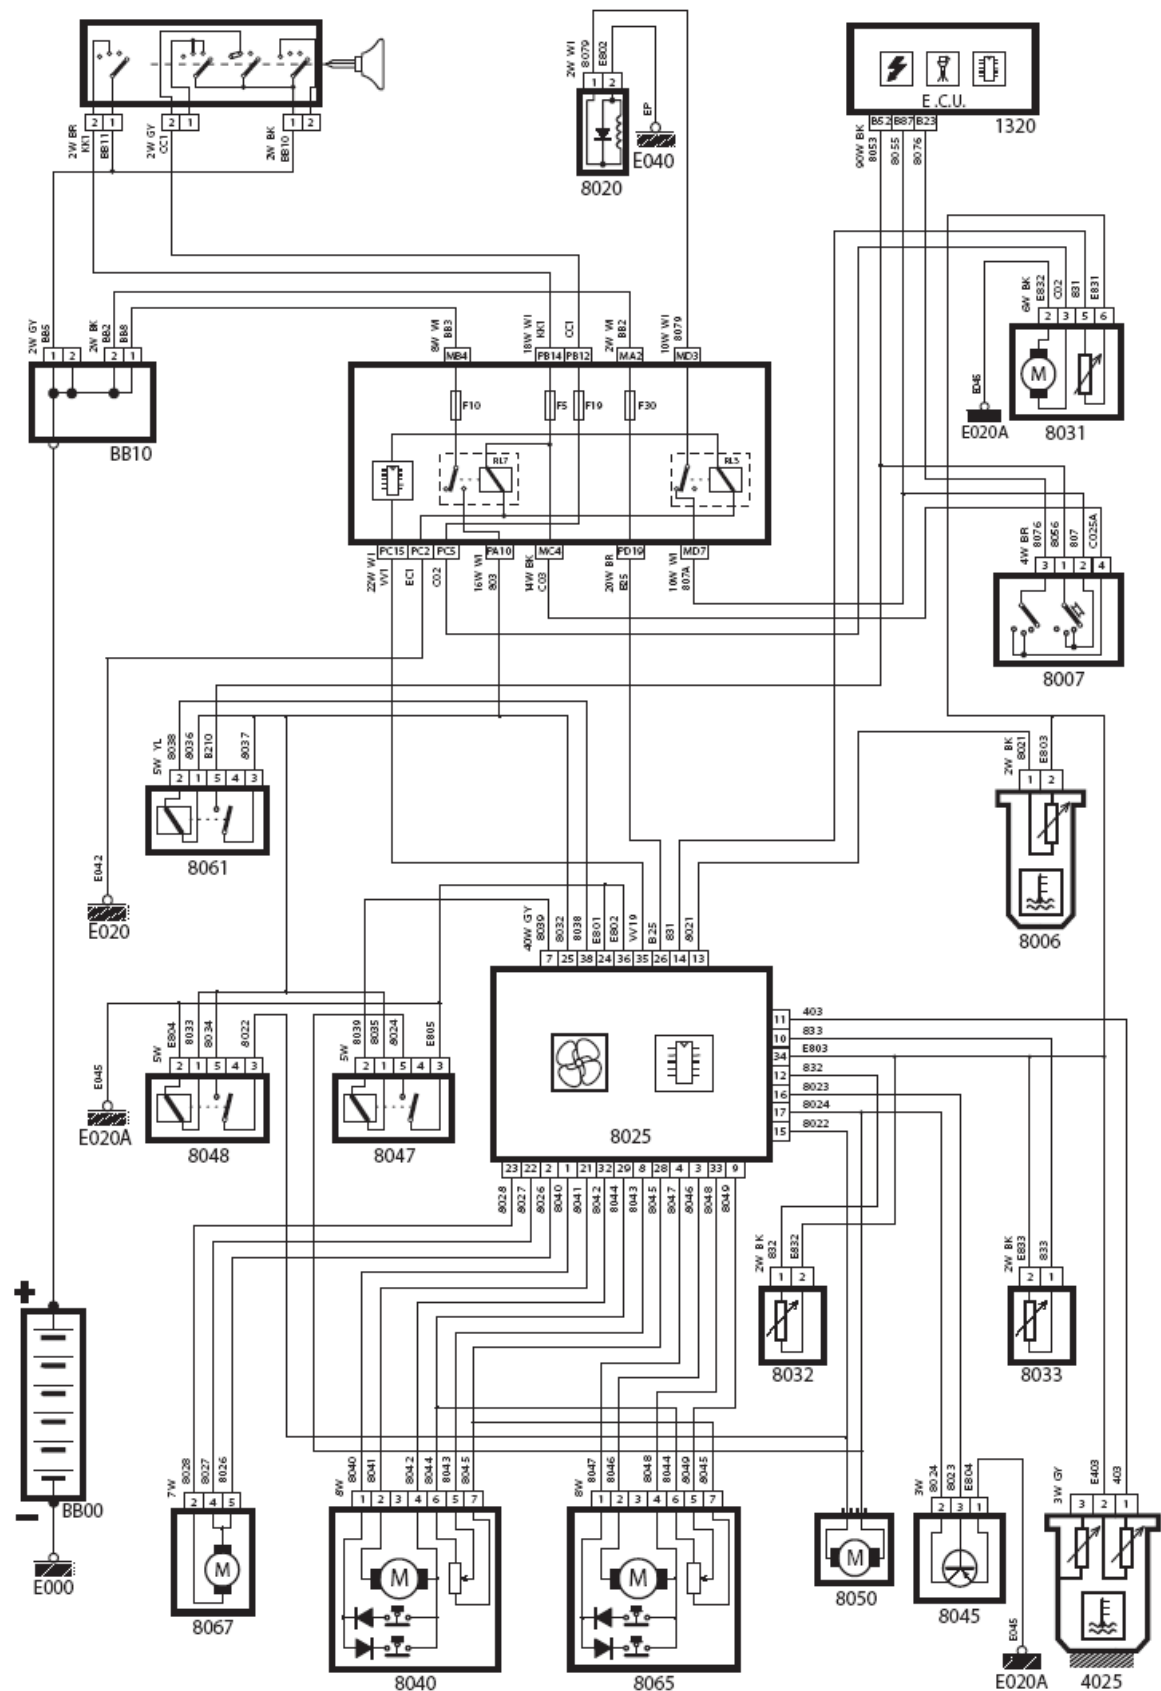

P2-ELE-SCH-0068-01	Heater Mirrors And Rear Screen Soren ELX	06/06/2009
--------------------	--	------------

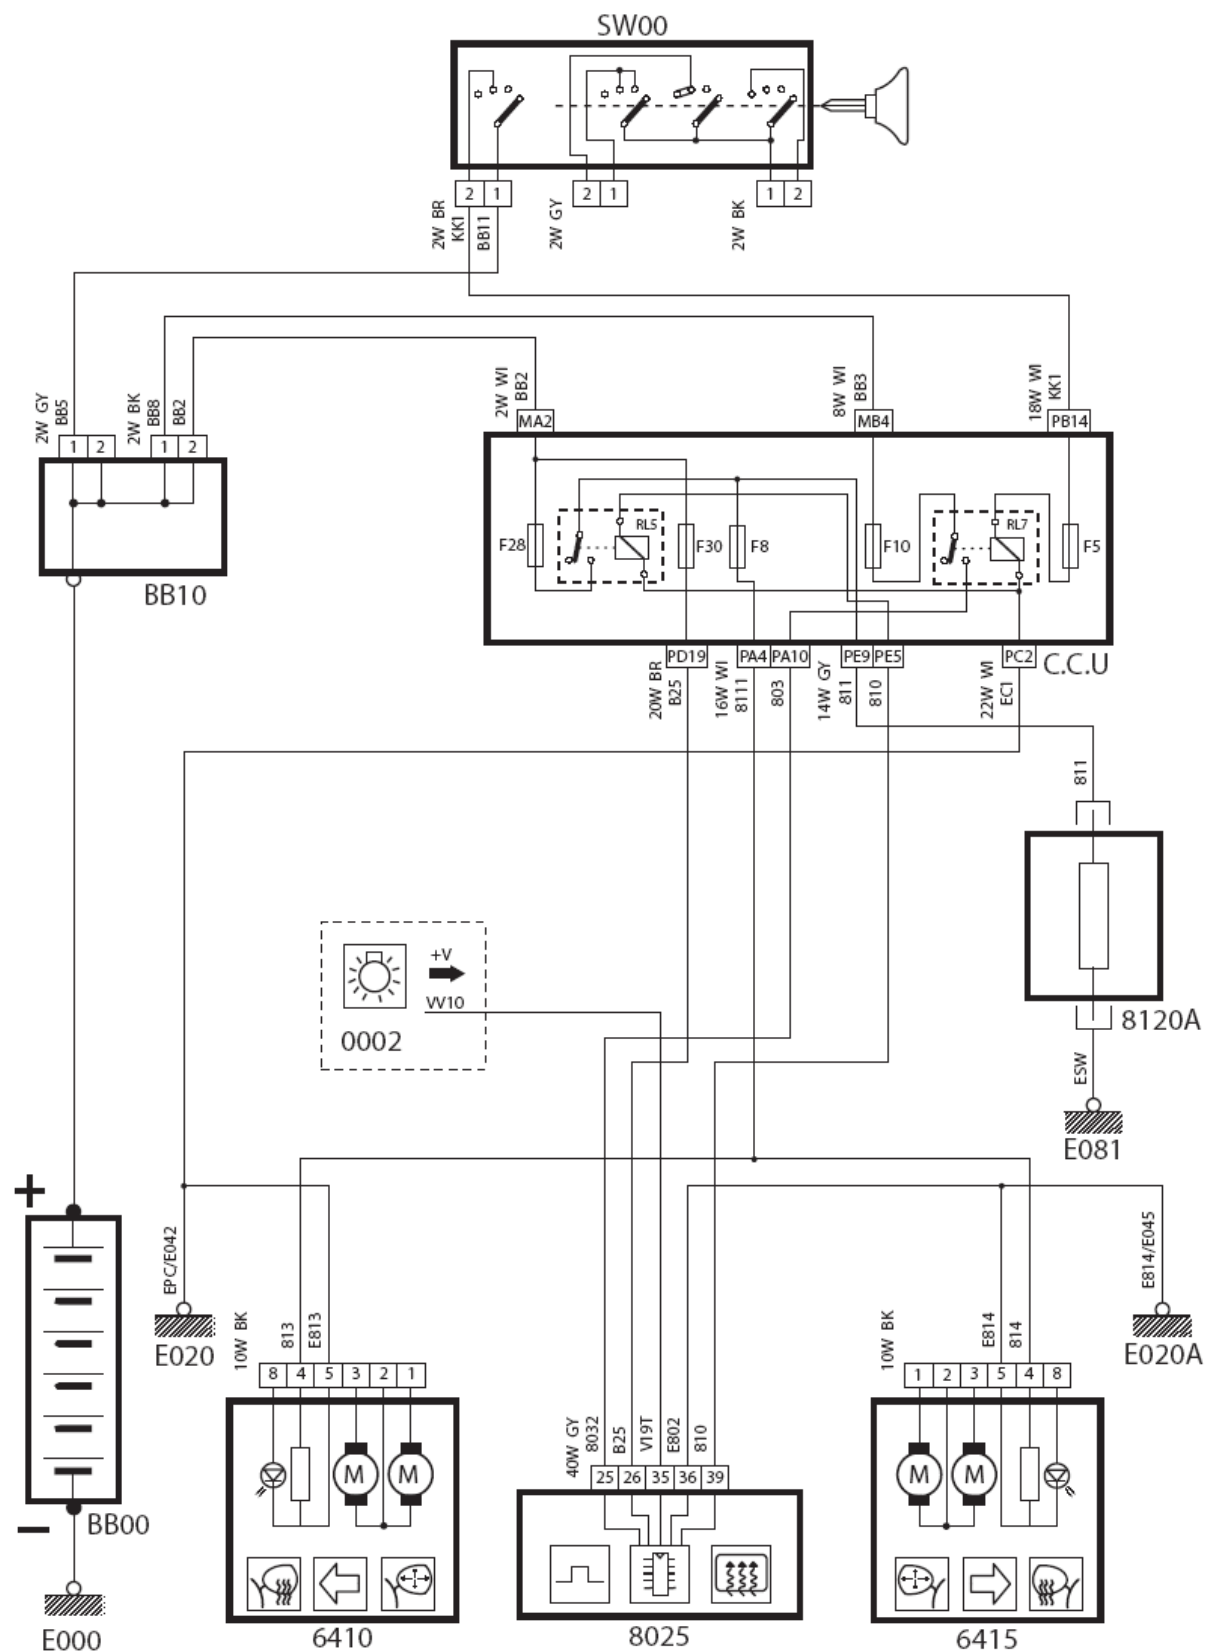


The diagram illustrates the electrical system for the 0004 vehicle. Key components and their connections are as follows:

- Battery (BB00):** Connected to ground (E000) and provides power to the system.
- SW00 (Switch):** Controls the speaker and is connected to the battery and ground.
- C.C.U. (Control Unit):** Receives signals from various sensors and controls the speaker and other components.
- Sensors/Actuators:**
 - BB10:** 2W GY BB10 sensor connected to the C.C.U.
 - C001:** 16W BK 6520 sensor connected to the C.C.U.
 - E020A:** 16W BK 6520 sensor connected to the C.C.U.
 - E027:** 16W BK 6520 sensor connected to the C.C.U.
 - E811:** 16W BK 6520 sensor connected to the C.C.U.
 - 6565:** 2W YL 6500/6501 sensor connected to the C.C.U.
 - 6575:** 2W YL 650/651 sensor connected to the C.C.U.
 - 4730:** 2W WI 475/E475 sensor connected to the C.C.U.
 - 6576:** 2W YL 652/653 sensor connected to the C.C.U.
 - 6564:** 2W GY 6510/6511 sensor connected to the C.C.U.
 - 6571:** 4W BK 655/654 sensor connected to the C.C.U.

P2-ELE-SCH-0071-01

Front Fog Lamps & Rear Fog Lamp Samand 86


06/06/2009

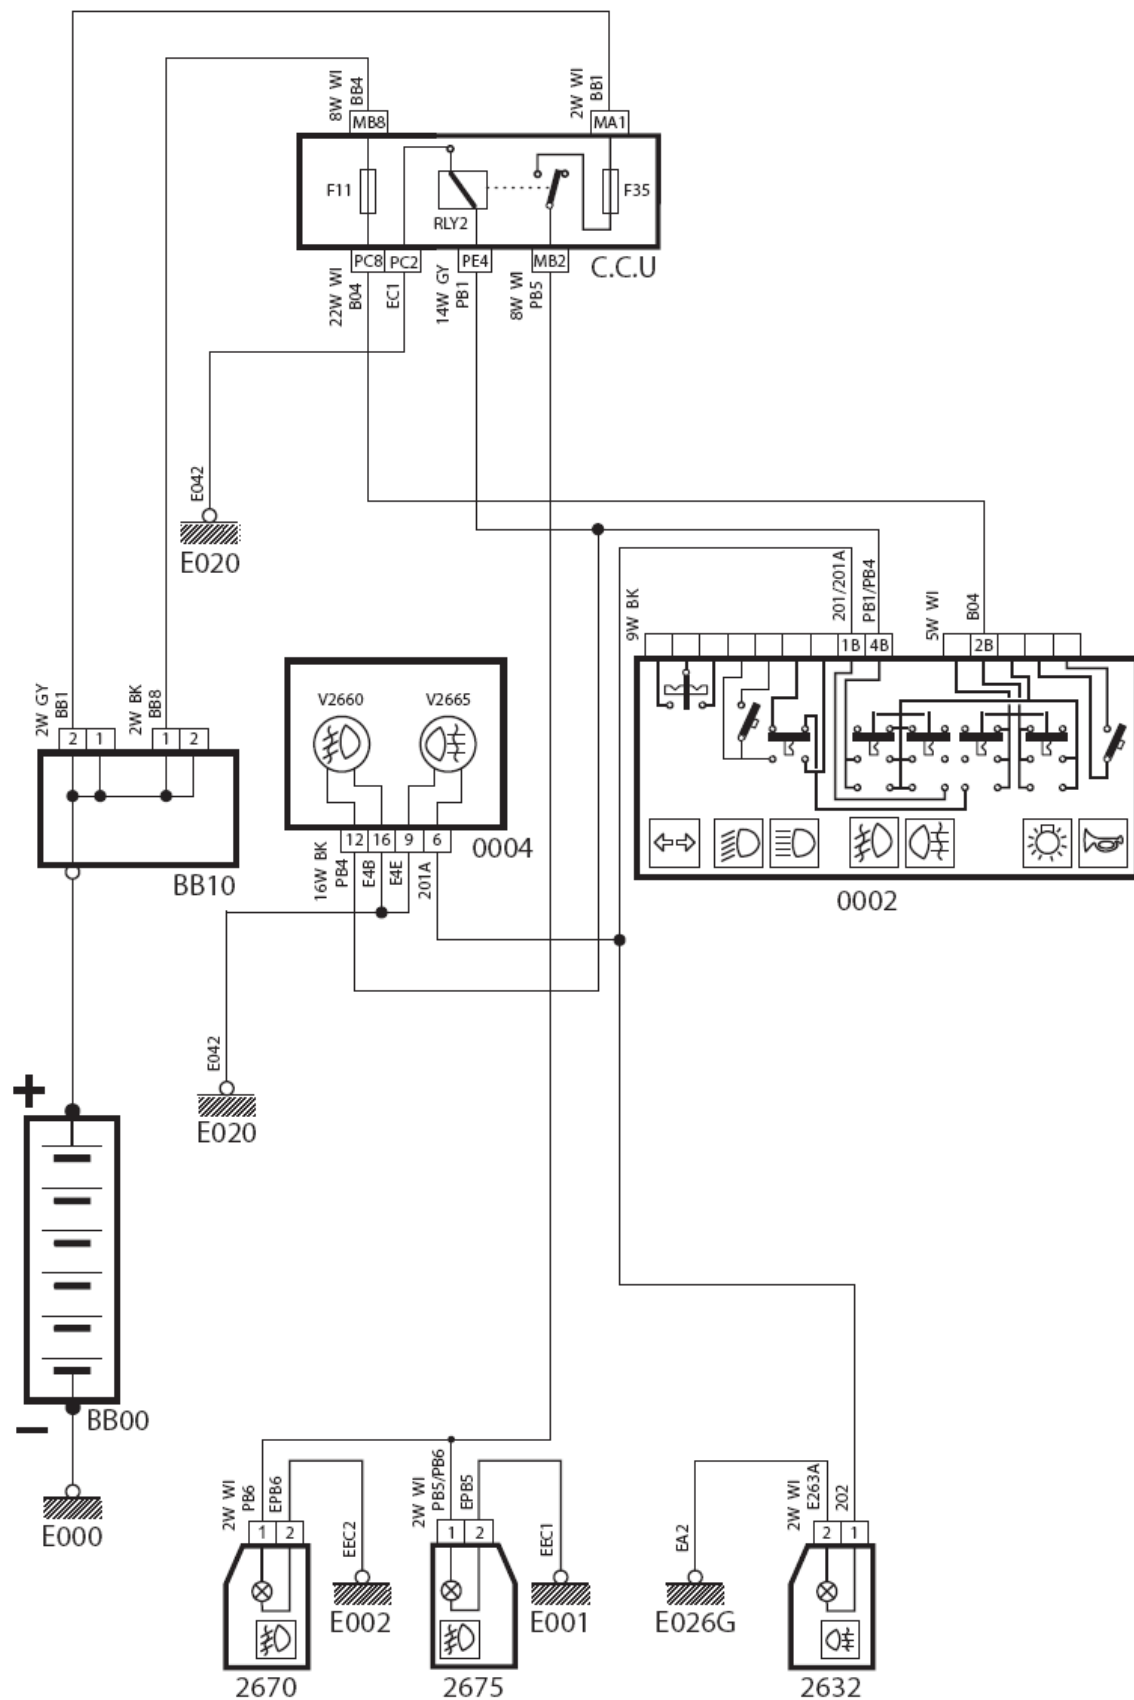

P2-ELE-SCH-0072-01

Power Window Front Soren ELX


06/06/2009

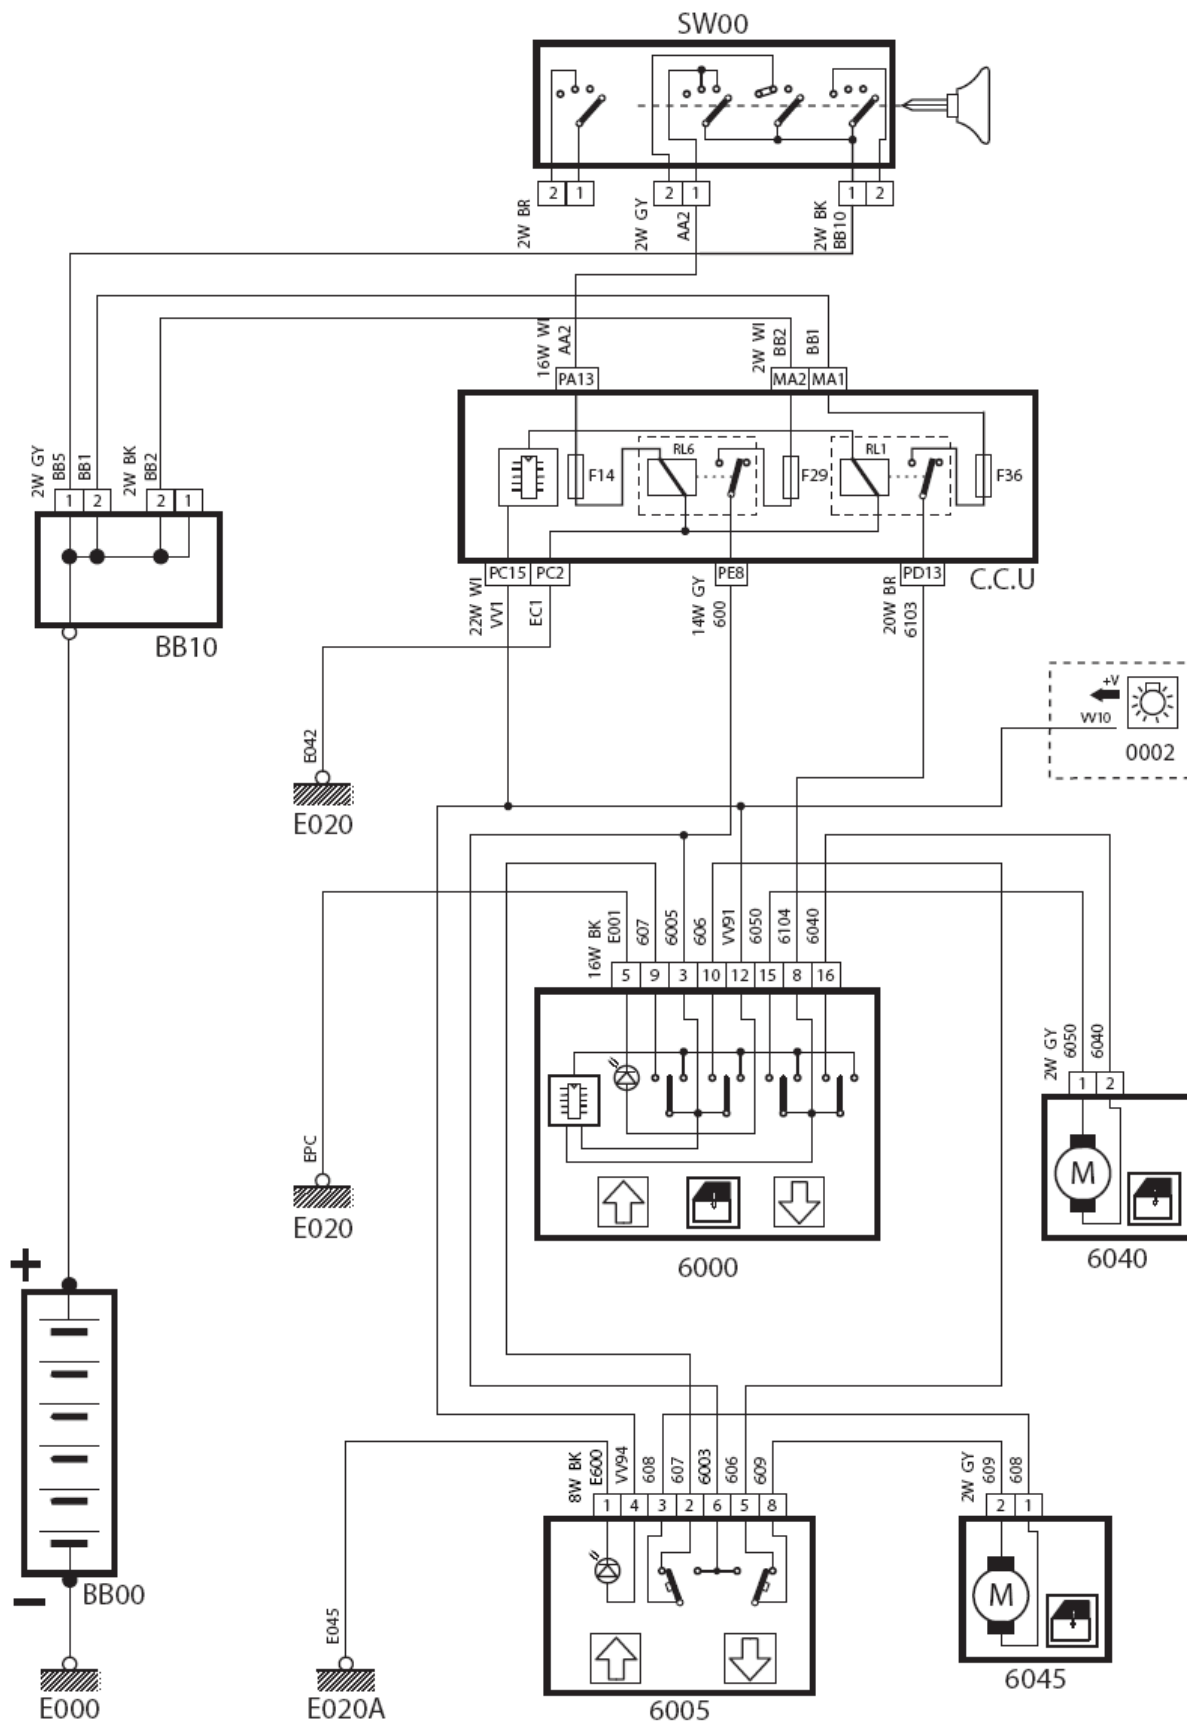


P2-ELE-SCH-0073-01

Power Window Rear Soren ELX

06/06/2009

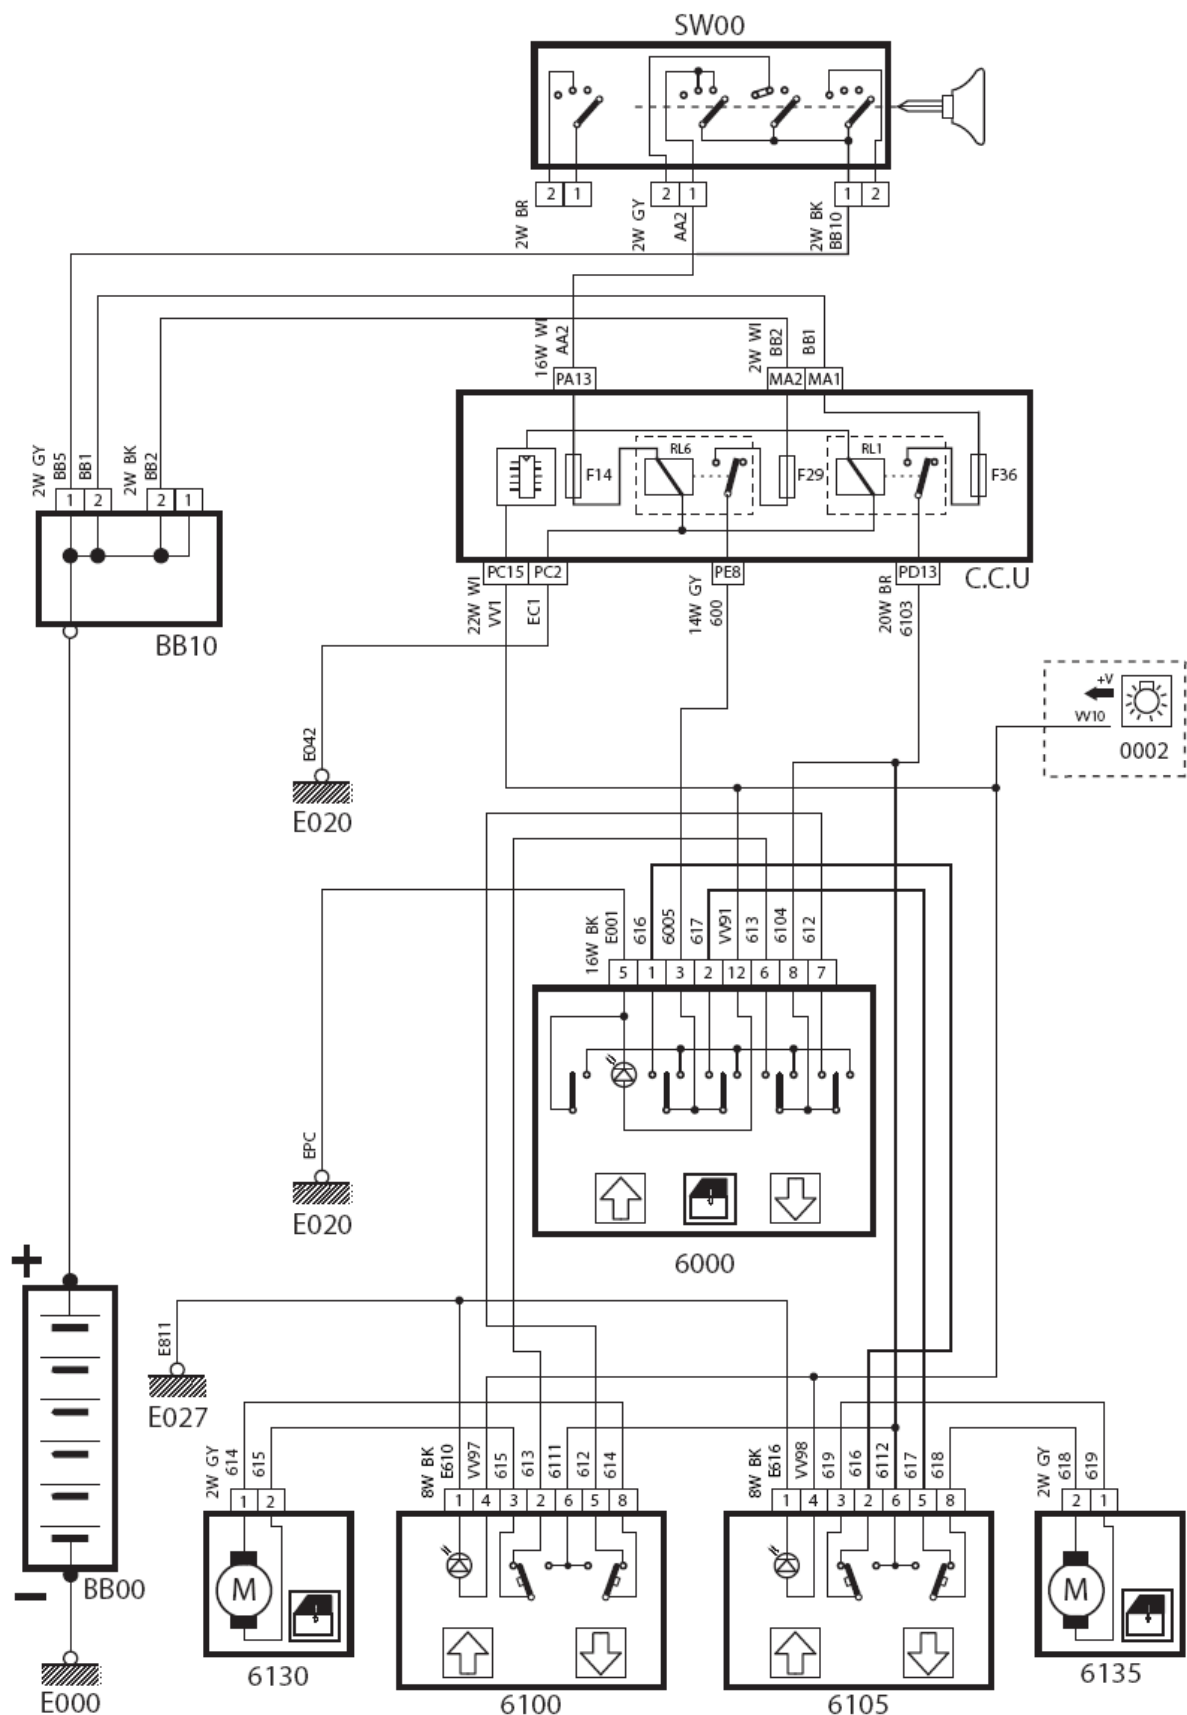


P2-ELE-SCH-0074-01	Said Lamps Samand Soren	06/06/2009
--------------------	-------------------------	------------

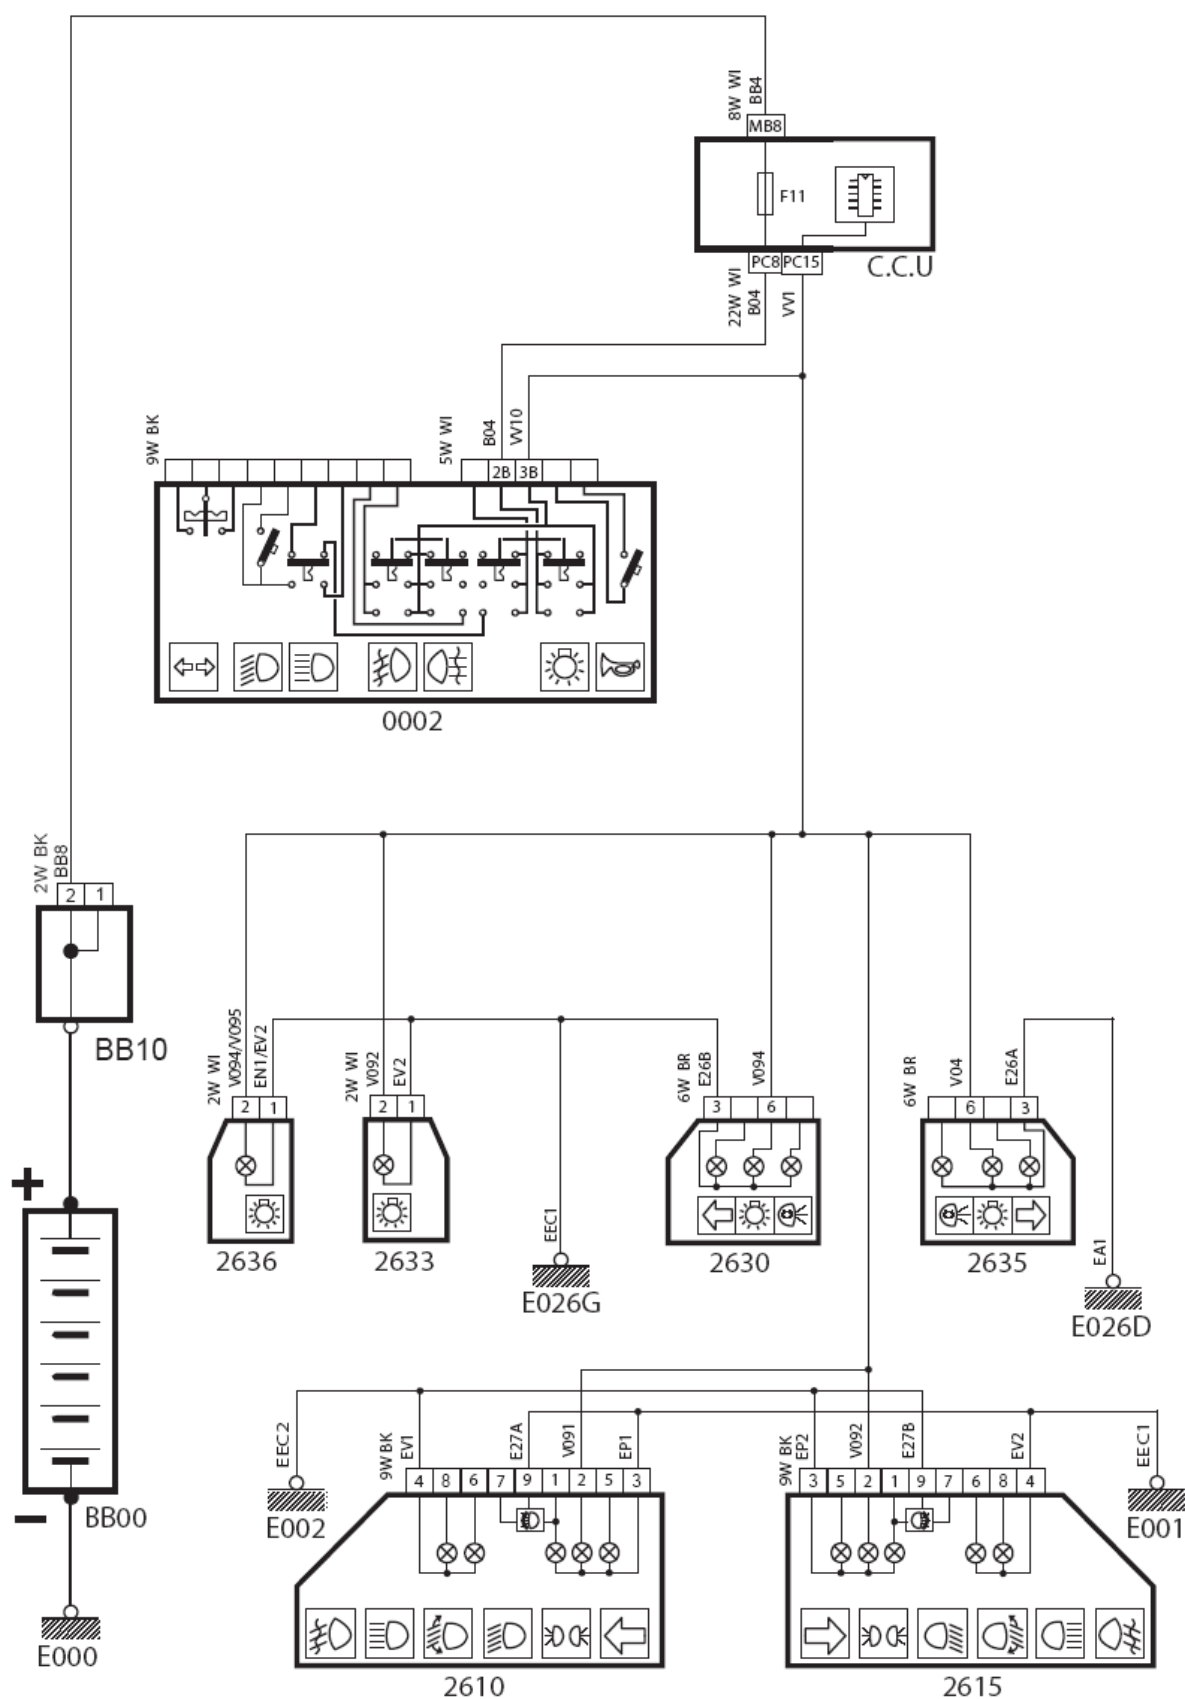


P2-ELE-SCH-0075-01

Door Lamps Samand Soren

06/06/2009

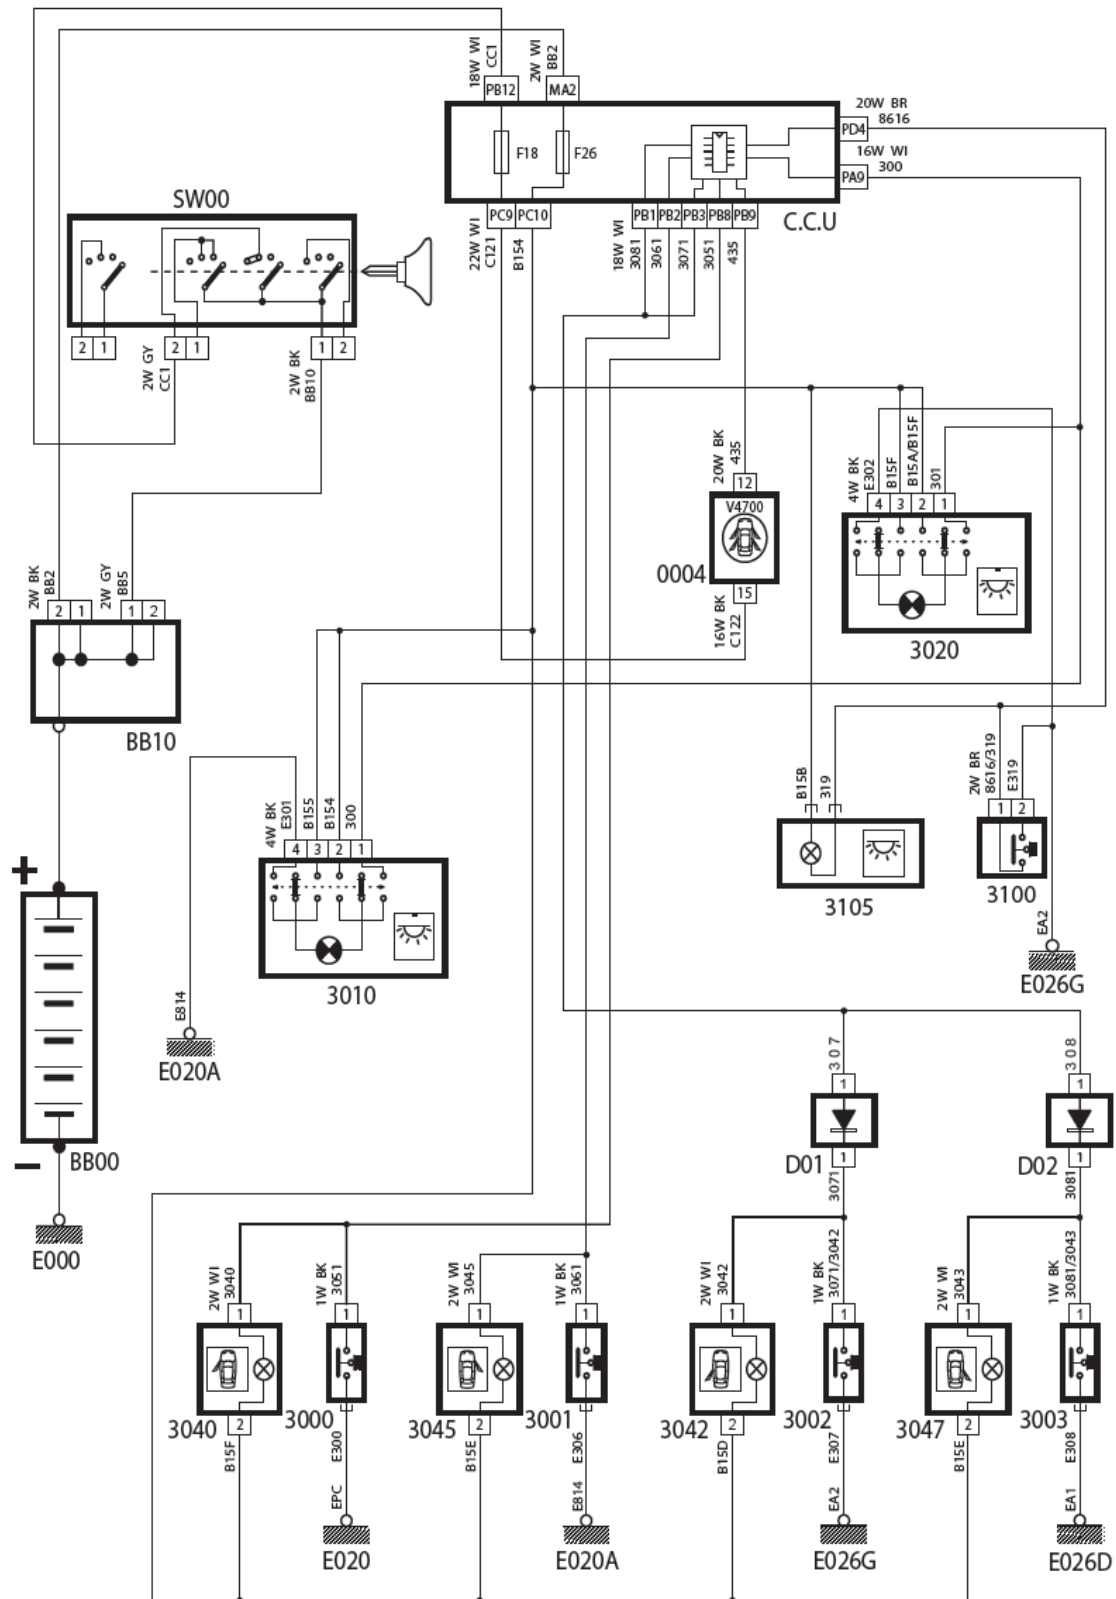


P2-ELE-SCH-0076-01	Starter and Alternatuor Samand Soren	06/06/2009
--------------------	--------------------------------------	------------

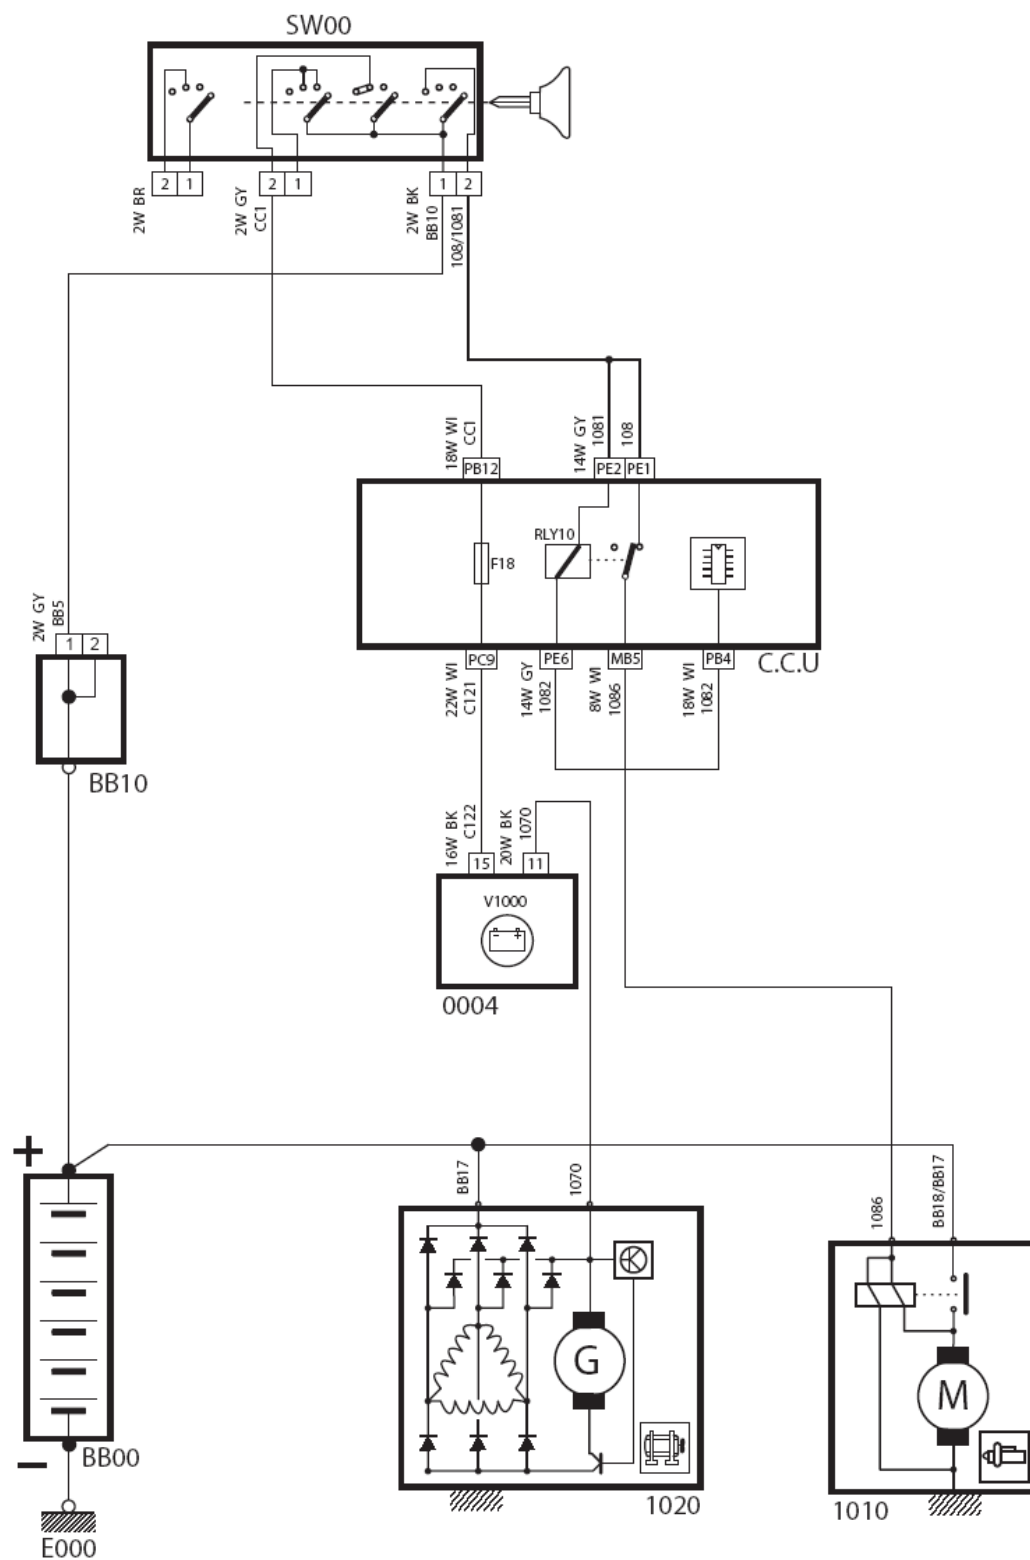

P2-ELE-SCH-0077-01

Electric Mirrors Soren ELX

06/06/2009

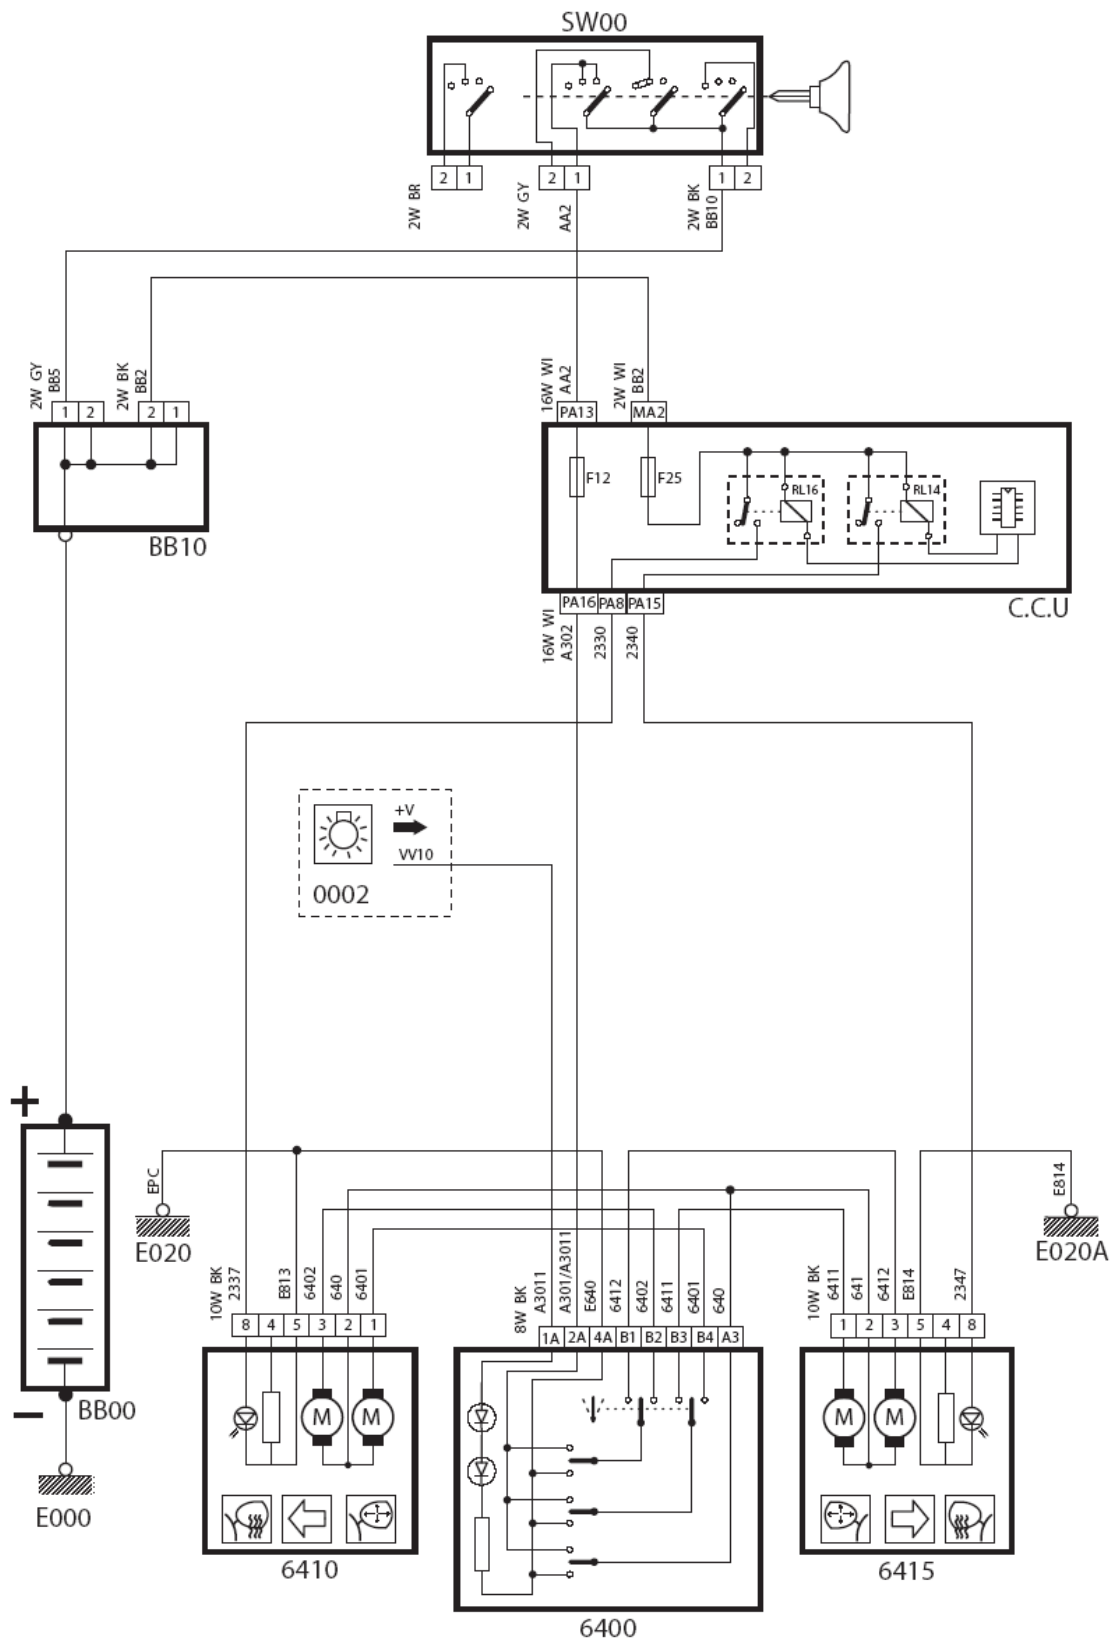

امیدواریم این فایل آموزشی برای شما مفید بوده باشد.

برای مشاهده و دانلود همه فایلها و فیلمهای اختصاصی به وب سایت گروه
چراغ چک ملحق شوید.



انجمن تخصصی آموزش تجهیزات تعمیرگاهی خودرو

چراغ چک



www.CheraghCheck.ir



www.Telegram.me/CheraghCheck



www.Aparat.Com/CheraghCheck.ir